



Motorola California Mobile Phone Rear Casing Replacement

This guide will walk through the replacement of the California Mobile Phone's Rear Casing.

Written By: Andrew Lam



INTRODUCTION

This guide requires minimal teardown and can be used to replace the plastic back case of the device.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Rear Casing




- Remove the battery by sliding it down the rails to which it is connected.

Step 2



- Find a flat head or Phillips head screwdriver.
- Insert the screwdriver into the holes in the plastic rod connecting the key pad guard to the rear casing.
- Use the screwdriver to push the rods towards each other until they click out of their locked position.
- ⓘ Note: This may require a large amount of force.

Step 3

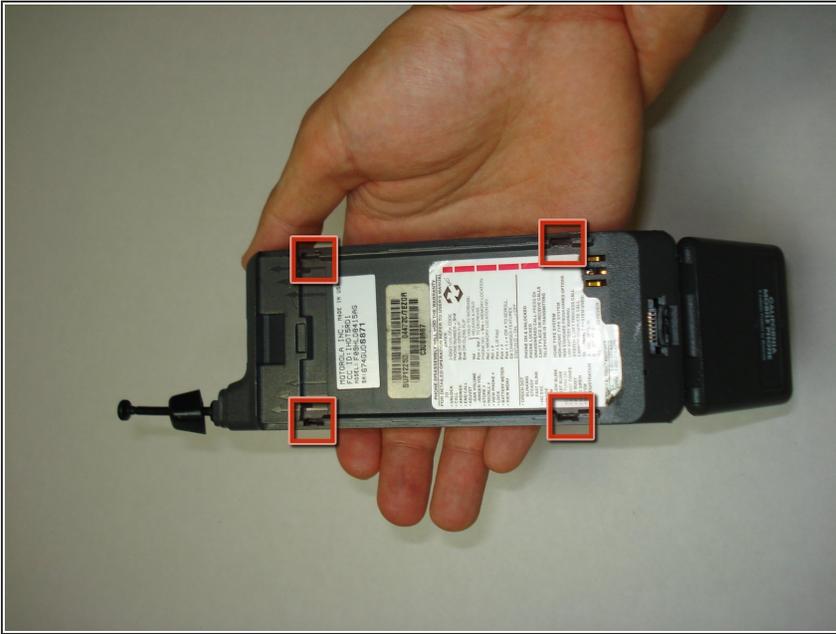

- Slide off the antenna guard and locate the four clips on the exterior of the rear casing.
- Simultaneously push the clips outward while lifting the old rear casing away from the rest of the device.

Step 4



- Locate the four holes on the new rear casing.
- Align the holes in the new rear casing with the clips attached to the front casing.
- Simultaneously insert all four clips.
- Push down firmly until you hear the clips click into place.

Step 5



- Find a thin and sturdy screwdriver.
- Insert the screwdriver into the holes in the plastic rod connecting the new key pad guard to the rear casing.
- Use the screwdriver to push the rods away from each other until they click into their locked position.
- ⓘ Note: This may require a large amount of force.

To reassemble your device, follow these instructions in reverse order.