

DIMENSION[®] PBX
FEATURE TEST
2 PARTY HOLD/SERIAL CALLING

CONTENTS

- | | |
|-------------------|---------------------------------------|
| 1. GENERAL | 4. TEST SET-UP |
| 2. RECORDS | 5. SERIAL CALL WITH AN INCOMING TRUNK |
| 3. TEST EQUIPMENT | 6. RESTORATION |
-
1. GENERAL
- 1.1 This section provides testing information for 2 Party Hold/Serial Calling.
- 1.2 Serial Calling allows the attendant to complete an incoming trunk call to two or more station lines in succession without requiring the called station to recall the attendant. This feature is implemented through the use of the two Party Hold feature.
2. Records
- 2.1 Form SD-97-1313 is required for recording the results of these tests.
3. TEST EQUIPMENT
- 3.1 Test Equipment
- Console
- 2 500 Type Telephone Sets (Dial Pulse)
or
2500 Type Telephone Sets (Touch Tone)
4. TEST SET-UP
- 4.1 Connect telephone sets to station lines with class of service allowing incoming calls and station to station calls. These telephone sets will be referred to as Station A and Station B in the test procedure.
5. SERIAL CALL WITH AN INCOMING TRUNK
- 5.01 Place an incoming call to the attendant.
- 5.02 Attendant answers call and calling party requests a Serial Call. First party requested is Station A.
- 5.03 At console depress START key.
- 5.031 Dial tone received. Split indicator lamp lights and calling party is split from the attendant.
- 5.04 At console dial Station A.
- 5.041 Ring indicator lamp lights. Audible ring-back tone is provided to the attendant and Station A rings.
- 5.05 At Station A go off-hook.
- 5.051 Talk path established between Station A and the attendant. Attendant announces the call.
- 5.06 At console depress HOLD key.
- 5.061 HOLD and PA indicator lamps light. Talking path is established between Station A and calling party.
- 5.07 Station A goes on-hook.
- 5.071 Timed reminder is activated and within 30 seconds the HOLD lamp flashes at the console.
- 5.08 At console depress the associated LOOP key.
- 5.081 Attendant and calling party are connected. Calling party requests Station B.
- 5.09 At console extend call to Station B and announce call.
- 5.091 Console and Station B connected.
- 5.10 At console depress HOLD key.

PRIVATE

THE INFORMATION CONTAINED HEREIN SHOULD NOT BE DISCLOSED TO UNAUTHORIZED PERSONS. IT IS MEANT SOLELY FOR USE BY AUTHORIZED BELL SYSTEM EMPLOYEES. Printed in U.S.A.

5.101 Talk path established between calling party and Station B. HOLD and PA indicator lamps light.

5.11 Calling party and Station B hang up.

5.111 At console HOLD indicator lamp is extinguished. Loop is now idle and available for additional traffic.

6. RESTORATION

6.1 Disconnect telephone sets.

Manager, Denver PBS PECC

Attachment:
Figure 1, Page 3

2 PARTY HOLD/SERIAL CALLING

INCOMING TRUNK

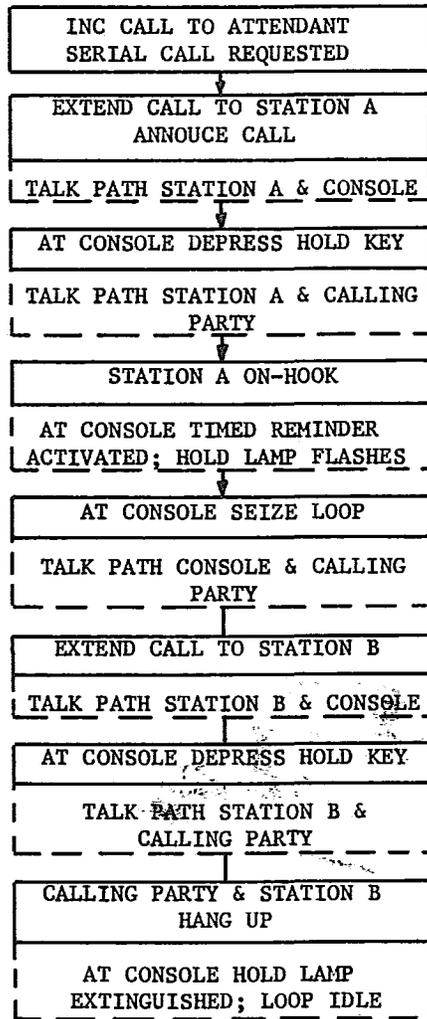


FIGURE 1