


SERVICE

533A/B TELEPHONE SETS

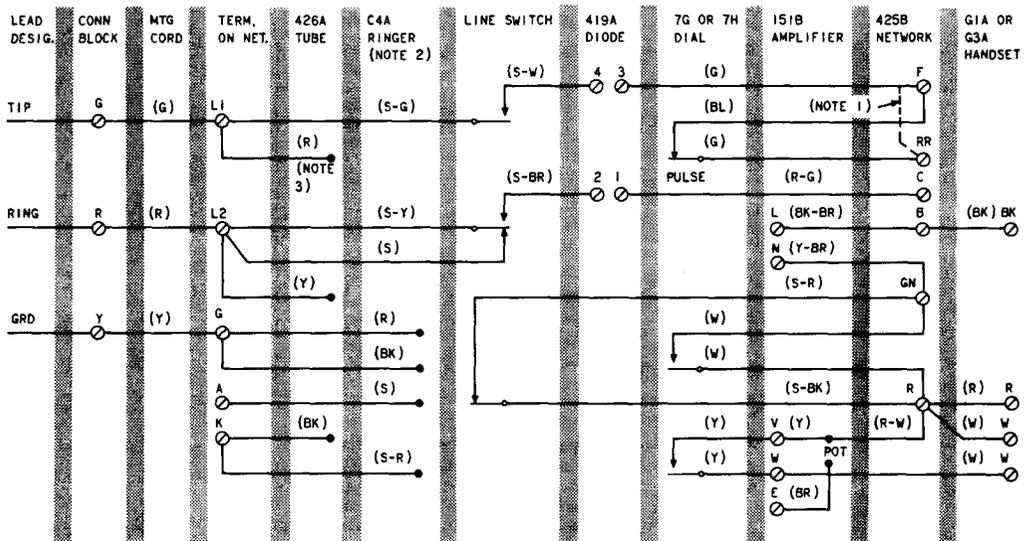

NOTES:

1. GREEN DIODE LEAD IS CONNECTED TO F TERMINAL IN DIAL SETS AND TO RR TERMINAL IN MANUAL SETS.
2. NEGATIVE RING PARTY CONNECTIONS ARE SHOWN. SEE TABLE A FOR OTHER CLASS OF SERVICE CONNECTIONS.
3. FOR NEGATIVE STATIONS IN OFFICES WITHOUT ANI, (R) LEAD FROM 426A TUBE MAY BE CONNECTED TO G TERMINAL, IF RINGER OPERATION IS MARGINAL.

Fig. 1—533A/B Telephone Set, Connections

TABLE A
LINE AND RINGER CONNECTIONS
533A, B TELEPHONE SETS

WIRE OR LEAD		COLOR	NEGATIVE (-) AND POSITIVE (+) PARTIES*	
			(-) RING	(+) RING
Mtg Cord	Ring	R	L2	L2
	Tip	G	L1	L1
	Grd	Y	G	G
Ringer Leads†		R	G	L2
		BK	G	L2
		S	A	A
		S-R	K	K
426A Tube Leads		R	L1	L2
		BK	K	K
		Y	L2	G

* Reverse tip and ring for negative (-) and positive (+) tip party connections.

† To silence ringer permanently; remove R ringer lead and insulate and store.