



Dell Inspiron 600m LCD Replacement

This guide will walk you through replacing your Dell Inspiron 600m LCD screen.

Written By: Alex Klimaj



INTRODUCTION

You will need a Philips screwdriver, an anti-static wrist strap, and a wedge type tool such as a flat-head screwdriver. This guide will walk you through how to replace the LCD screen on your Dell Inspiron 600m.

TOOLS:

- [Anti-Static Wrist Strap](#) (1)
- [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

PARTS:

- [Dell Inspiron 600m LCD Screen](#) (1)

Step 1 — Battery





- Push in the tab on the battery and lift up. The battery should detach very easily.

Step 2 — LCD



- Locate the rubber dots on the plastic around the lcd panel.
- Use your fingernails or a flat-head screwdriver to remove the rubber dots around the screen by pushing any direction on them.
- Underneath the rubber dots will be screws. Remove them with the #00 screwdriver.

Step 3

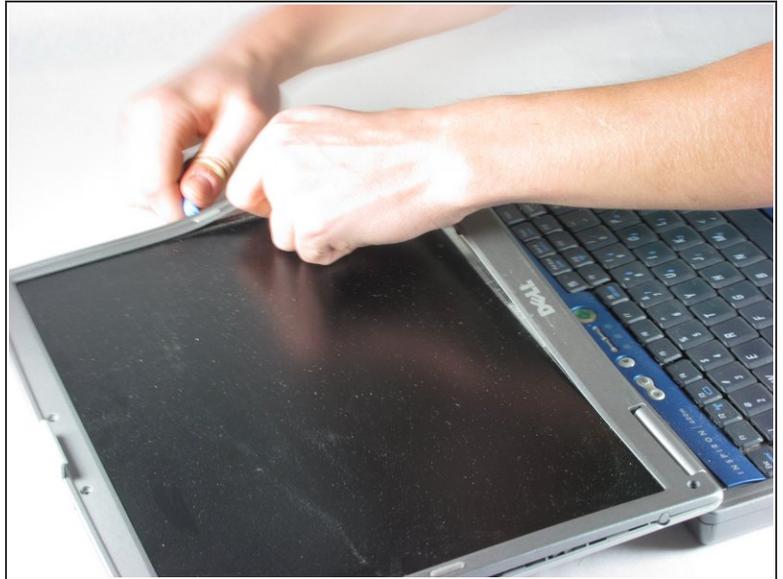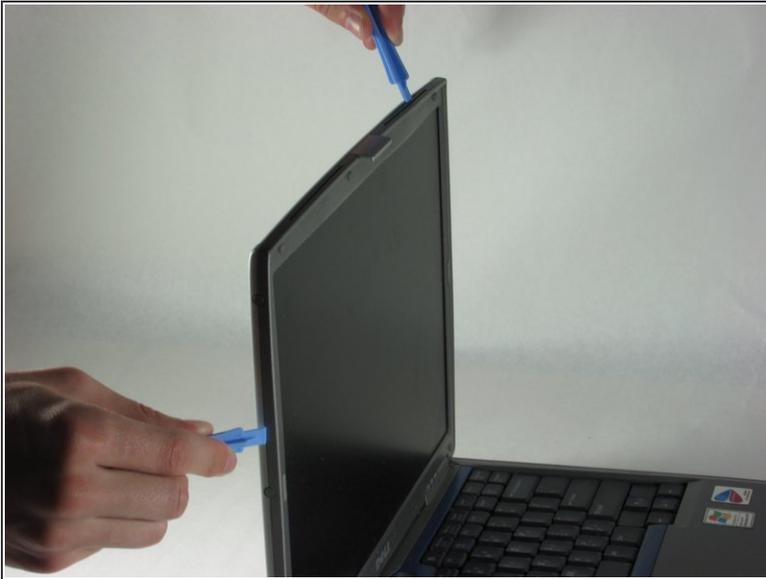

- After removing the screws under the rubber dots, use your plastic opening tool to un-clip the plastic around the screen.
- There are clips about every inch around the right, left, and top of the plastic. Be sure that all of them are unclipped.

Step 4



- Lift the plastic around the screen off after it is un-clipped by pulling straight up on it.
- ⓘ The bottom part of the plastic is a little sticky.

Step 5



- Underneath the plastic around the edge, there are 2 screws on each side. Remove them with a Philips #00 screwdriver.
- ⓘ The middle screw does not need to be removed.

Step 6



- After all the screws around the edge have been removed, lift the LCD panel off of the base.
- ⚠ The LCD is still attached to the computer. Do not pull too hard or you could break the cable.

Step 7



- Flip the LCD panel over.
- ⚠ Do not touch on or near the back of the panel where it says "Don't Touch". LCD panels contain mercury which is hazardous to humans.
- Remove the cable by squeezing each side of the connector and gently pulling straight out.

Step 8



- Remove the cable at the base of the laptop by pulling up on the tab attached to the cable.

To reassemble your device, follow these instructions in reverse order.