



Dell Vostro V13 Sound Card Replacement

This is a guide on how to replace the sound card of the Dell Vostro V13.

Written By: Patrick Swaney




INTRODUCTION

You can follow these steps to replace the sound card in your Dell Vostro V13. Be sure to power down, unplug and also back-up your laptop in order to prevent injury and loss of data.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #1 Screwdriver](#) (1)

Step 1 — Back Cover

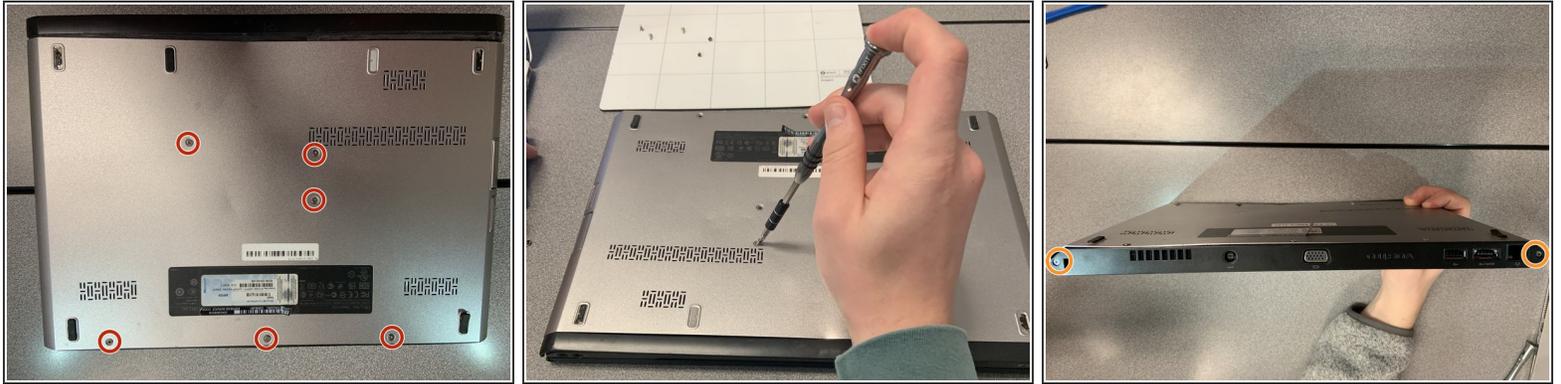

⚠ Back up the memory to an external drive and power off the laptop before starting.

- Flip the laptop over so the vents are facing you.
- Remove the six 5.0 mm Phillips #1 screws using the magnetic driver.
- Remove the two 5.0 mm Phillips #1 screws on the back side of the laptop.

Step 2




- Slide out the SD and MicroSD holders.
- i** If you are having trouble sliding them out, use the plastic opening tool.

Step 3




- Slide the plastic opening tool around the perimeter of the laptop until the cover pops off.
- Pull the back cover off.

Step 4

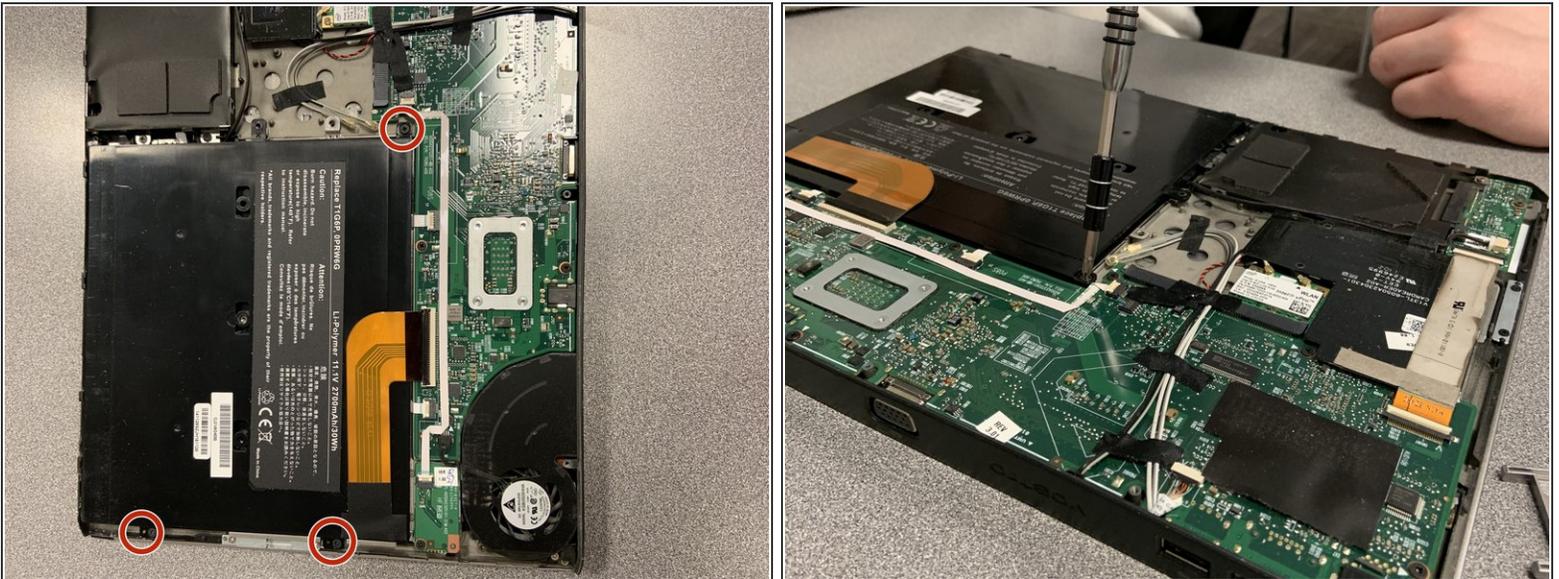


- Remove the three black 3.9 mm Phillips #1 screws holding the battery in place.

Step 5

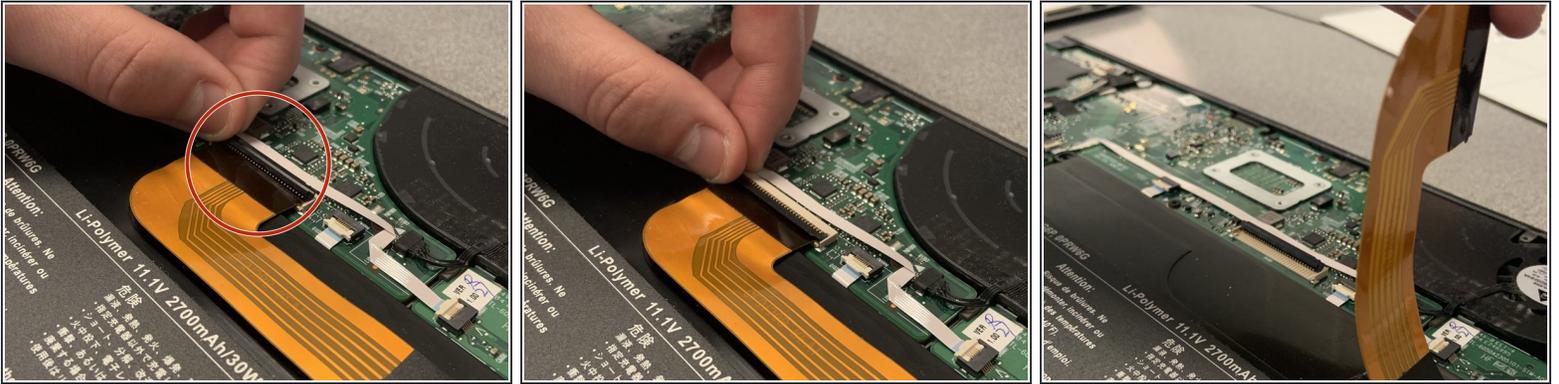


- Flip up the clip of the ribbon connector.
- Pull the strip out to disconnect the battery.

Step 6

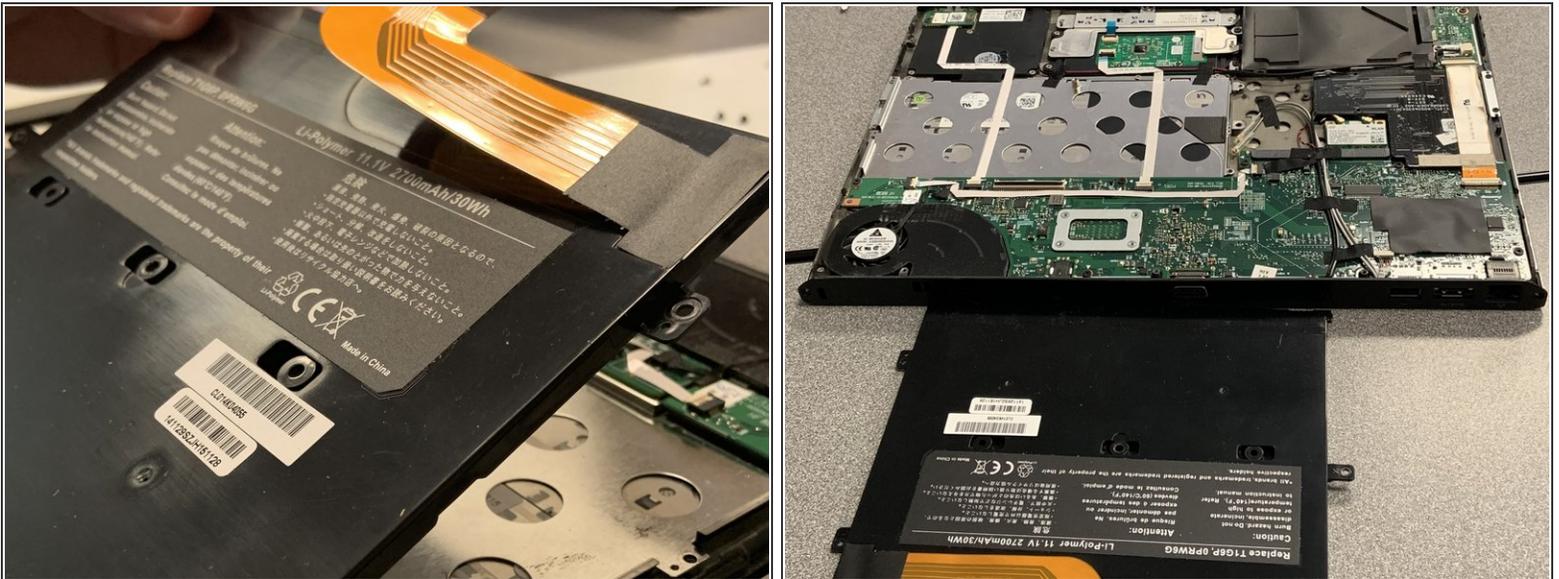


- Remove the battery.
- ⓘ Removing the battery allows you to work safely.

Step 7 — Sound Card

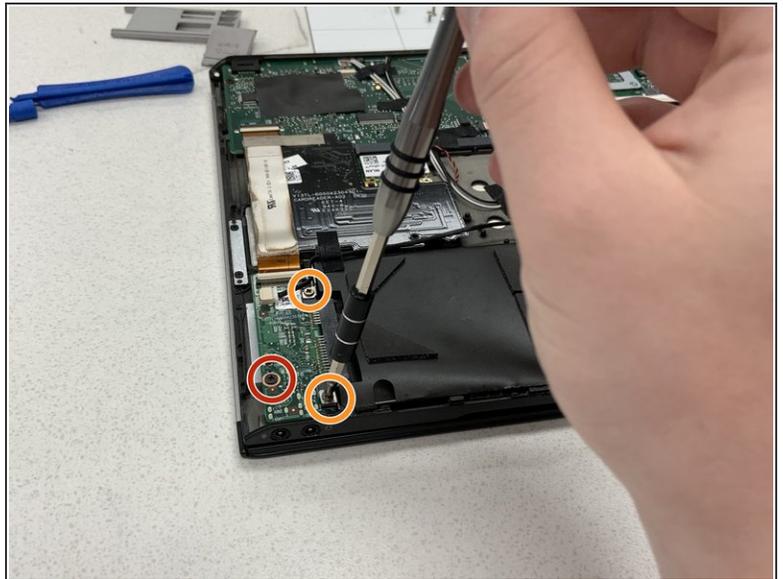


- Remove the black 3.0 mm Phillips #1 screw.
- Remove the two 5.1 mm silver Phillips #1 screws.

Step 8

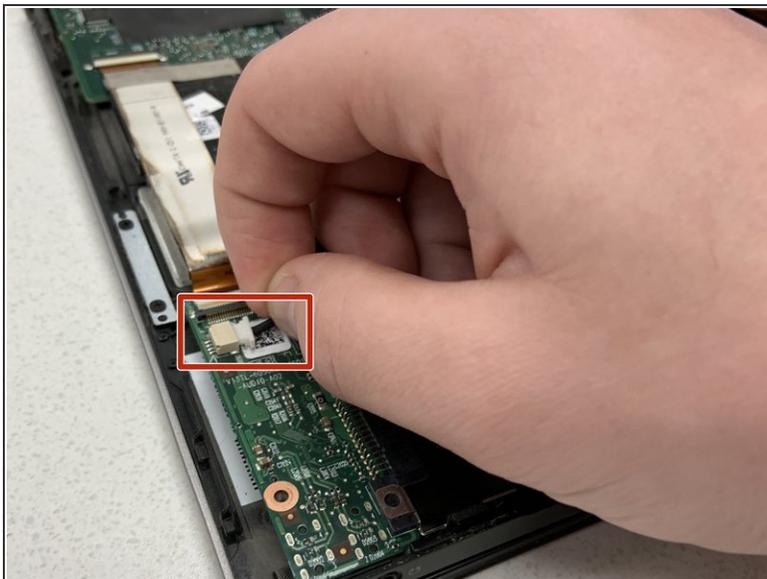

- Disconnect the white plug on the top left corner of the sound card.

Step 9

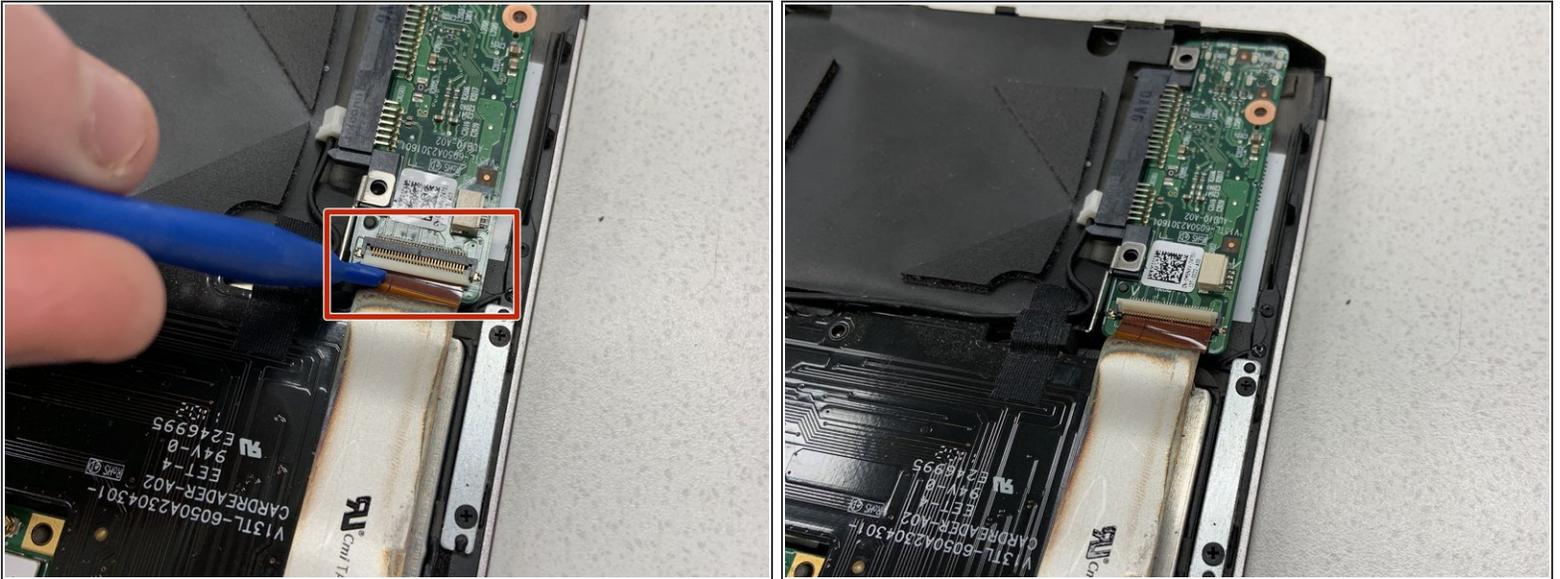

- Use the plastic opening tool to flip the ribbon connector up.

Step 10



- Pull the sound card out of the laptop.

To reassemble your device, follow these instructions in reverse order.