




Gateway 600YG2 CPU Replacement

removal of CPU

Written By: Elizabeth Mazer

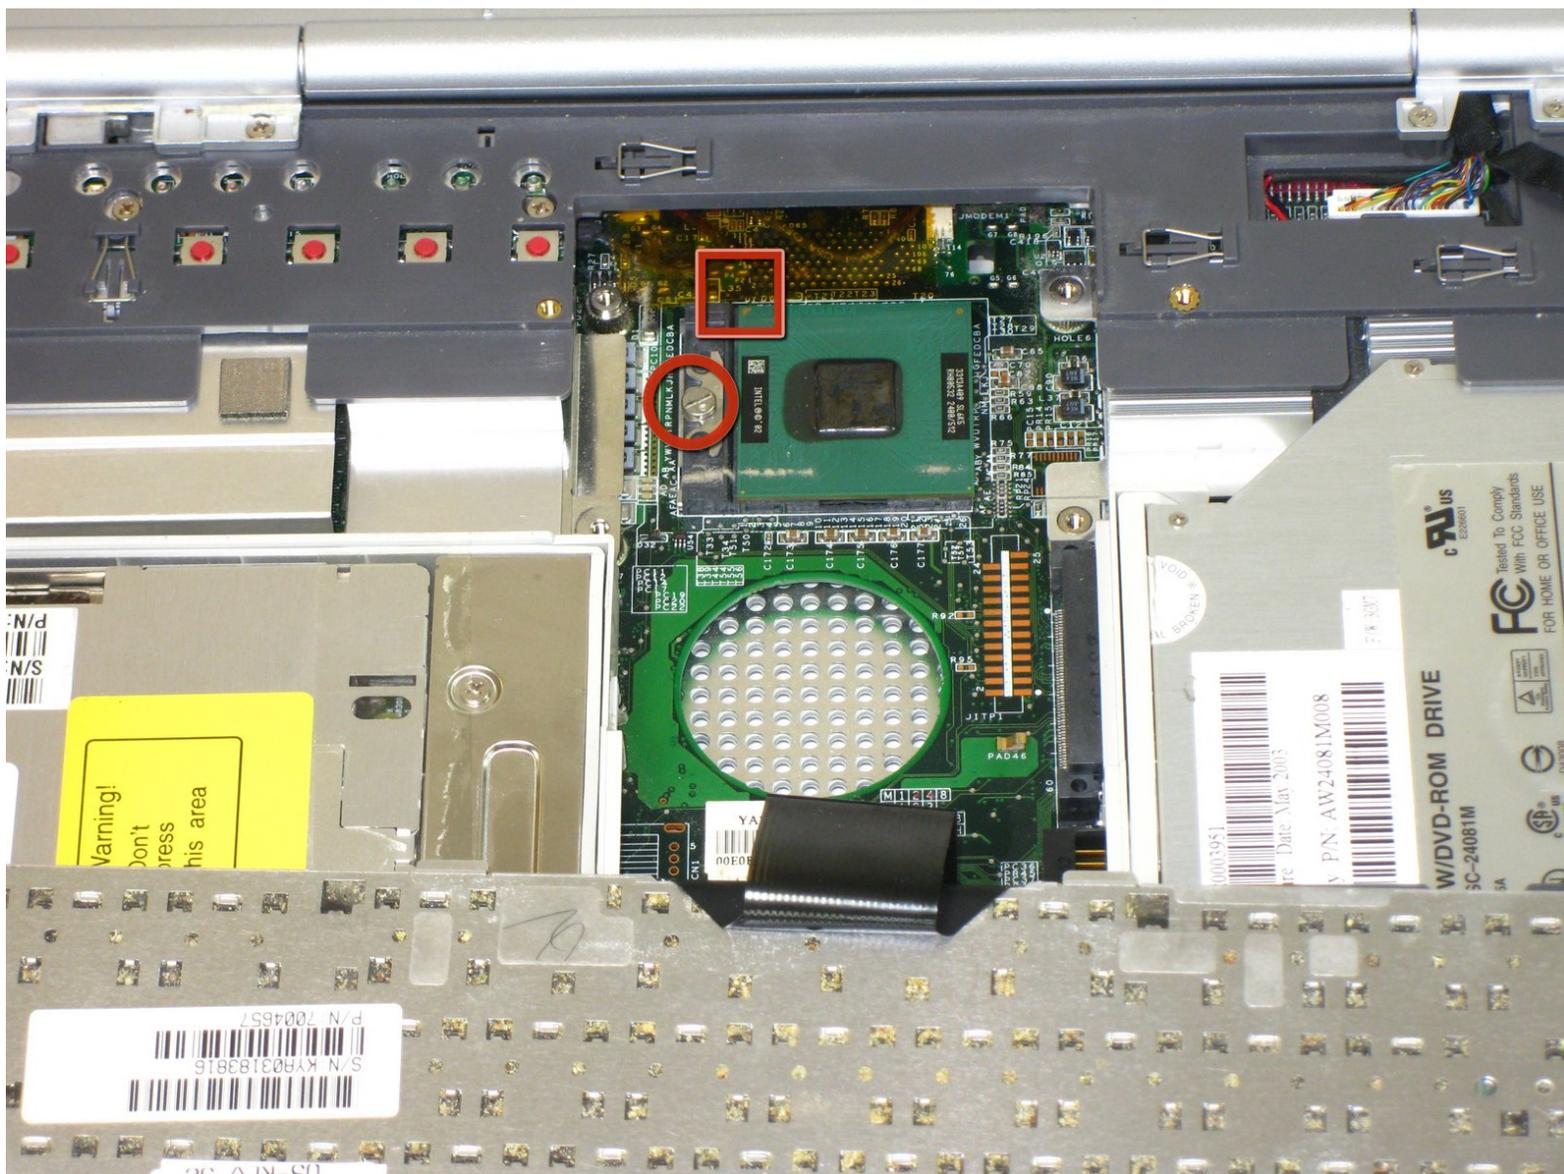


INTRODUCTION

How to replace or upgrade the CPU

TOOLS:

- [Flathead Screwdriver](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery

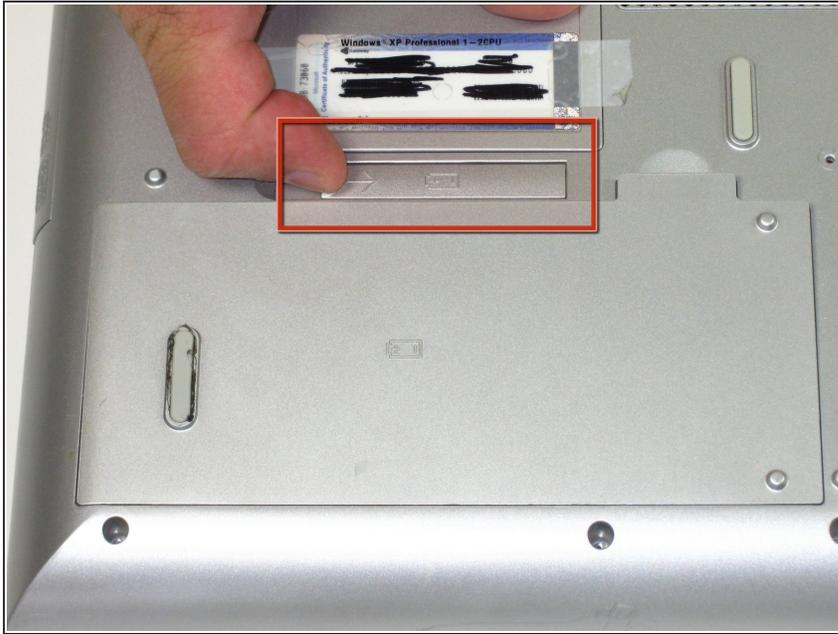

- Flip the laptop over. Slide the battery release tab to the right.

Step 2




- Lift the battery out.

Step 3 — Power button panel





- Insert spudger between sysrq and ins keys.
- Gently lift power button panel from the right to left.

Step 4 — Keyboard

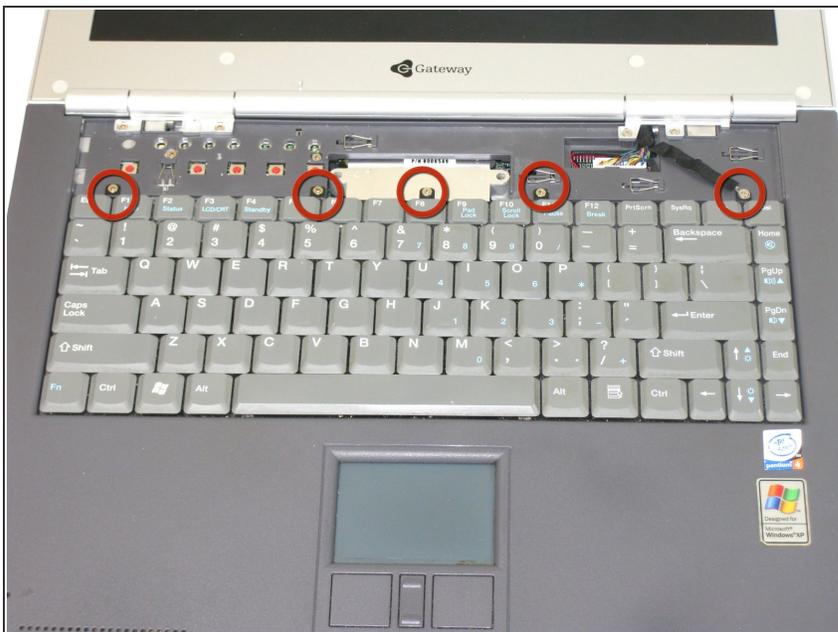


- Remove the 5 screws holding the keyboard in place.

Step 5

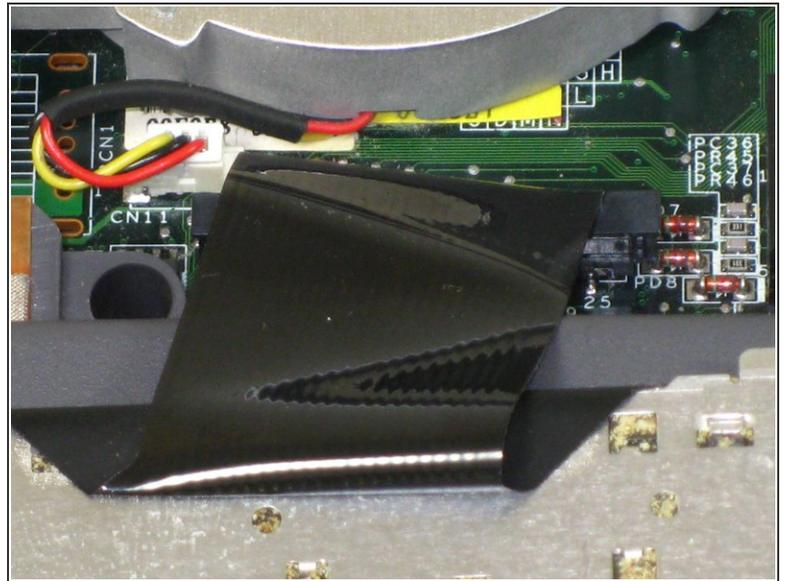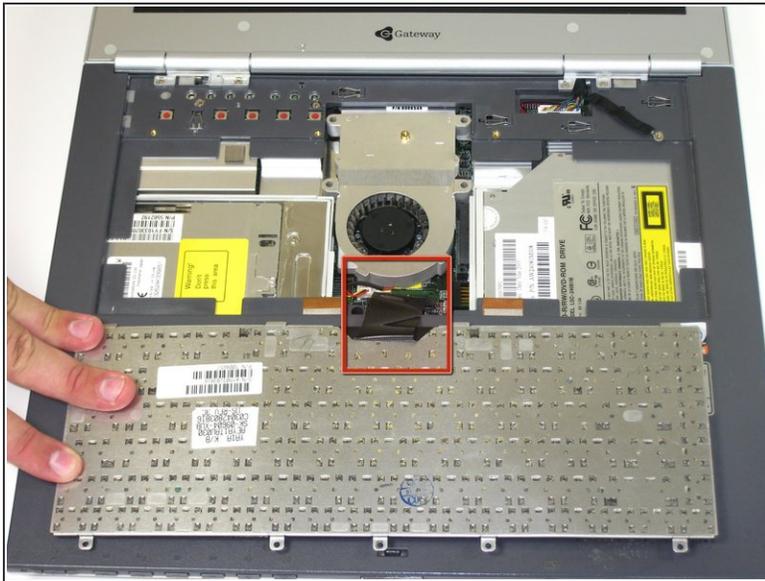


- ⚠ CAUTION:** When lifting the keyboard out, do not lift keyboard up. Only fold back along the space bar edge.
- ⚠ DO NOT PULL** the black cable by the ribbon section; only pull it by the connector itself.
- Follow the black ribbon cable to the connector and gently pull straight up.

Step 6 — System Fan

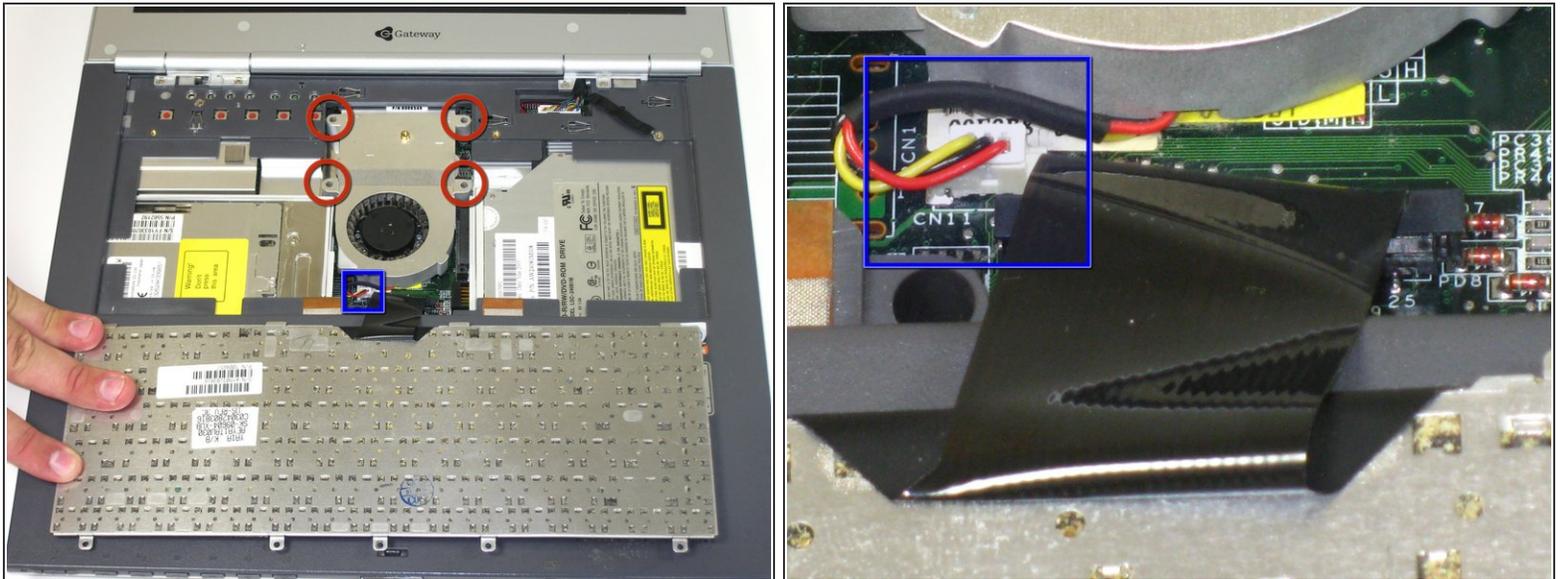

- Unscrew the 4 captive screws.
- Unplug fan from the system and pull it out. The fan unit should slide forward before coming free.

Step 7 — CPU

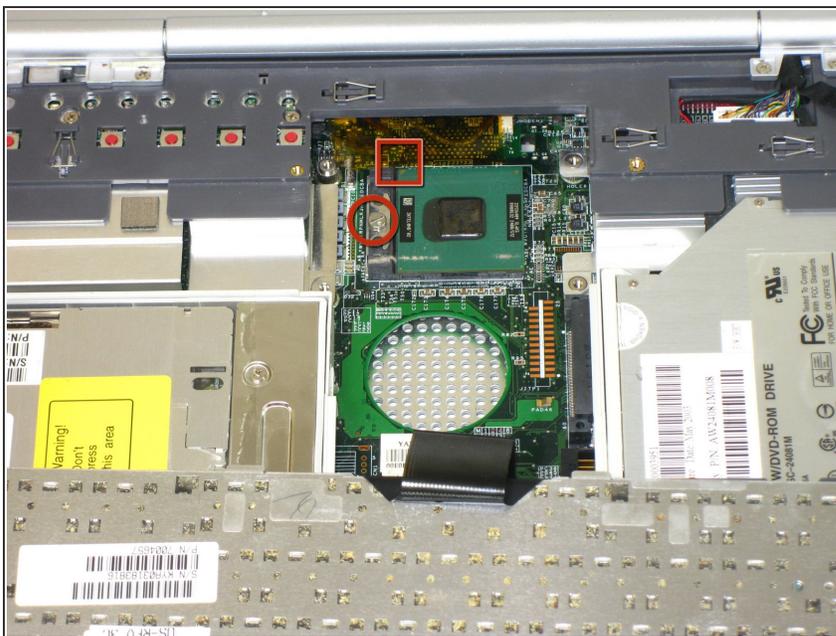

- Turn screw 1/4 turn to the right.
- ⚠ When reinstalling ensure proper orientation the yellow arrow on CPU should be in upper left corner

To reassemble your device, follow these instructions in reverse order.