



HP EliteBook x360 1030 G3 Screen Replacement

This guide shows how to remove the screen from the HP EliteBook x360 1030 G3.

Written By: Shea Charkowsky



INTRODUCTION

This guide will show you how to remove the screen from the laptop.

This will not explain how to remove the entire *monitor*. For that, see [HP's service manual](#) for info about display assembly replacement.

TOOLS:

- [Jimmy](#) (1)

Step 1 — Screen




- i** Before starting, make sure your laptop is completely powered off.
- Open the laptop and position the screen to face you.
 - Carefully wedge a Jimmy between the black screen border and the silver monitor backing, and then rotate the Jimmy upwards and away from you until they separate.
- !** If your screen is not cracked, there is a chance of doing so here. Perform this step with caution, control, and focus.

Step 2




- Reinsert the Jimmy and slowly twist it to begin separating the remainder of the screen.
- Continue this along the edge until the top and two sides are fully separated.
- Allow the top edge of the screen to rest against the keyboard.

Step 3

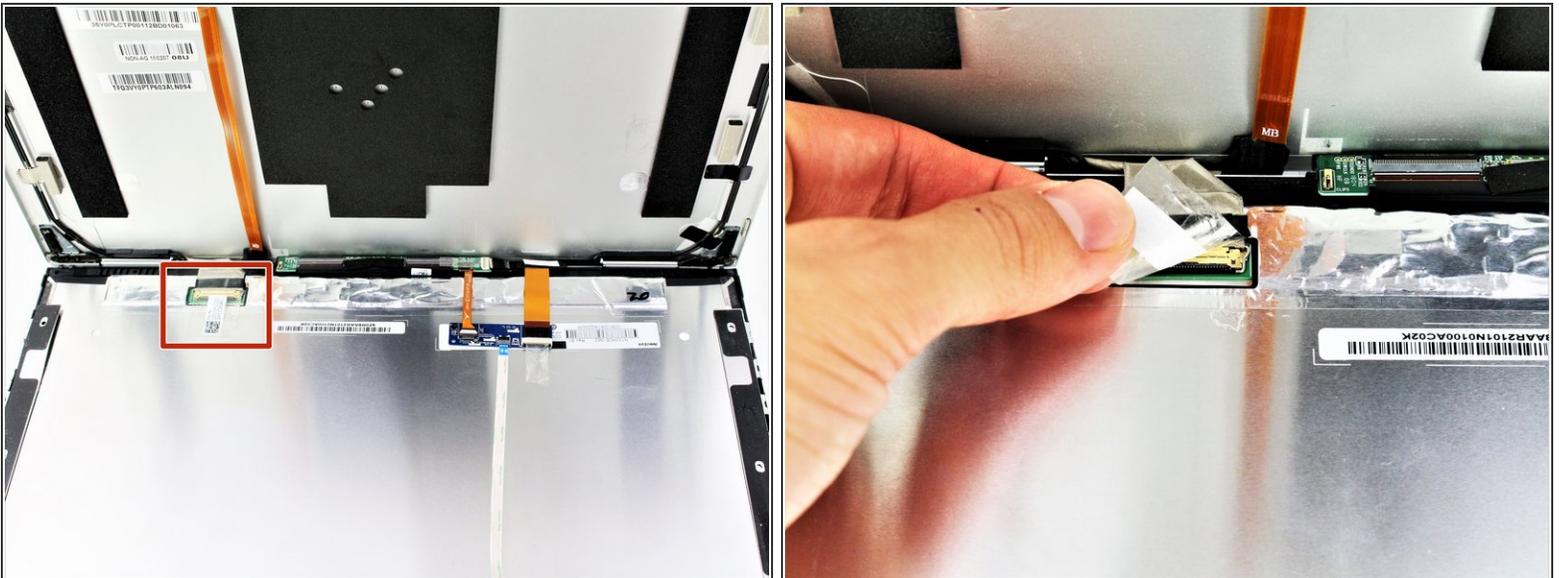



- Pull the tape off the gold wire port on the left.

Step 4

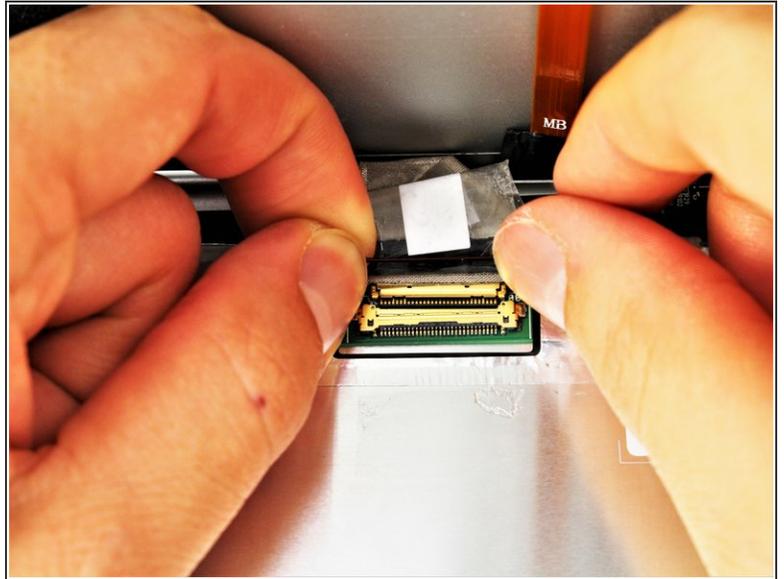


- There is a thin hinged bar hugging the front of the port to keep the wire housing in place. Use your nail or a thin object to lift it up and out of the way.
- Use the hinged bar to slide the wire housing away from you and out of the port.

Step 5

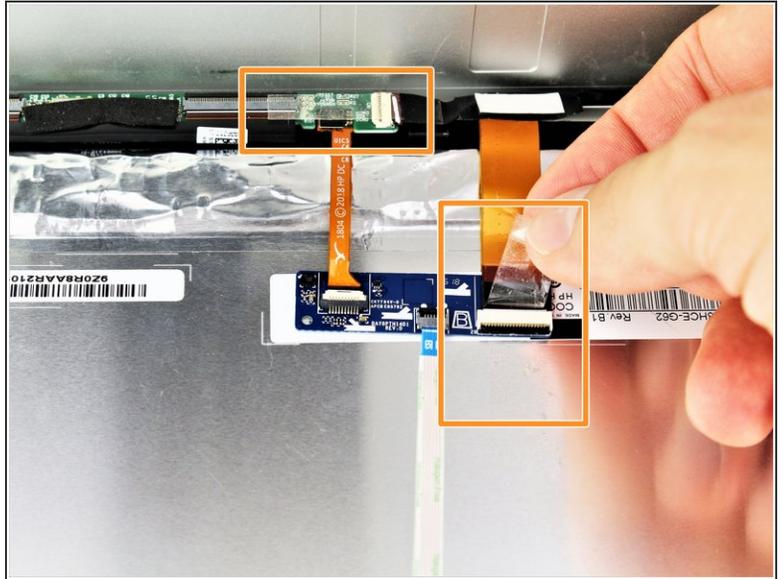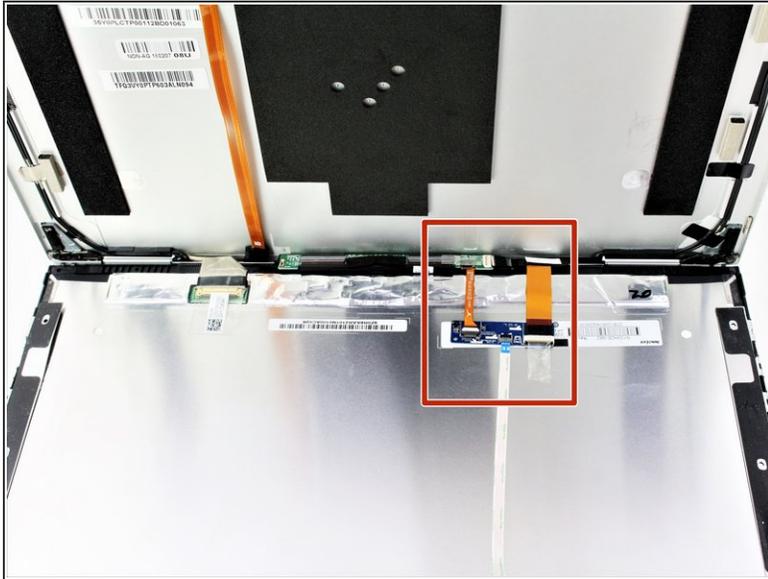


- Locate the collection of ports on the right.
- Pull the tape from the port with the thicker orange sheet of wires and from the port on the small green circuit board.

Step 6

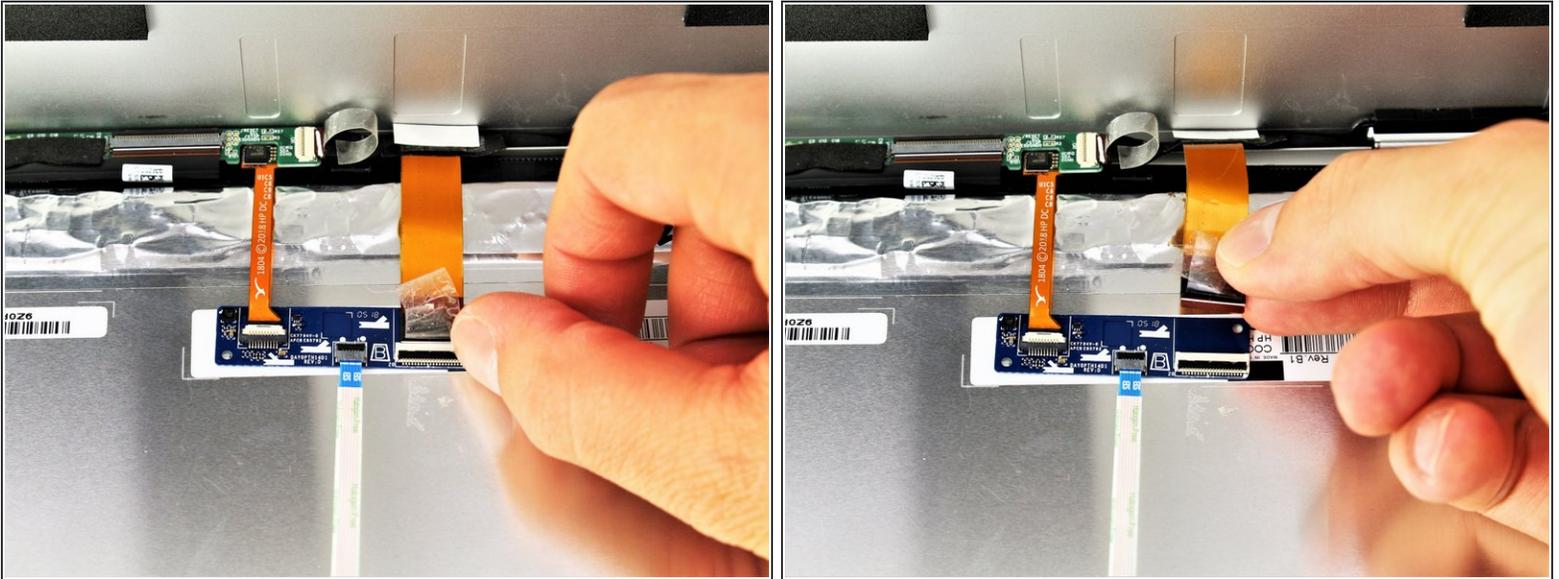

- Use your nail or a thin object to lift the small white fastener at the front of the port.
- Slide the orange sheet away from you out of the port.

Step 7

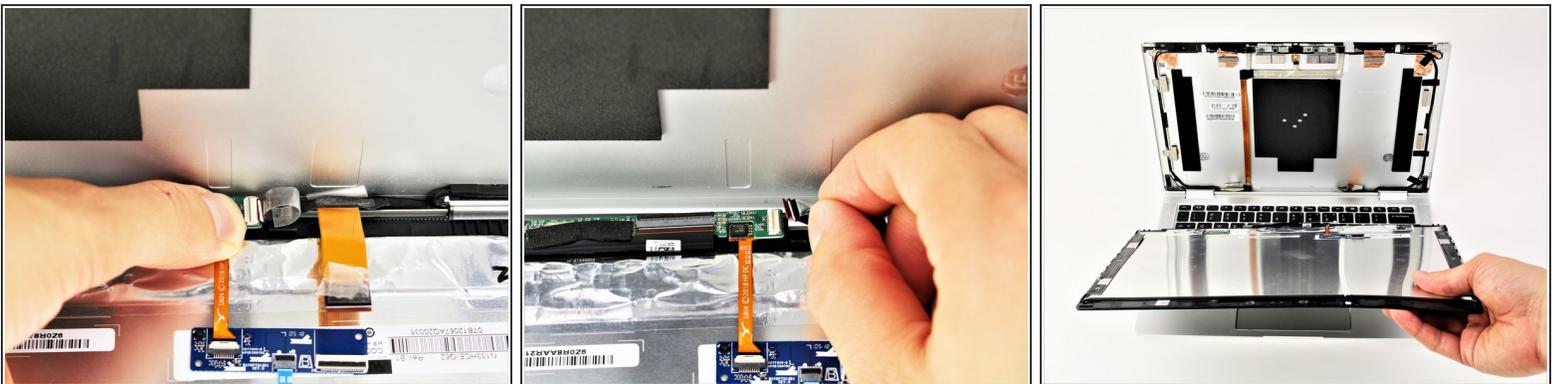

- Use your nail or a thin object to lift the small white fastener at end of the port on the green circuit board.
- Slide the sheet of wires to the right and out of the port.
- Carefully lift, and remove the screen.

To reassemble your device, follow these instructions in reverse order.