



HP Pavilion x2 10-n113dx Touch Pad Replacement

How to replace a touch pad in a HP Pavilion x2 10-n113dx.

Written By: Cayla Skaggs



INTRODUCTION

This guide will show how to replace a touch pad in the HP Pavilion x2 10-n113dx. This guide is moderate in difficulty as one must open up the back of the keyboard. It is important to have a heat pad available so that one can reassemble the gray bumper on the back of the keyboard. The replacement guide requires a Phillips #0 screwdriver and a magnetic board is helpful for keeping track of screws.

TOOLS:


- [Small Plastic Spudger](#) (1)
 - [Metal Spudger Set](#) (1)
 - [Heat Pad](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Touch Pad



- Separate the screen from the keyboard.

Step 2

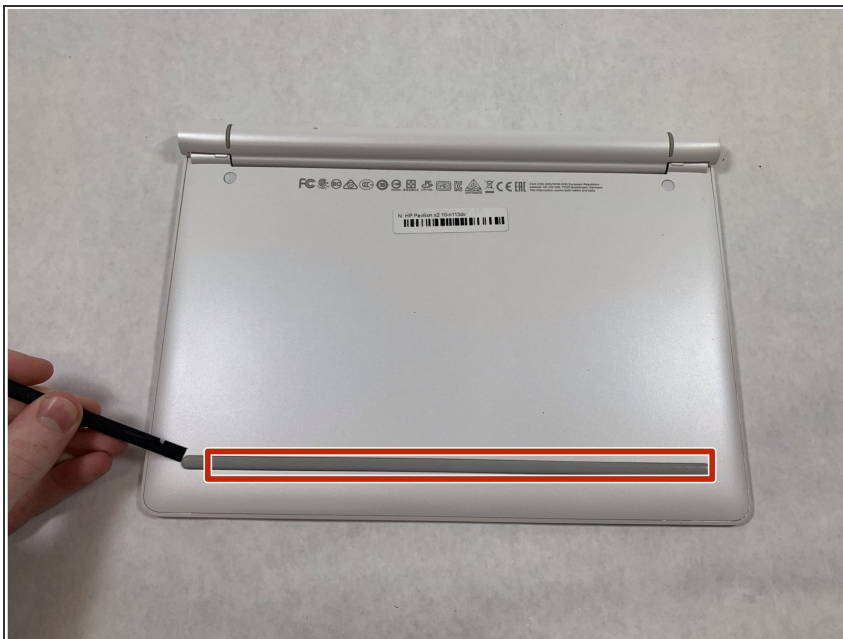

- Loosen the adhesive under the gray plastic bar using a heat pad or a heat gun.
- Remove the gray plastic bar after 5 minutes of light heat with tweezers by pulling up.

Step 3




- Remove the 4 screws with a Phillips #0 screwdriver.
- ⓘ These 4 screws have a diameter of 4.3 mm and a height of 3.7 mm.

Step 4




- Remove the rubber stoppers at the top left and right with tweezers.
- Remove the screws at the top and right with at Phillips #0 screwdriver.
- These two screws have a diameter of 5.3 mm and a height of 4.3 mm.

Step 5

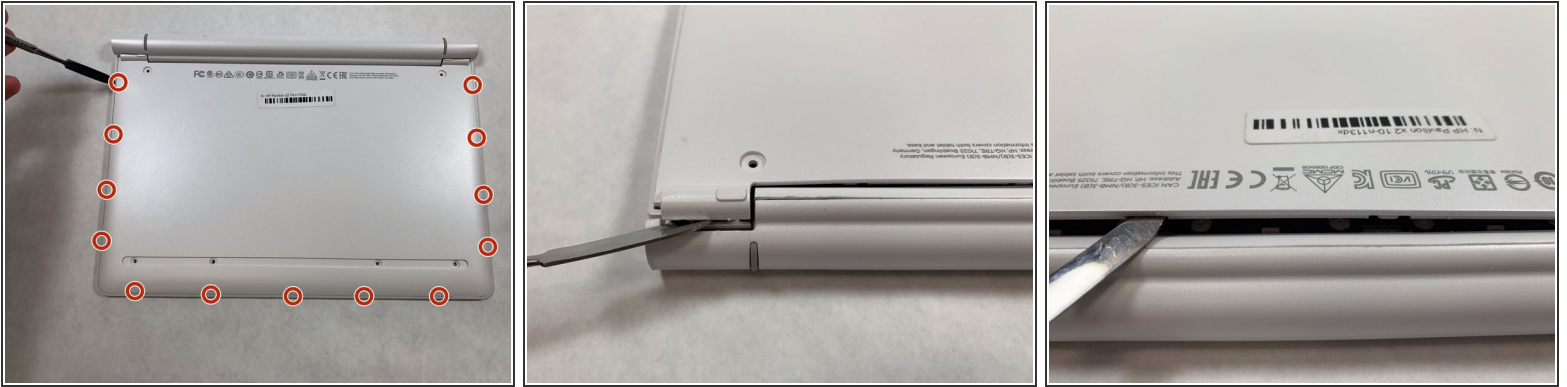



- Pry open the back case with a metal spudger.
- Then pry open the back layer with the metal spudger.

Step 6

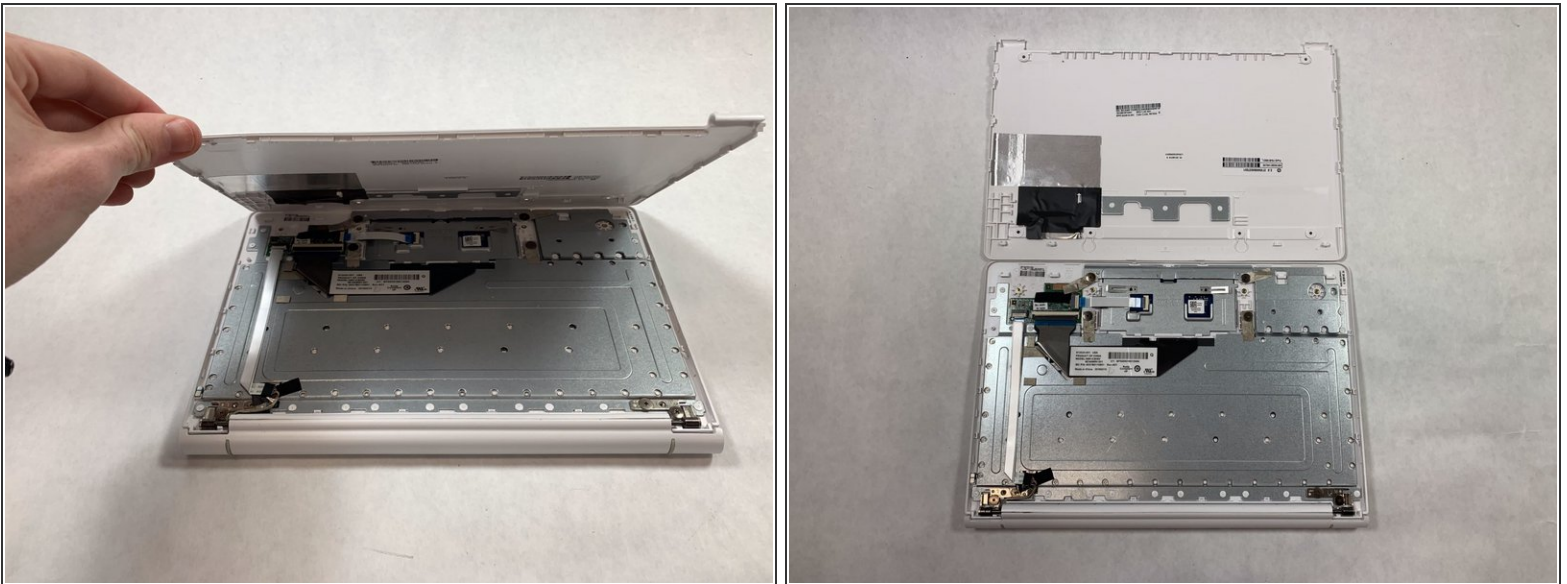


- Fully take off the back panel by lifting up the panel.

Step 7

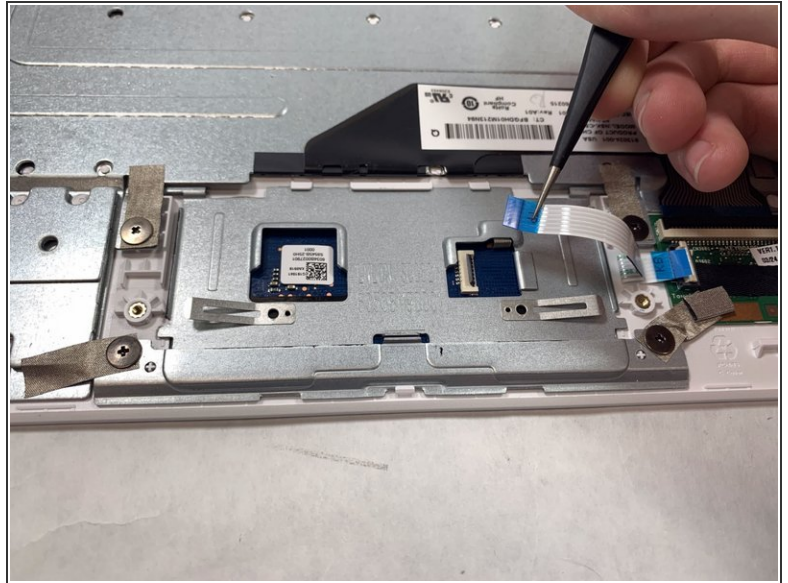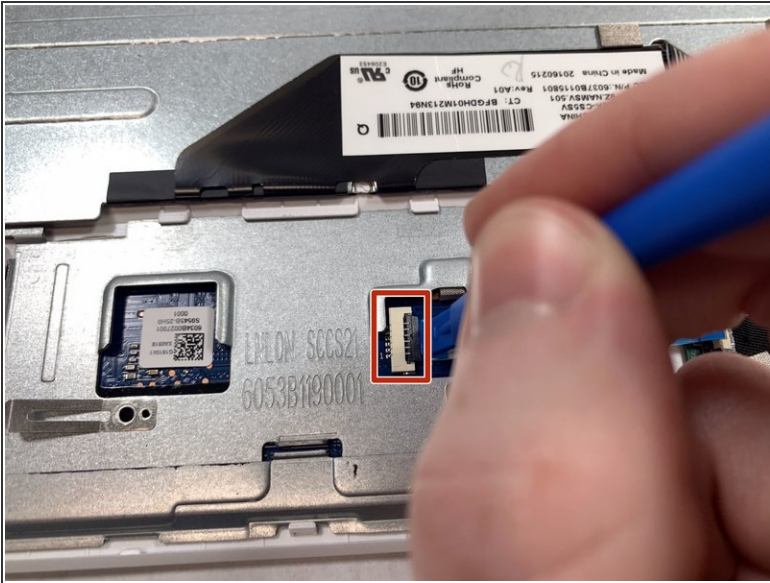


- Pop open the ribbon cable piece on the touch pad with the blue plastic spudger.
- Remove the ribbon cable with tweezers by pulling it out.

Step 8

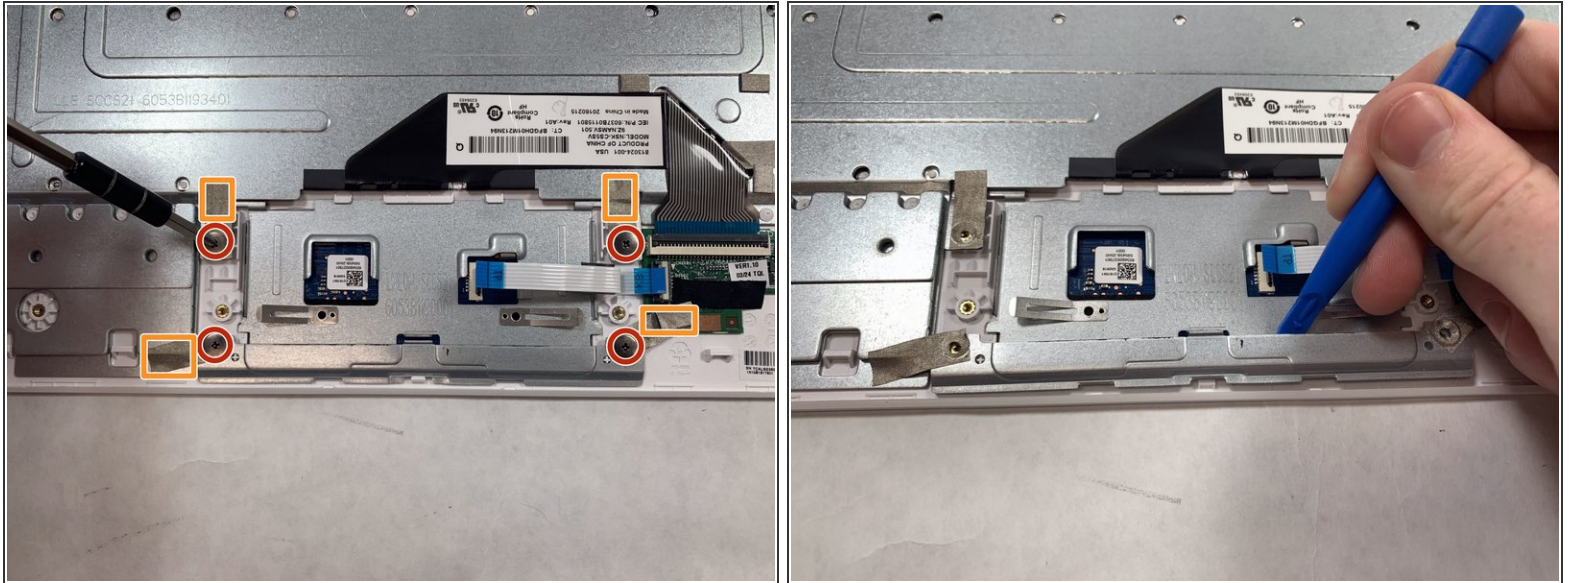

- Remove 4 screws with at Phillips #0 screwdriver. All 4 screws have a diameter of 4.3 mm and a height of 3.7 mm.
- Lift the tape shown with orange boxes with tweezers.
- Remove metal bar with a blue spudger.

Step 9

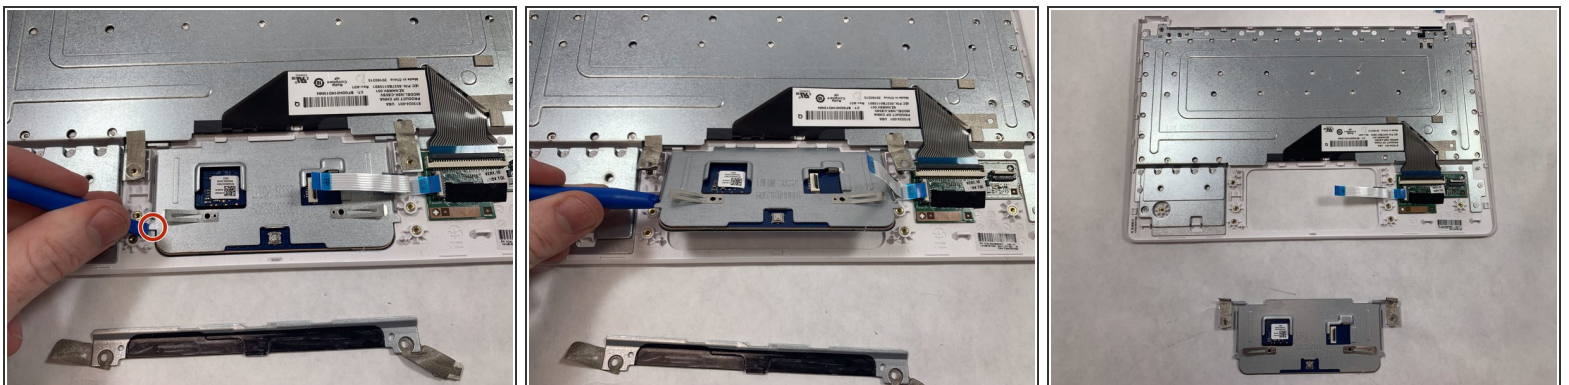

- Lift up the touch pad by the metal edge with a blue plastic spudger.
- Remove the touch pad from the computer.

To reassemble your device, follow these instructions in reverse order.