



HP Spectre 13-4002dx Battery Replacement

This guide will walk you through how to replace the battery for this HP laptop.

Written By: Cayce Stewart




INTRODUCTION

The laptop needs to be turned off during this procedure. Disconnecting the battery while the laptop is powered on may hurt you or damage your laptop.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Bottom Case

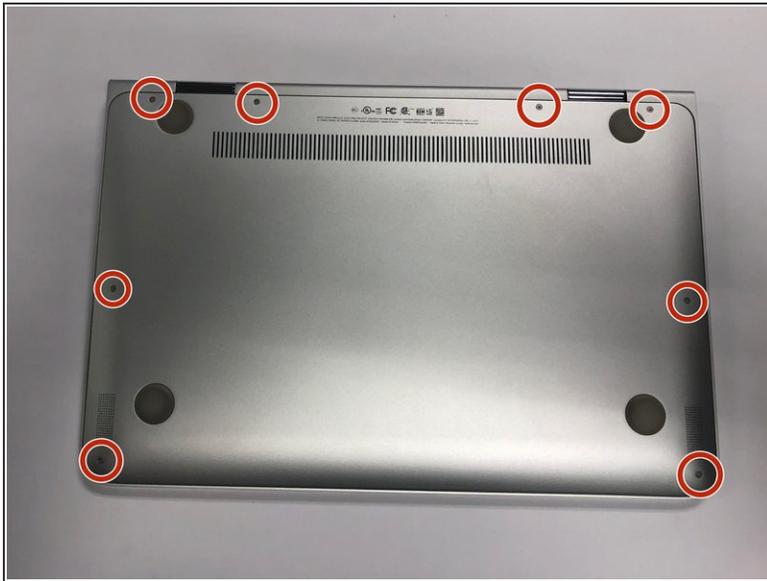

- Using the Torx T5 screwdriver, remove the eight 8 mm screws on the bottom case of the laptop.

Step 2




- Pry up one corner of the bottom case with a spudger.
- Work the spudger around the edges, making your way towards the bottom of the laptop.
- Remove the bottom case.

Step 3 — Battery



- Orient the laptop the same way as the pictures. The battery is bordered in a red outline.
- Remove the six 4 mm screws using a Phillips #000 screwdriver.


Step 4

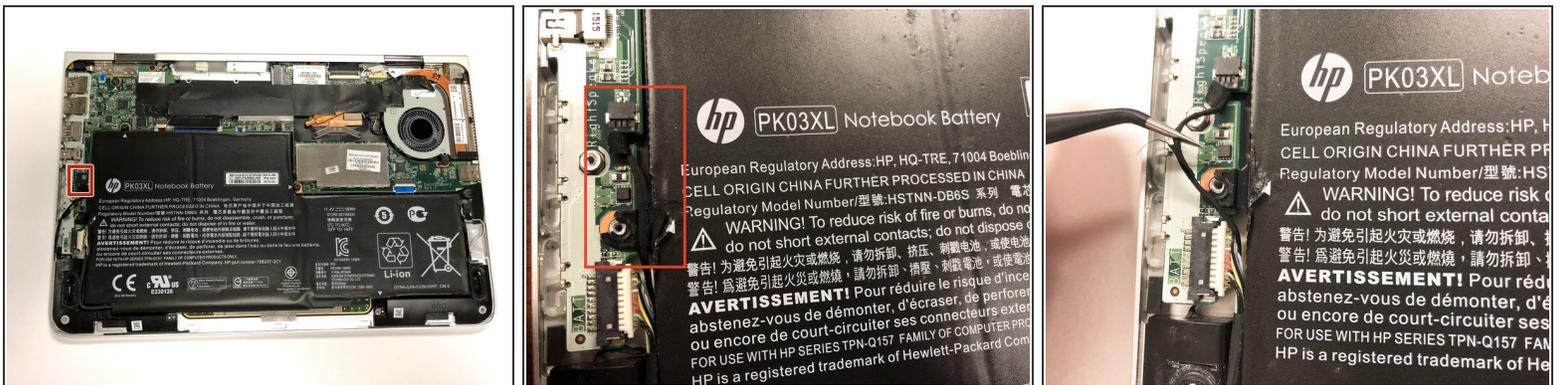

⚠ Do not disconnect the cable connector shown in the red box.

- The speaker cable may be attached to the battery with black electrical tape. If so, remove the tape.
- Move the cable clear of the battery.


Step 5

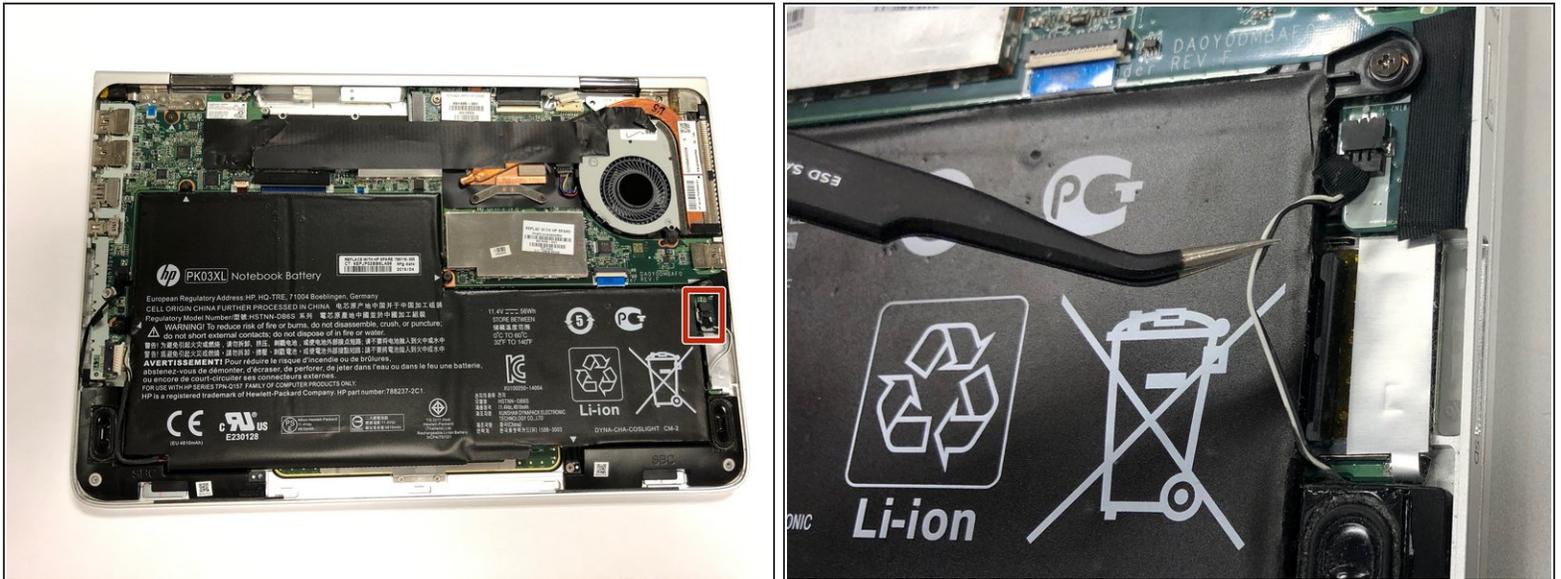

⚠ Do not disconnect the cable connector located in the red box.

- Use tweezers to remove the speaker cable from the groove attached to the battery.
- Push the cable to the side so it does not get in the way of the battery removal.

Step 6

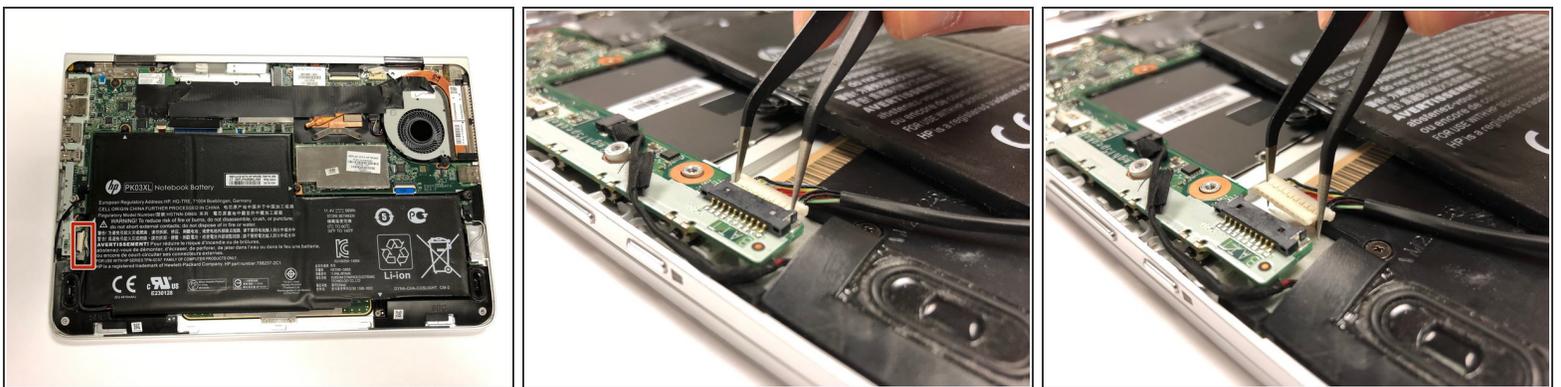

- Disconnect the battery cable connector by sliding it out of the socket.
- ⓘ Move the battery out of the way if you need more room to disconnect the power cable.

Step 7



- Carefully remove the battery.

To reassemble your device, follow these instructions in reverse order.