




# Handspring Visor Deluxe PDA Button Pad and Battery Terminal Replacement

How to install a new button pad and battery terminal into the Handspring Visor Deluxe PDA.

Written By: David Faltemier

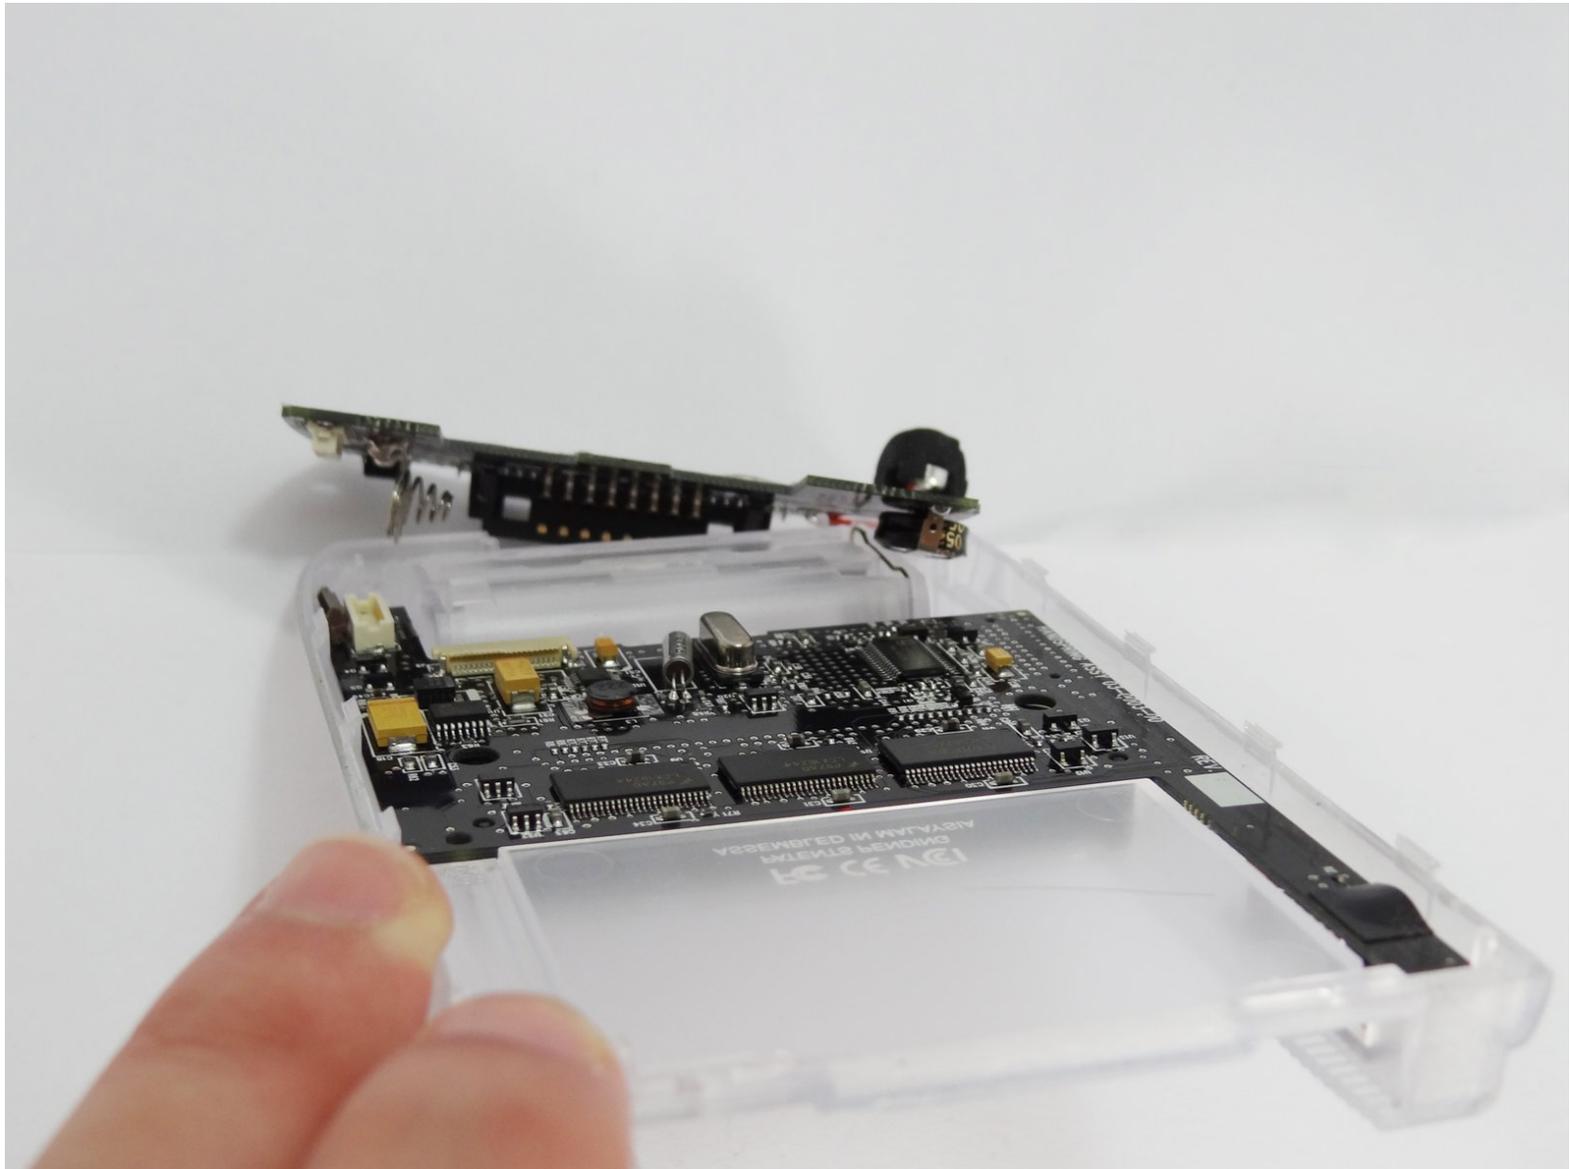

---

## INTRODUCTION

This guide will walk you through how to replace your button pad.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Outside cover and stylus



- Remove the outer screen cover by releasing the top clip from the main body of the device.

## Step 2




- Pull out the stylus from the top right corner of the device.

### Step 3




- Slide the memory cartridge cover up and off the device.

### Step 4 — Batteries

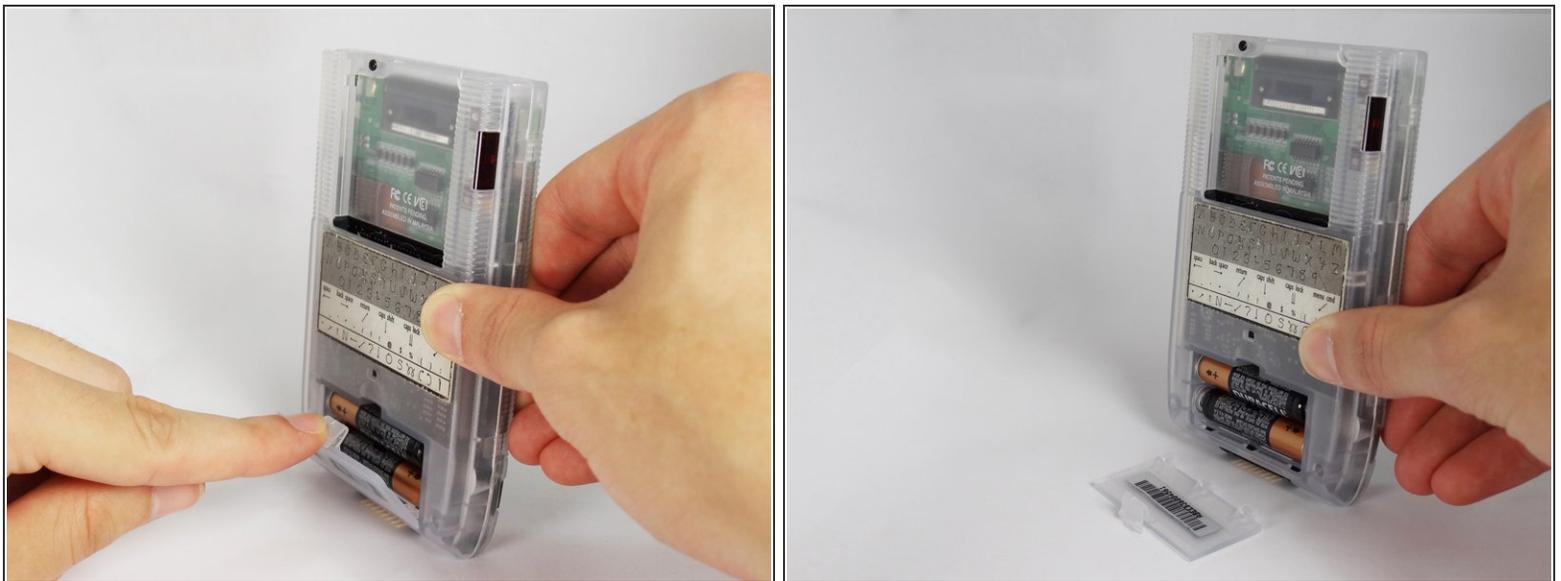

- Remove the battery cover by releasing the clip from the main body of the device.

## Step 5

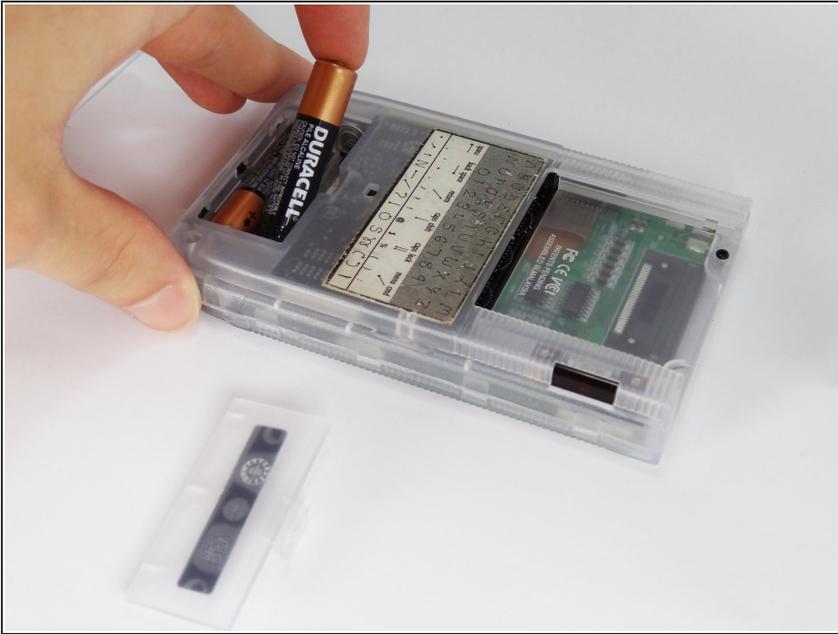

- Remove the batteries from the device.

## Step 6 — Back Cover



- Unscrew the four 2.94mm screws with a #00 Phillips screwdriver.
- ⓘ One end of the OEM stylus can unscrew and contains a mini #00 Phillips screwdriver.

## Step 7



- Use the spudger to pry open the casing by applying pressure at 4 clips on both sides of the device.


⚠ Be careful while opening the casing as there is a flex strip connecting the two halves.

## Step 8






- Disconnect the flex strip from the motherboard with tweezers.

## Step 9 — Button Pad and Battery Terminal

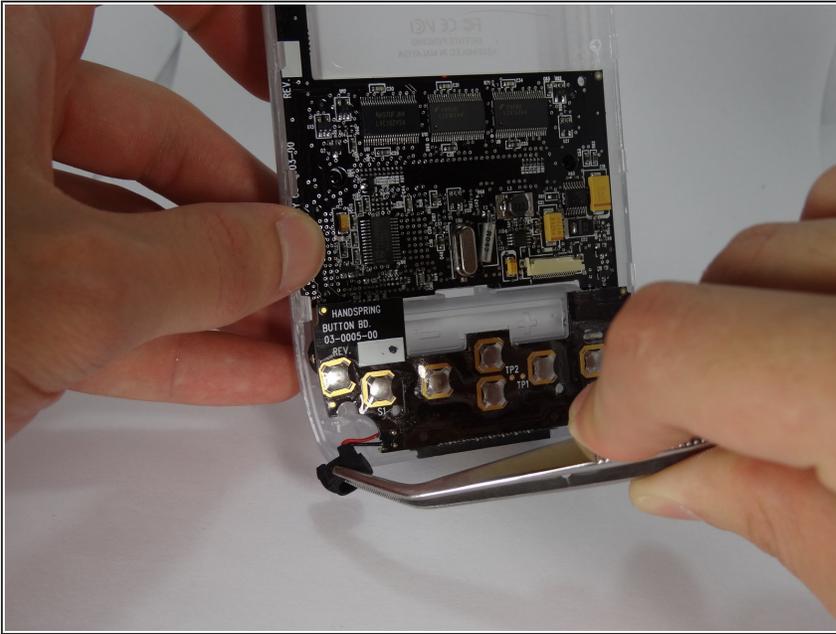

- Use tweezers to remove the power button from the back case.

## Step 10

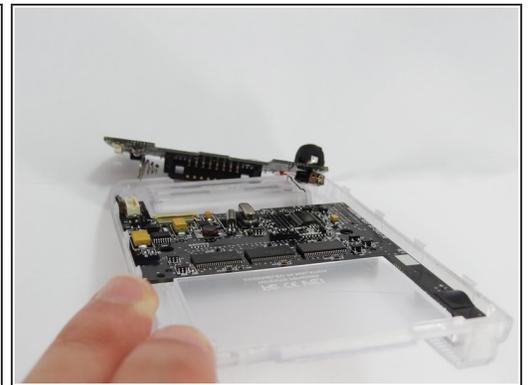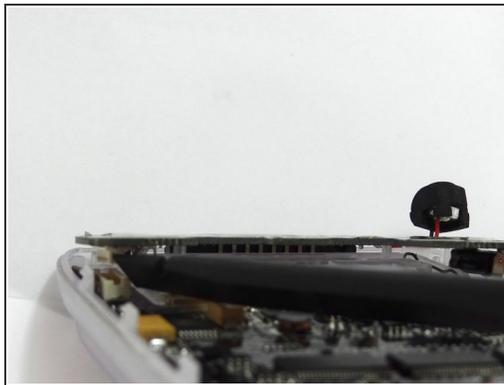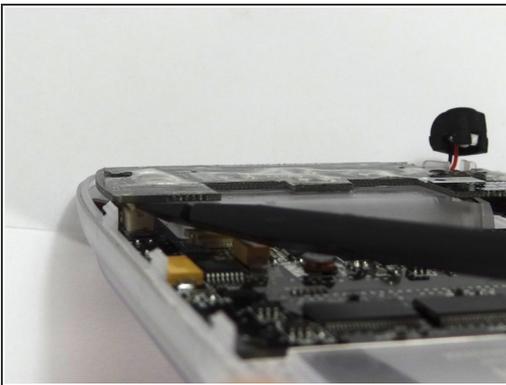

- Disconnect the button pad by using the spudger to pry it off the motherboard.
- Remove the button pad.

To reassemble your device, follow these instructions in reverse order.