



# Infinity Genesis hood Replacement

This guide will show you how to replace the genesis Hood Assembly .

Written By: Nick



**TOOLS:**

- Phillips #2 Screwdriver (1)
- Cordless Drill (1)
- Phillips # 2 drill bit (1)

**PARTS:**

- Genesis Hood Piece . (1)

## Step 1 — Hood



**i** To begin remove Right and Left armrests . See assembly guide on how to remove these.

- Unzip the following zipper at the very top of the chair. It is hidden beneath Velcro .

**!** Leave back pad like this no need to unzip any other zippers.

## Step 2



- Remove all 8 Screws on back cover.



**i** End Result should like this .

### Step 3




- Remove Top 4 screws .

### Step 4

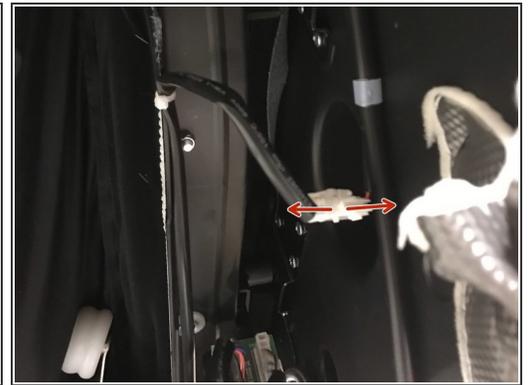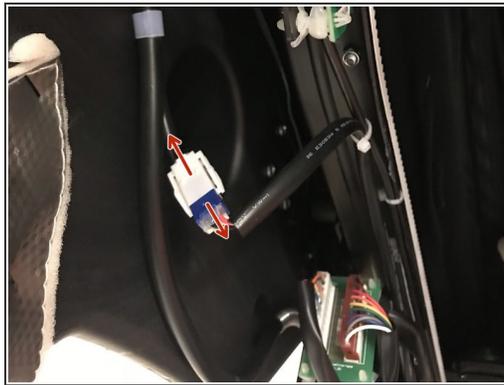

- You will need to disconnect the power cables on Left and Ride side of the hood assembly . They are attached via a clip. Simply push the clip down and pull them apart.

## Step 5

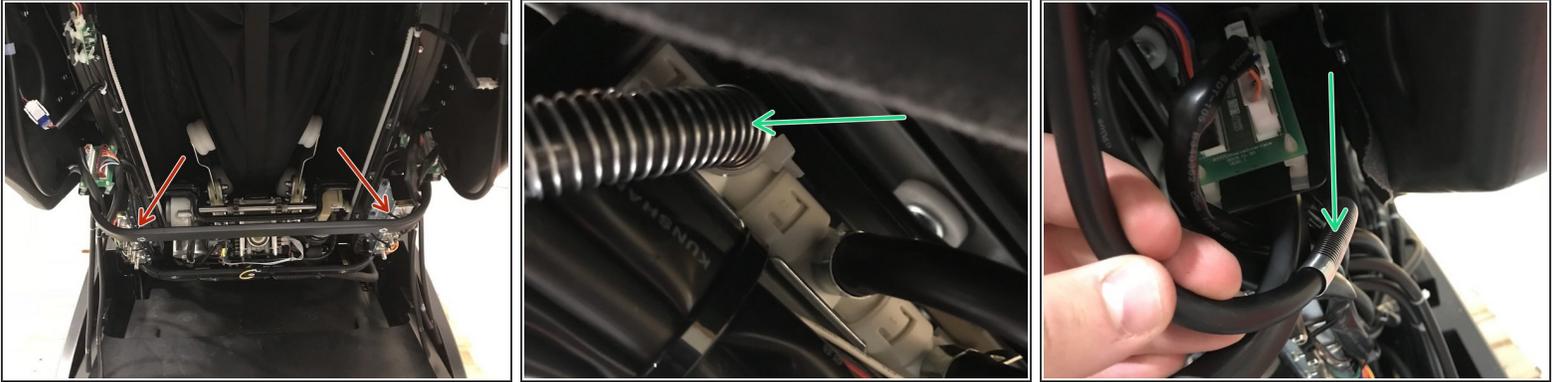

- You need to find the 6 way air valve on the left and right hand side.
- You then need to Locate and remove the top air hose from the valve. You can usually identify this hose by the armor cover it has on it . Additionally its the only air hose that goes to the top.

## Step 6



**⚠** BEFORE CONTINUING DOUBLE CHECK YOU HAVE DONE THE PREVIOUS STEPS TO ENSURE EVERYTHING HAS BEEN DISCONNECTED .

- To remove the hood piece lift upwards to slide it off of the Frame points.
- Marked here are the 4 frame points . Remember where these are for re- assembly.
- ⓘ See last photo for end result.

## Step 7 — REASSEMBLY TIPS



- i** For reassembly of back panel Please be sure to lock in these Ball and Joint pieces into each other . They are located at the top of the chair.
- !** If you don't lock these in first you will have a harder time securing this panel back on . Additionally once these Ball and joint pieces are connected. Secure the middle screws on the cover first this will ensure the cover will line up with the other bolts.

To reassemble your device, follow these instructions in reverse order.