




Lenovo YOGA 730-15IKB Right Fan Replacement

This guide describes the steps required to replace the right fan on a Lenovo YOGA 730-15IKB.

Written By: Daniel Rodriguez Salinas

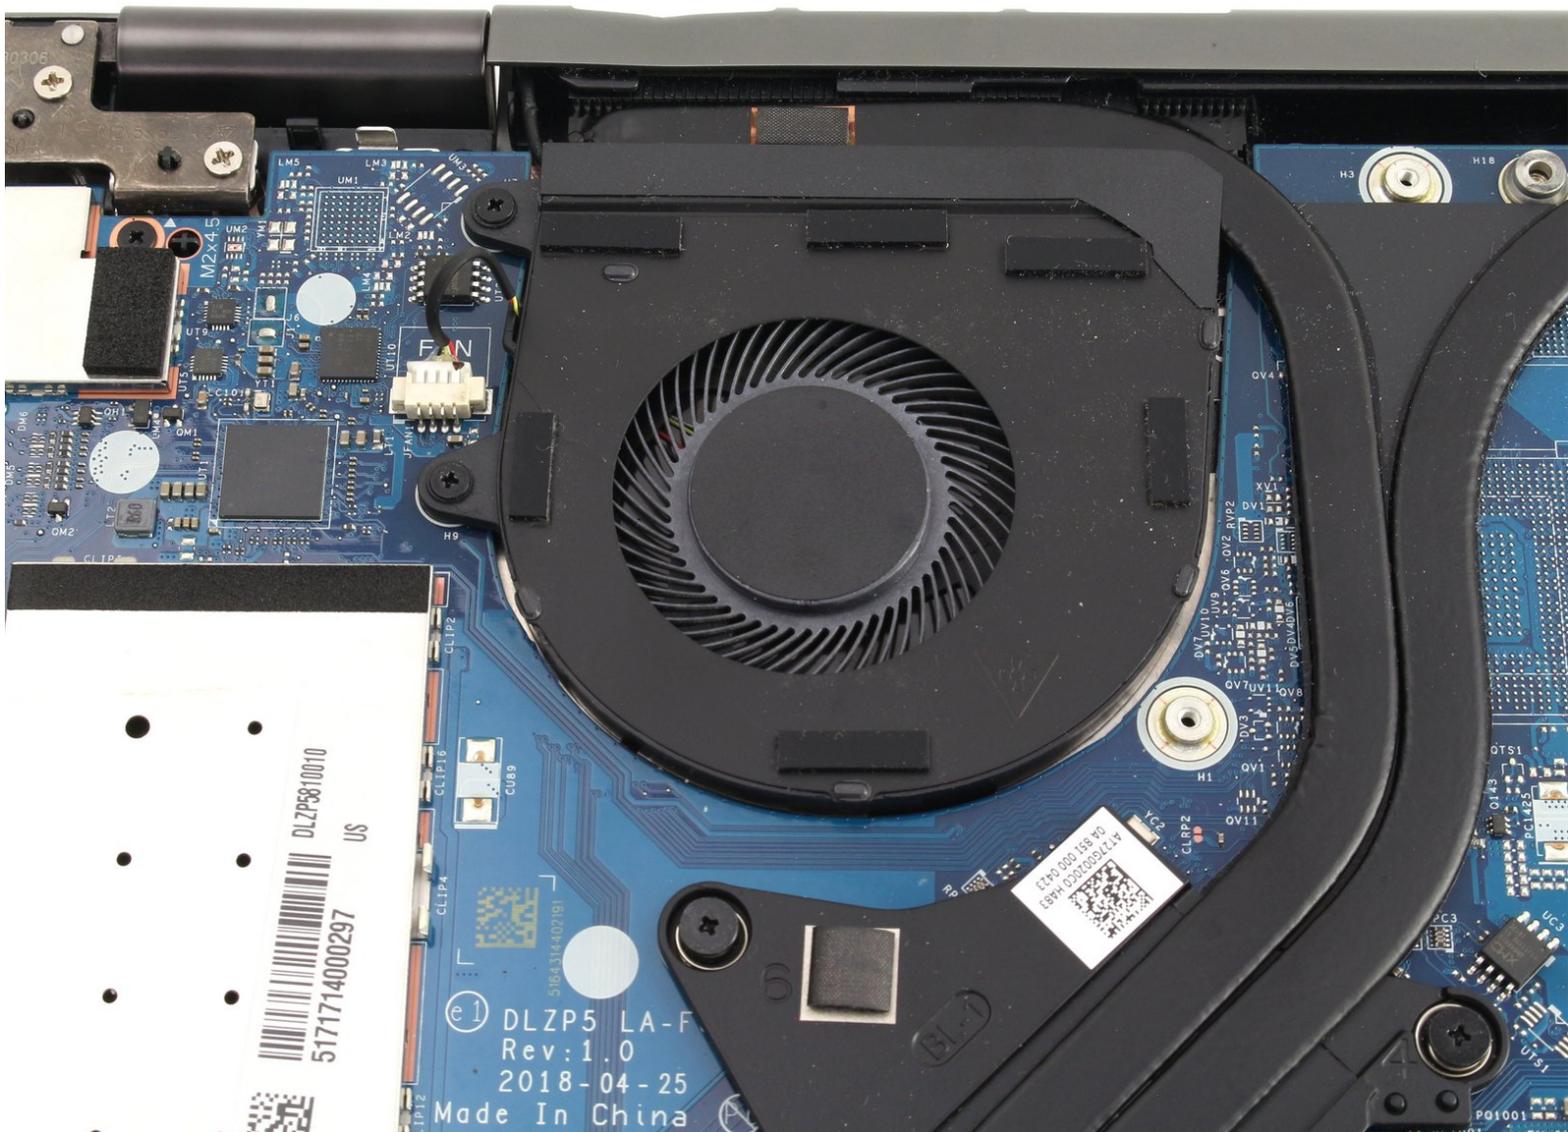

INTRODUCTION


Follow this guide to replace or remove the *right* fan in your Lenovo YOGA 730-15IKB. The fans in a laptop draw air over the components which allows them to stay cool and last longer.

If your fans are noisy or create a high-pitched whining noise, they may need to be replaced. You can also try blowing compressed air into the fan to remove any built-up dust that may be slowing it down.

TOOLS:

- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-


Step 1 — Bottom Cover

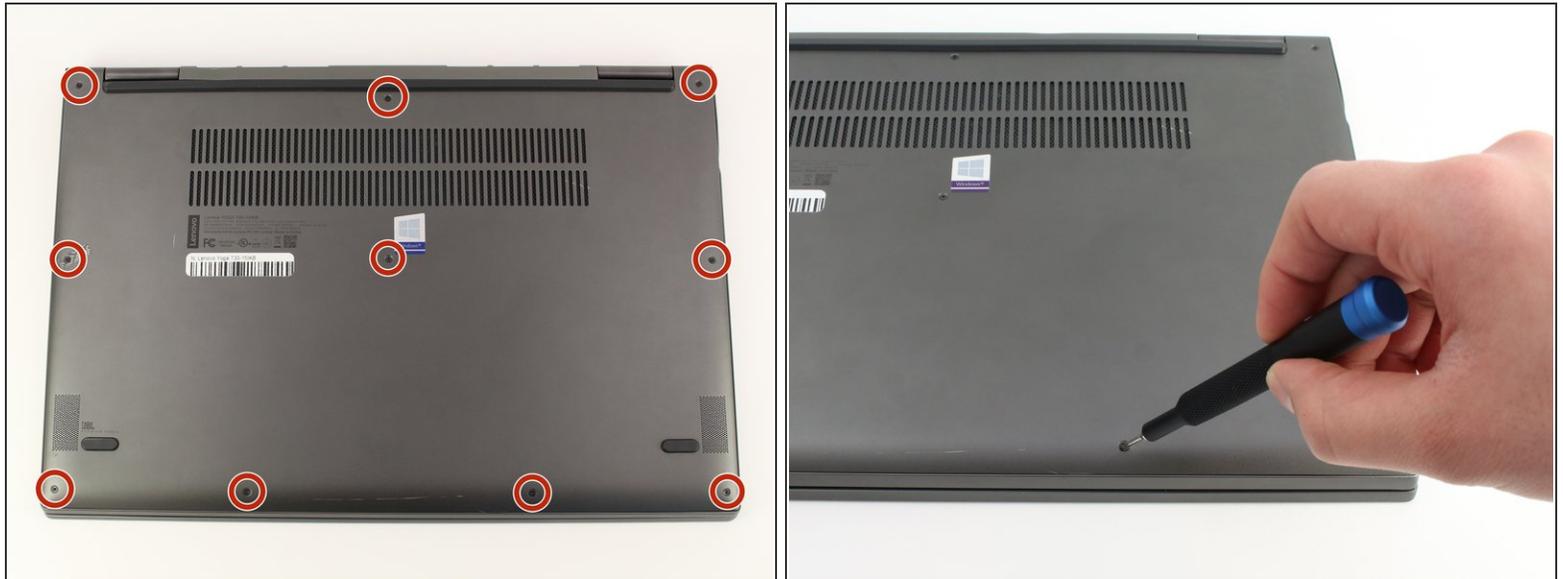

 Turn off the computer and unplug the charger before going any further.

- Flip the laptop over so you can see the underside.
- Remove ten 7mm T5 Torx screws.

Step 2

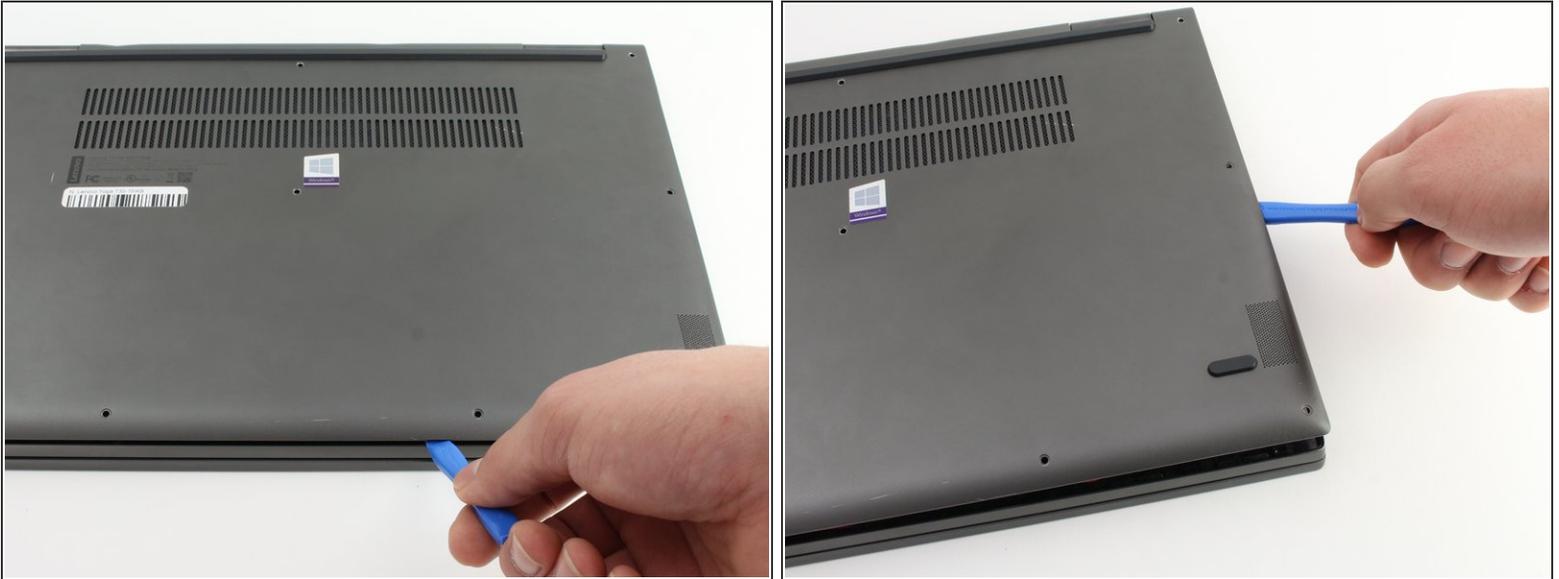


- Pry up the bottom cover with an opening tool.
 - Start at the front edge of the cover and make your way along the sides.

Step 3





- Pull the bottom cover up and away from the back hinges.

Step 4 — Right Fan

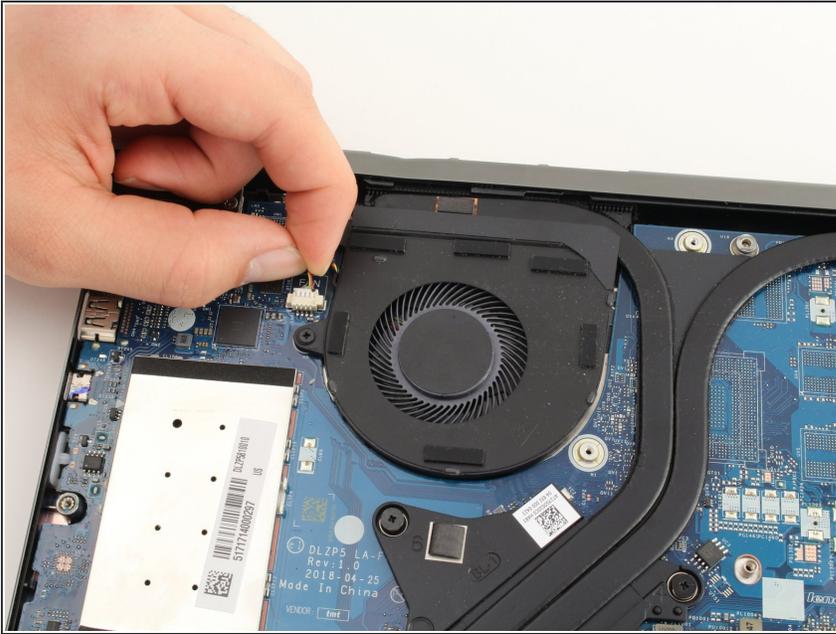


- ⓘ When the laptop is upside down, the right fan is on the left side of the laptop near the large metal RAM cover.
- Disconnect the fan cable. Pull the wire toward the back of the laptop while wiggling to loosen the connection.
- You can also use the white tabs on the connector to push the cable free.

Step 5

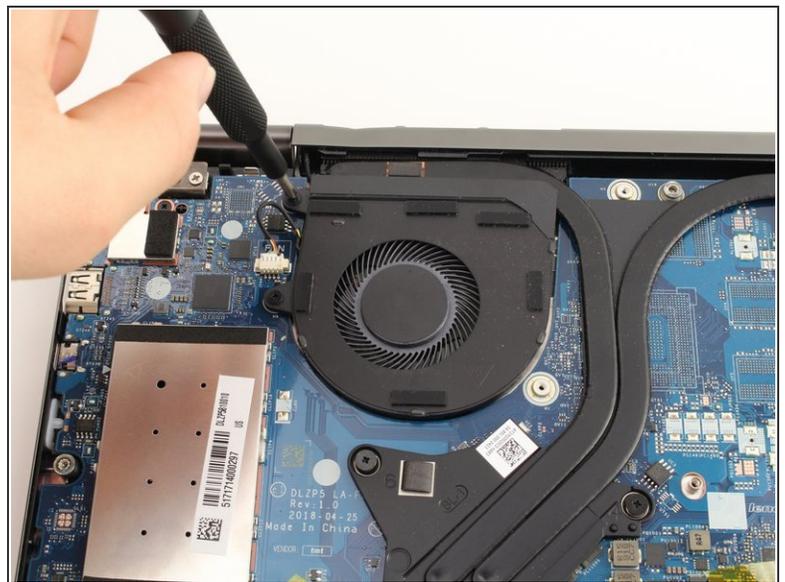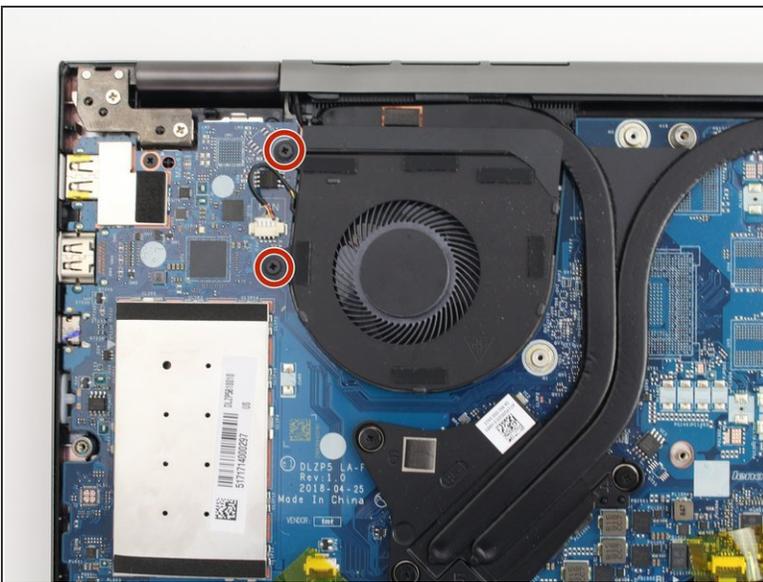

- Remove two 4mm Phillips #1 screws.

Step 6

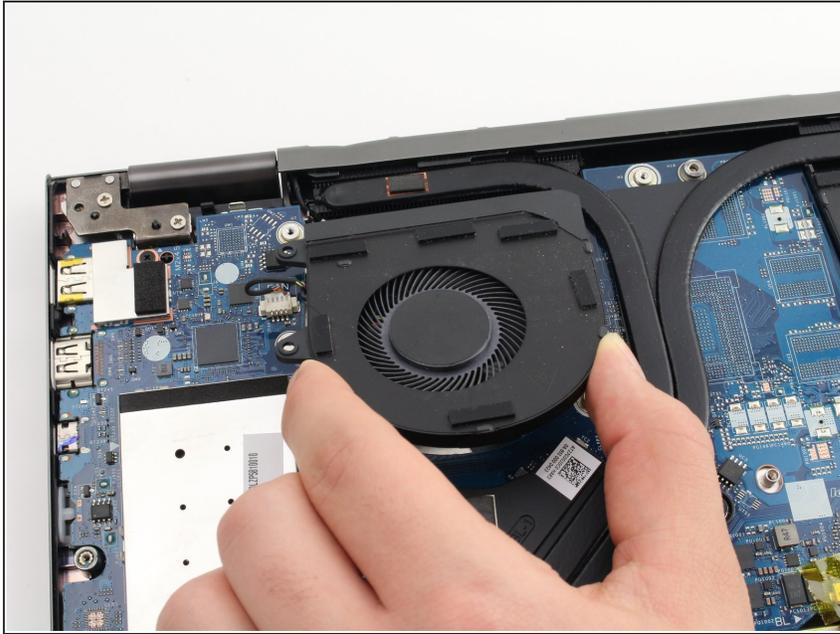

- Pull the fan up and towards the front of the laptop.

To reassemble your device, follow these instructions in reverse order.