




# Lenovo Yoga C930-13IKB Battery Replacement

How to replace the Lenovo Yoga C930 13IKB battery.

Written By: Hanna Lazkani

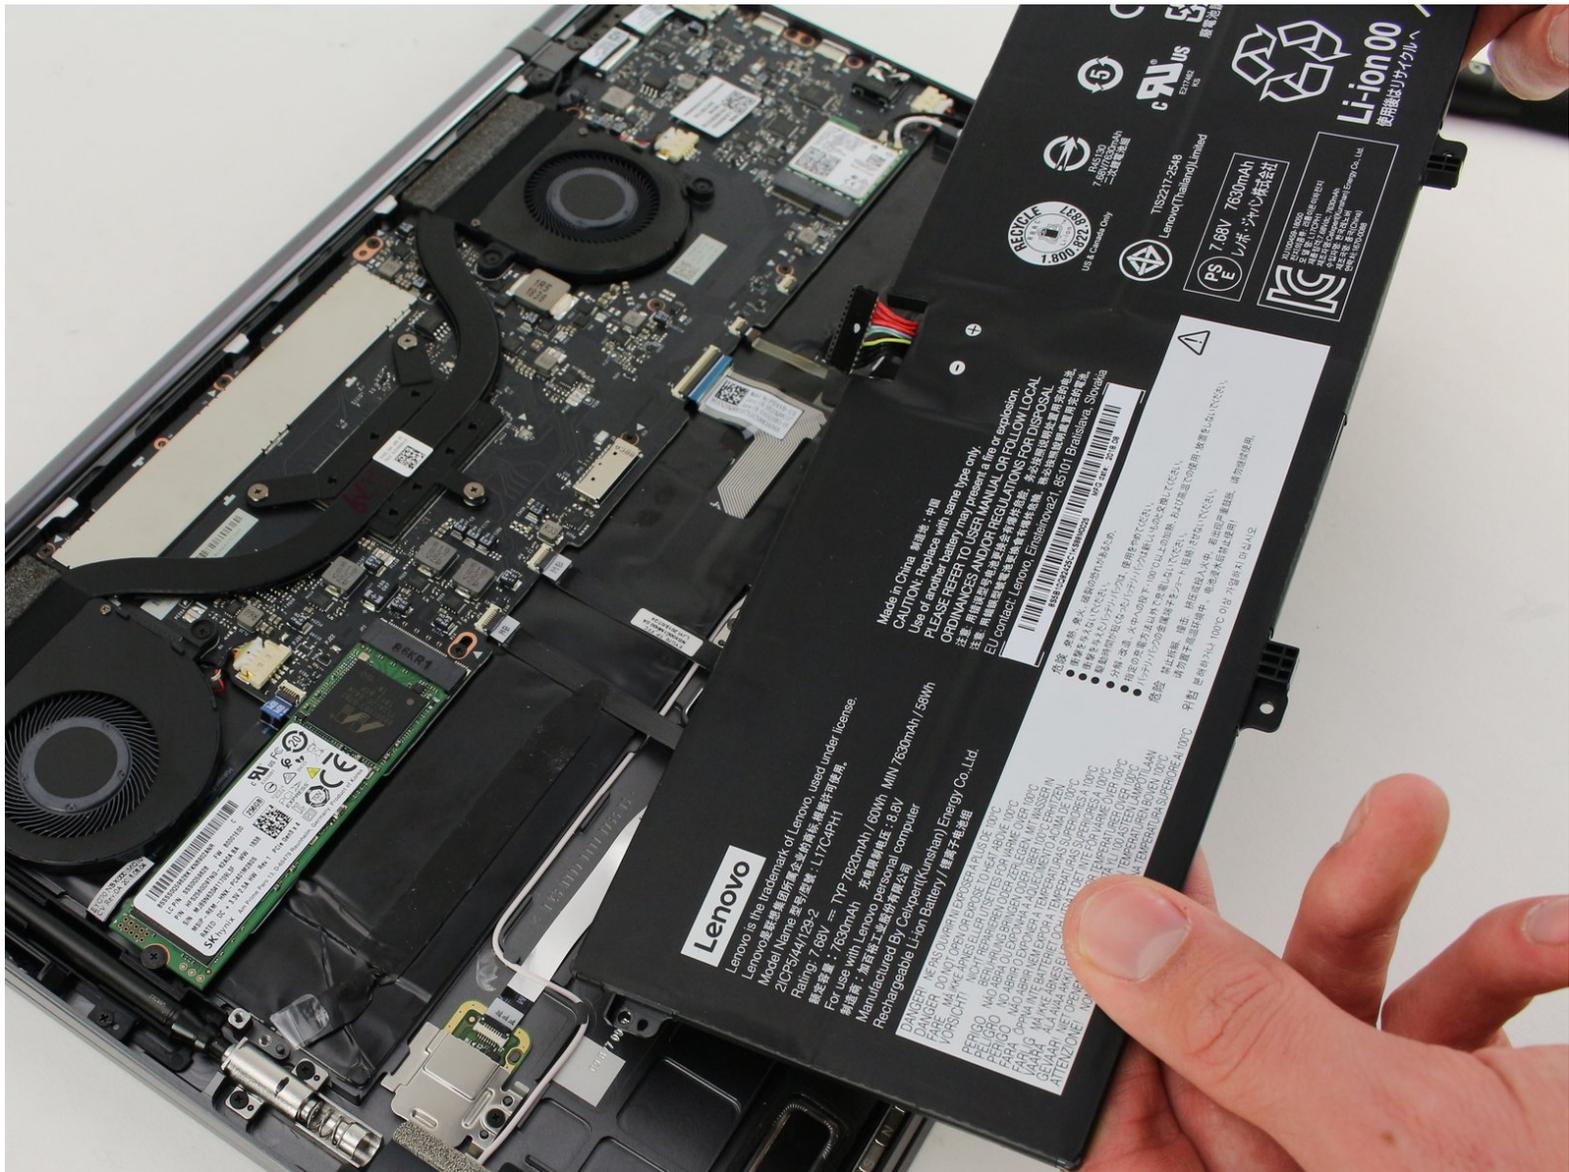

## INTRODUCTION

With this guide, replacing your Lenovo Yoga C930-13IKB battery is quick and simple. Batteries generally deteriorate over time or have complications within their life span. This can result in low battery life and difficulty in holding charge. Check out this [troubleshooting guide](#) for more information on what might be wrong with your battery.

This guide is required for when your battery needs replacing due to quickly dying, failing to charge, or an unresponsive battery. You will remove the back cover first to access the battery, and then remove all fasteners and connections that keep the battery in place. The tools required for this guide are a T5 Torx screwdriver, a Phillips #00 screwdriver, and plastic opening tools.

---

### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Back Cover



- Flip the device over so that the underside is facing up.
- Remove the six 3.5 mm T5 Torx screws.

## Step 2



- Pry off the back cover using the plastic opening tool.
- Loosen the back cover in multiple spots using the opening tool, then remove the whole back.
- ⓘ You may have to run the plastic tool along the edges until you find a small gap to separate the back cover from the laptop.
- ⚠ Do not use a metal tool when working with your device.

## Step 3



- Carefully lift the cover off with your hands.

## Step 4 — Battery



- Unplug the battery from the motherboard by pinching the cables with your fingers and tugging out with force.

- ⓘ Use the spudger for assistance.

## Step 5



- Unscrew the four 3mm screws with a Phillips #00 screwdriver.

## Step 6



**i** The battery is firmly stuck to the laptop body.

- Use an opening tool underneath the battery to pry off the adhesive strips that keep the battery in place.

**!** Be careful not to bend the battery. Breaking the battery is dangerous.

- Remove the battery with your hands.

To reassemble your device, follow these instructions in reverse order.