




# Nokia 3300B Screen Replacement

Describes how to replace the screen of the Nokia 3300B.

Written By: Chris Colwell

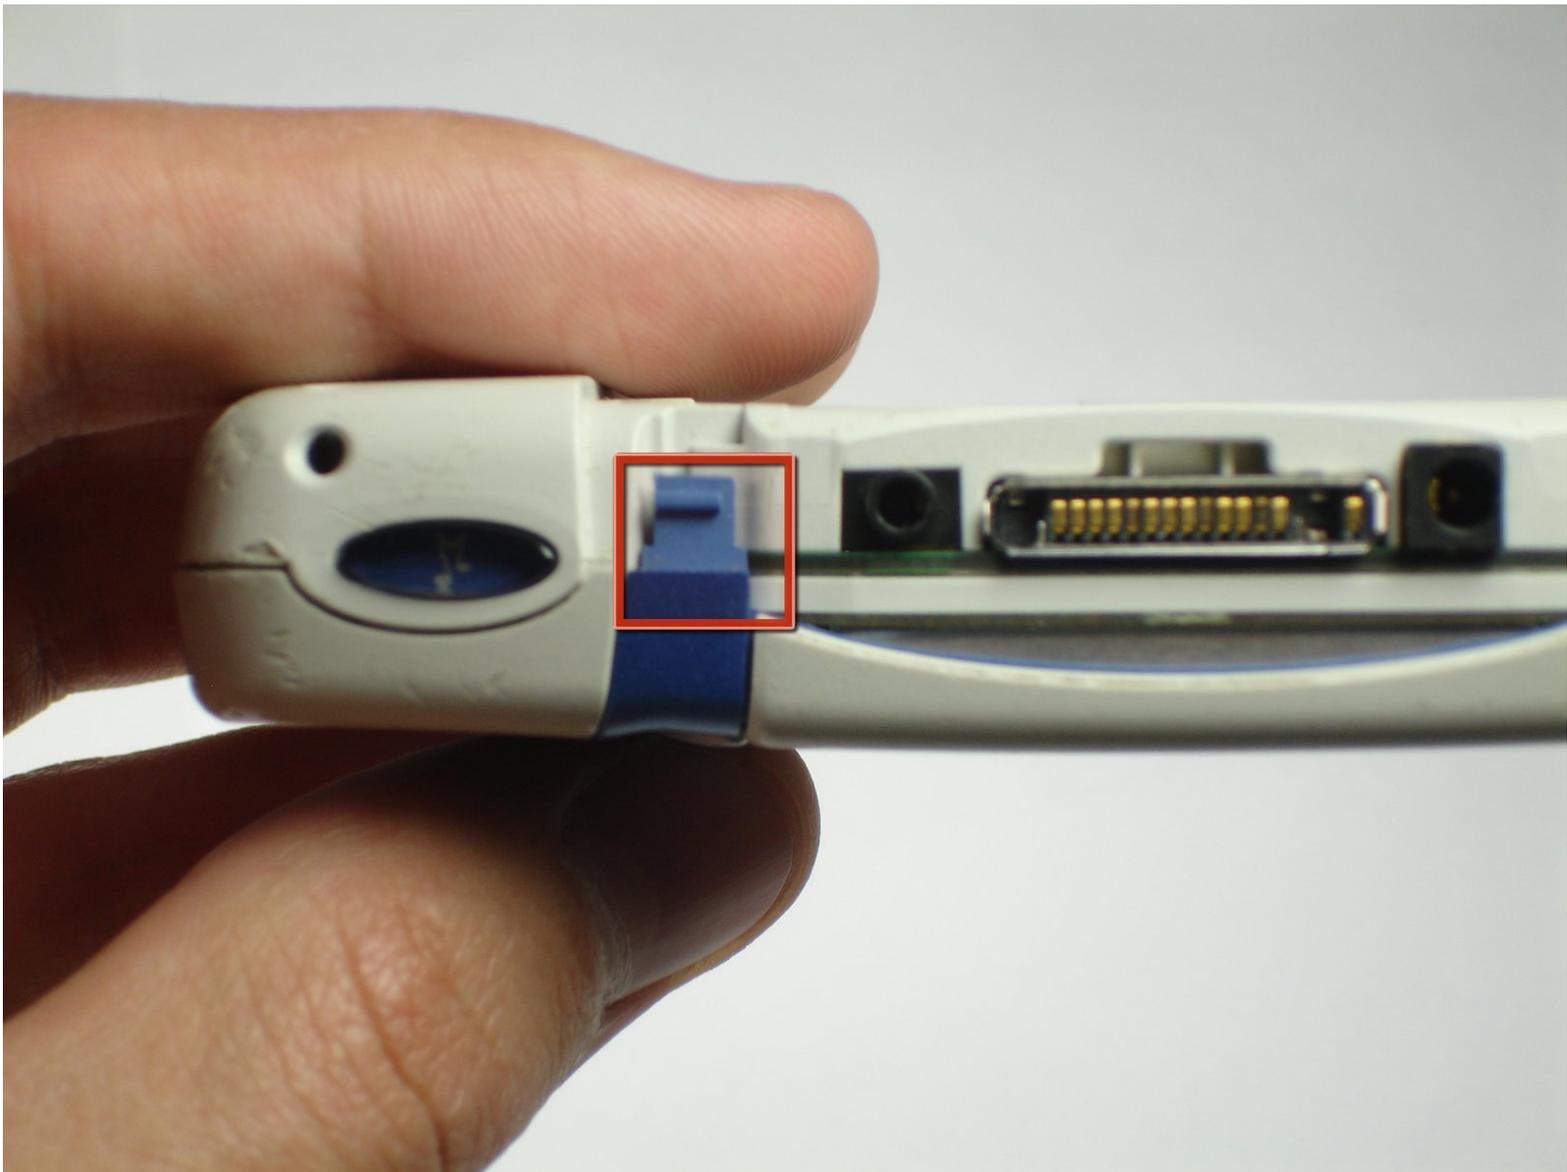

---

## INTRODUCTION

Describes how to replace the screen of the Nokia 3300B.

---

### TOOLS:

- [Tweezers](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery



- Flip the Nokia 3300B over with the back-side facing towards you.
- Gently press the button on the back of the battery cover to release the cover and slide up.

## Step 2



- Lift the battery out of the back of the phone.
- ⓘ It is easiest to lift the battery out of the phone from the right-hand side, as seen in the picture.

### Step 3 — Screen



- Gently push the blue tabs on the top of the phone out of their slots.
  - With the phone facing up, pop the blue faceplate off by using your fingernail (or some tweezers) and working your way around the phone.
- i** Note: If the blue cover does not detach easily use your finger nails to try and split it open, as seen in the picture.

### Step 4



- With the screen still facing you, remove the blue faceplate.


## Step 5



- Grab the sides of the keypad and lift it up vertically.

**⚠** If you encounter resistance while removing the keypad, be sure to lift up evenly on both sides, so the button's pin don't snap.



## Step 6

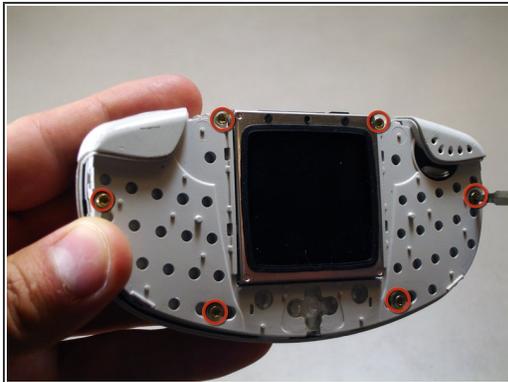

- Using the Torx T6 bit of a Phillips precision screwdriver, remove the six screws on the phone's inner protective case, as seen in the picture.



**i** NOTE: Be sure to save these screws so the phone can be reassembled later.

## Step 7

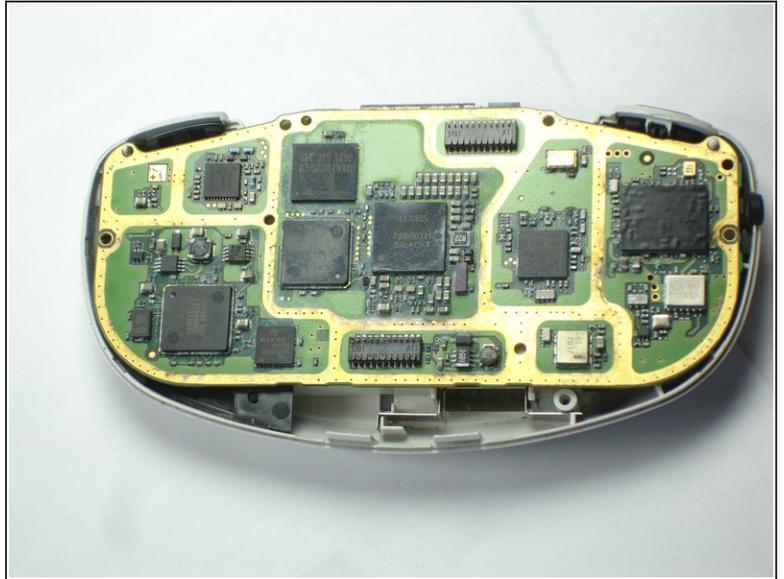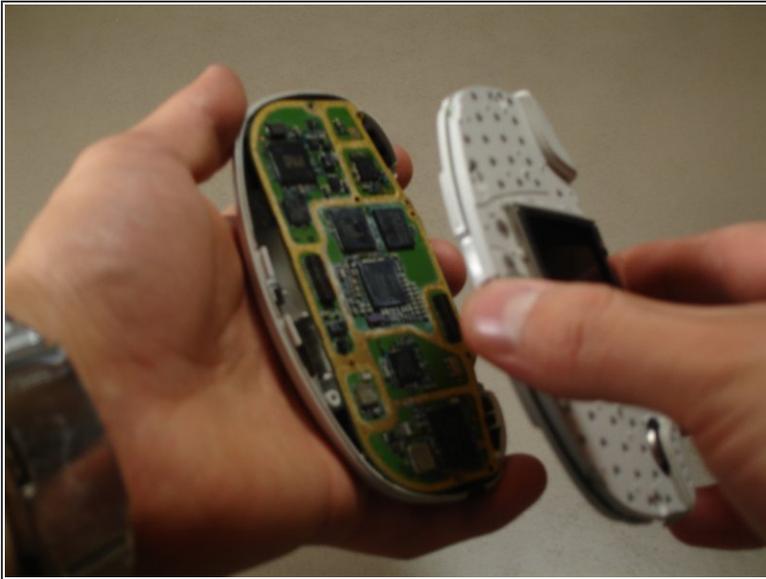

- Holding the phone with the screen facing you, remove the top half of the phone from the circuit board.


## Step 8

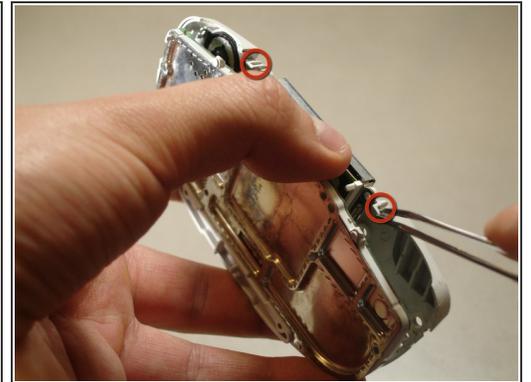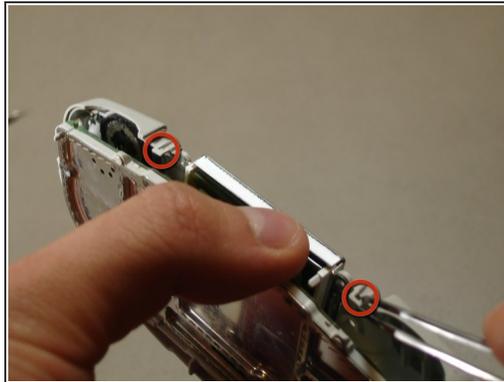

- Hold the top half of the phone with the screen facing you.
- Using a pair of tweezers, release the tabs holding the two distinct cases together.

⚠ The tabs are very fragile. Be gentle when releasing the tabs.

## Step 9

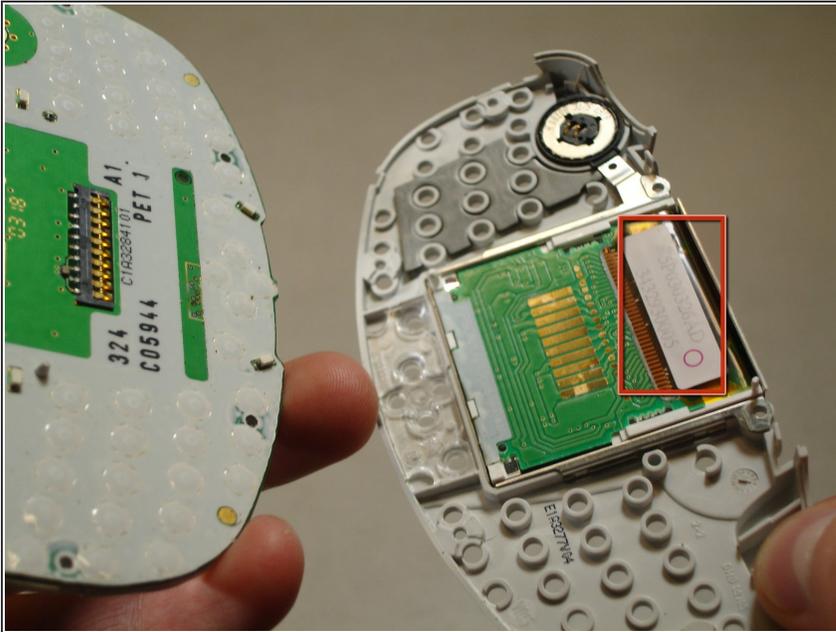

- Be sure to remove both casings so that the screen is facing down. This will ensure that the screen does not fall out of its case.
- ⓘ NOTE: The screen's part identification sticker is on the top back side of the screen. The screen will need to be replaced with the same orientation.

## Step 10



- Tilt the casing back and the screen should fall out smoothly.
- Replace the old screen with the new screen.

To reassemble your device, follow these instructions in reverse order.