




Toshiba Satellite C855-S5115 Cooling Fan Replacement

If your laptop is hot/overheating, shutting down randomly, or making a loud humming noise, your cooling fans might need to be replaced.

Written By: Claire Fletcher

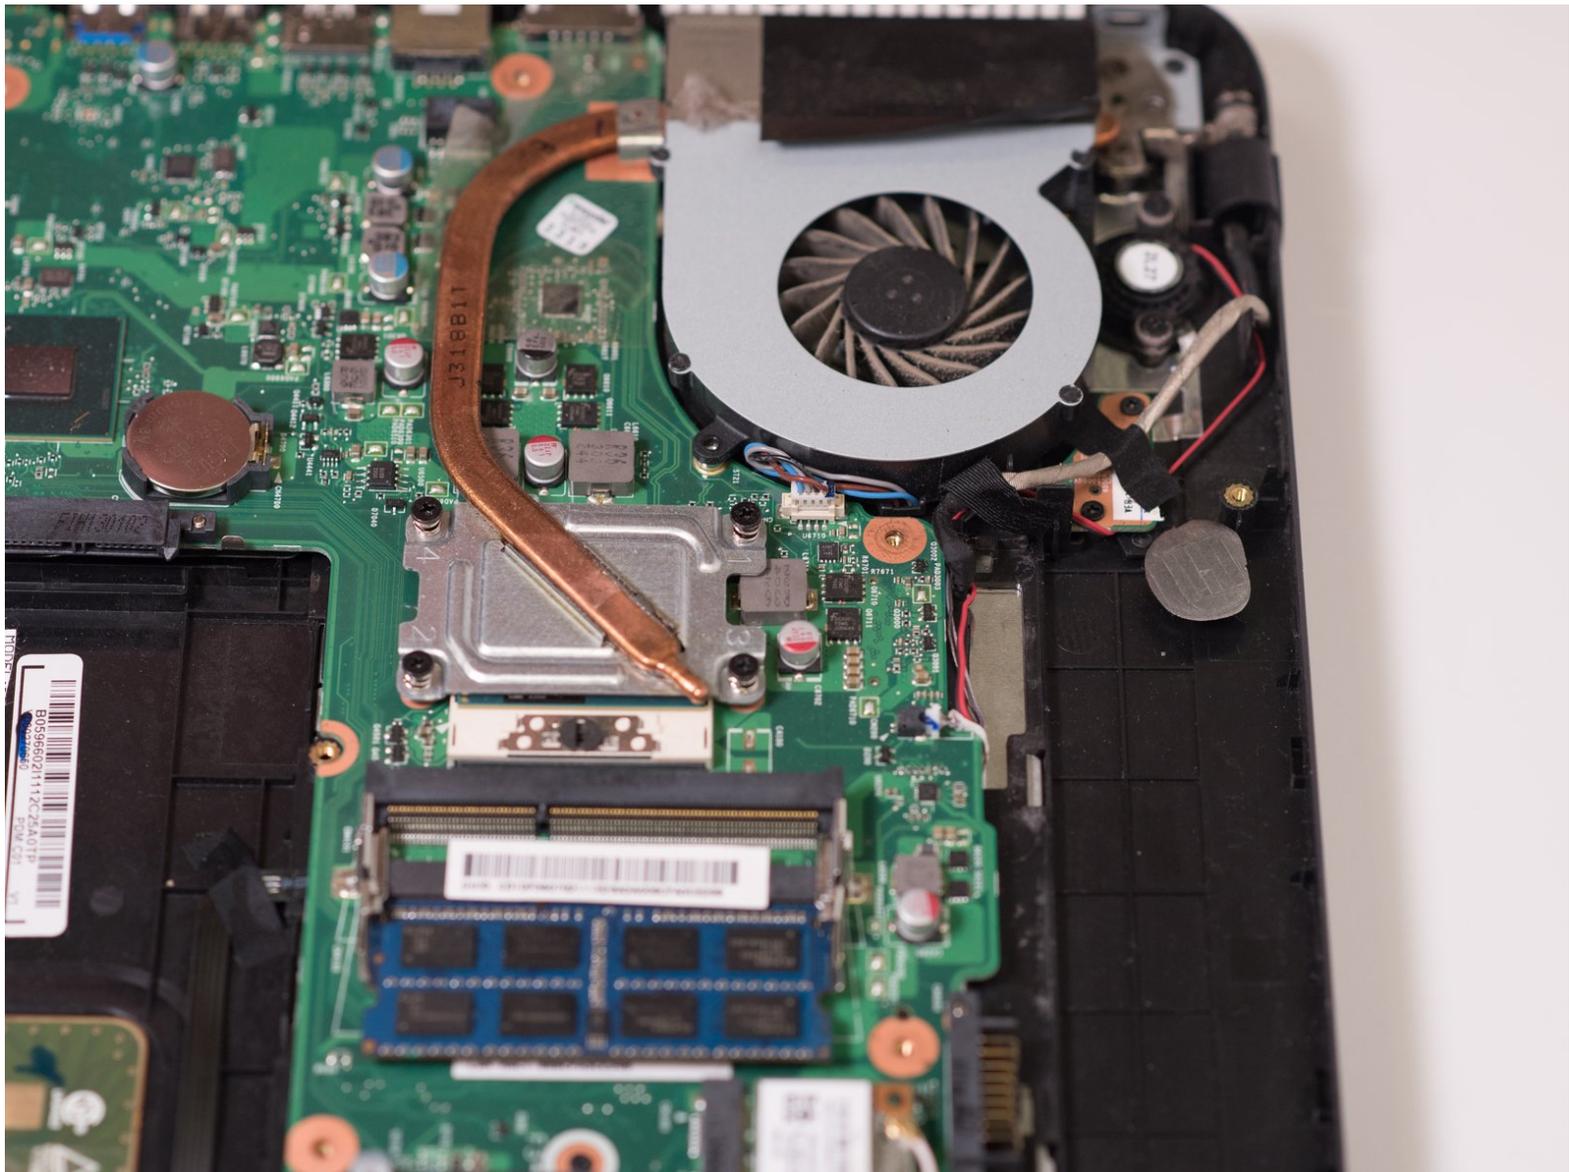

This document was generated on 2019-10-22 06:37:17 AM (MST).

INTRODUCTION

Keeping your laptop cool is important to the speed and functionality of the device. This guide will show you how to replace your Toshiba's cooling fans.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery




- Use two fingers to pull the ridged lock tabs on the bottom of the computer toward the edges. This will unlock the battery.

Step 2



- Holding the left tab in place, use the groove located between the two tabs to pry the battery up and out.

Step 3 — Cooling Fan

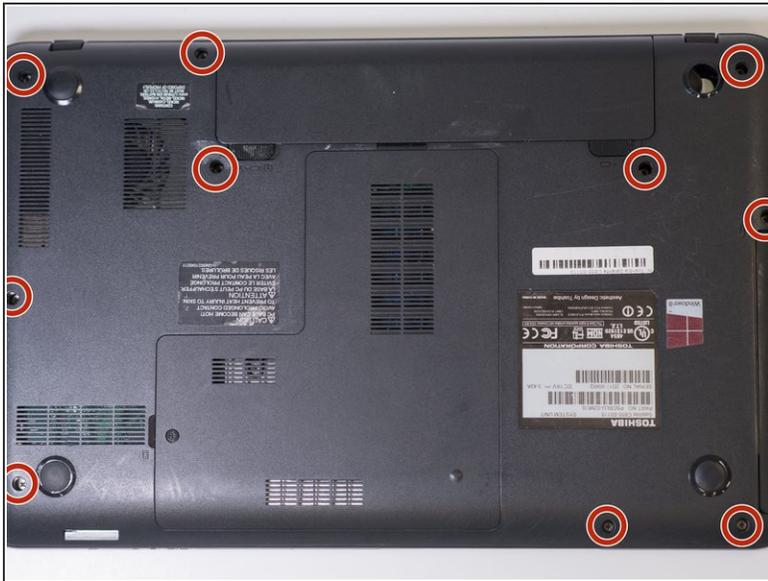

- Remove the ten 7mm Phillips screws located on the bottom of the laptop using the Phillips #1 screwdriver.

Step 4



- Remove the 7mm Phillips screw located on the easy access panel on the bottom of the laptop using a Phillips #1 screwdriver.

Step 5




- Insert a plastic opening tool and follow the edges to open the panel.

Step 6




- Remove the three 3.5mm Phillips #1 screws indicated in the picture.

Step 7

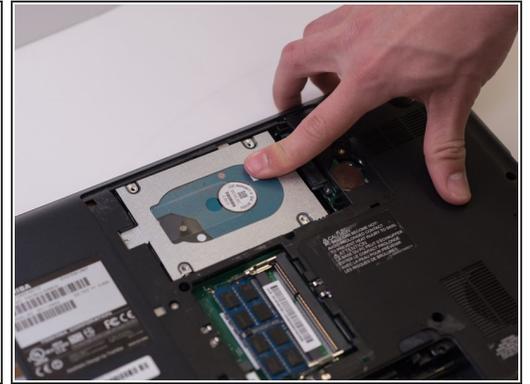

- Remove the 3mm Phillips #1 screw holding the HDD in place, then slide the HDD towards the sticker.

Step 8

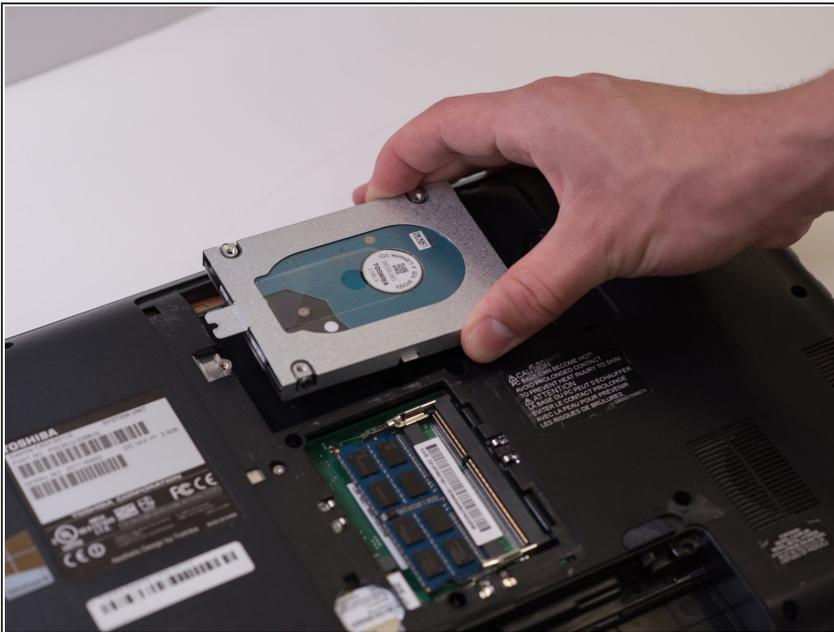


- Pull the HDD out.

Step 9




- Insert a plastic opening tool in between the panel and the main assembly.

Step 10

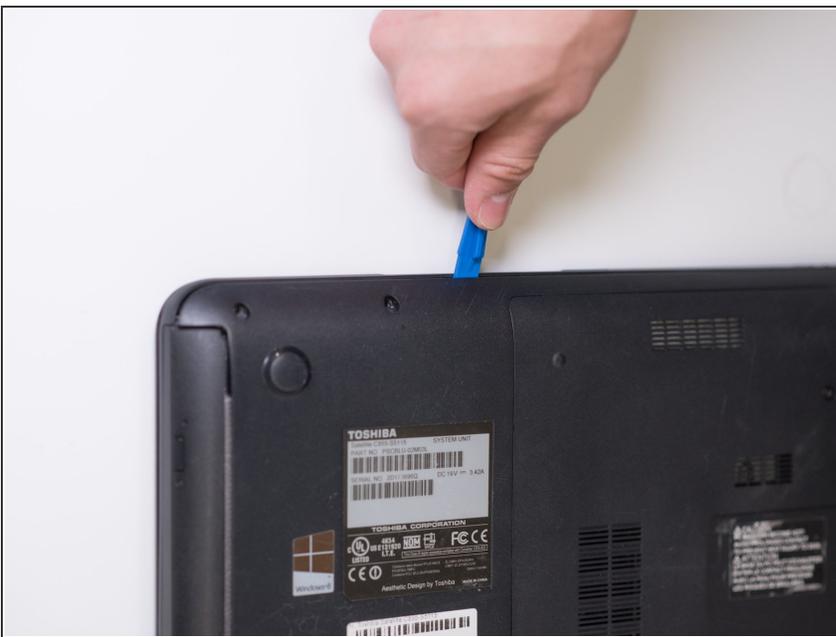


- Work your way around the laptop to remove the base plate.

Step 11

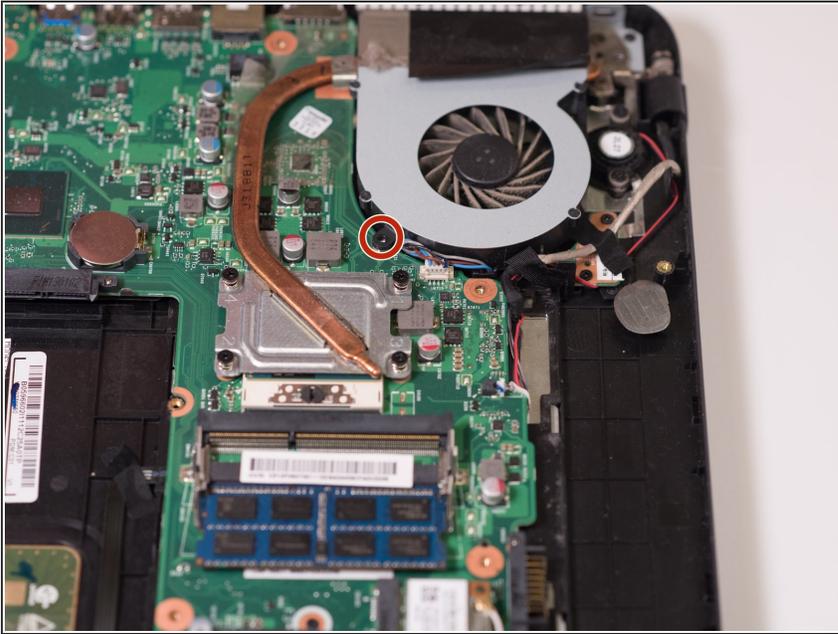


- Remove the single 1.5mm Phillips #1 screw located next to the cooling fan.

Step 12

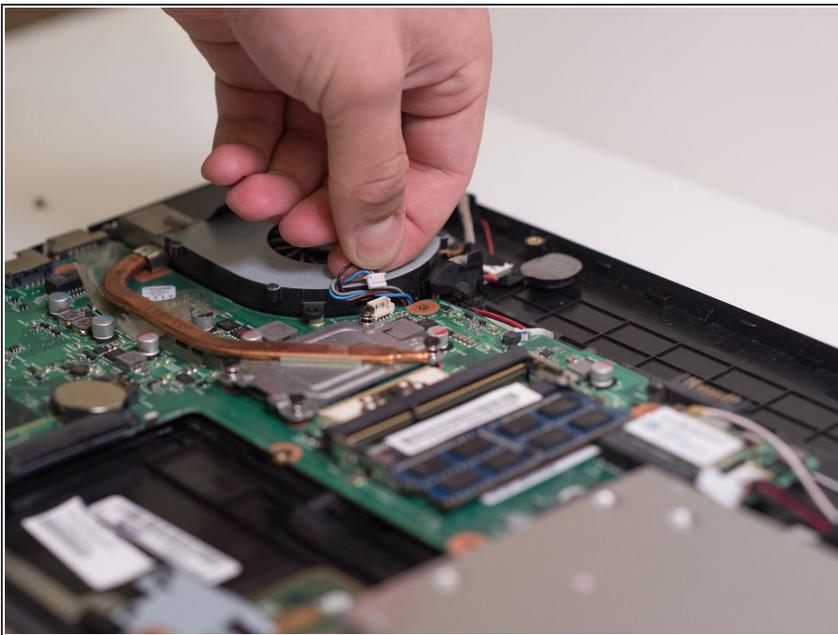

- Gently pull out the two pin connector.

Step 13

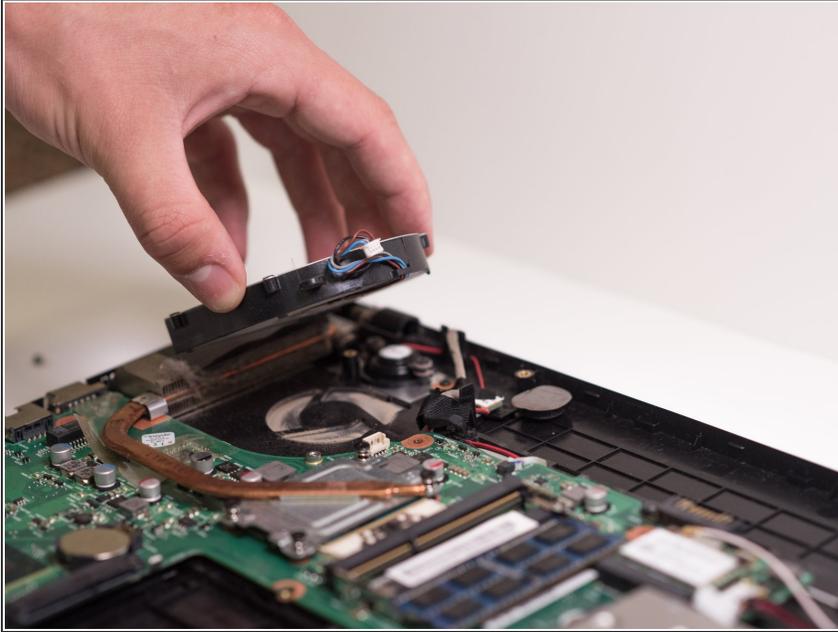

- Remove the CPU fan.

To reassemble your device, follow these instructions in reverse order.