




Wahl Lithium Ion Trimmer Lithium Ion Battery Replacement

This single battery that sits on top of the circuit may die or become un-chargeable, our guide will explain how and where to connect wires and what specific battery to purchase.

Written By: nathan

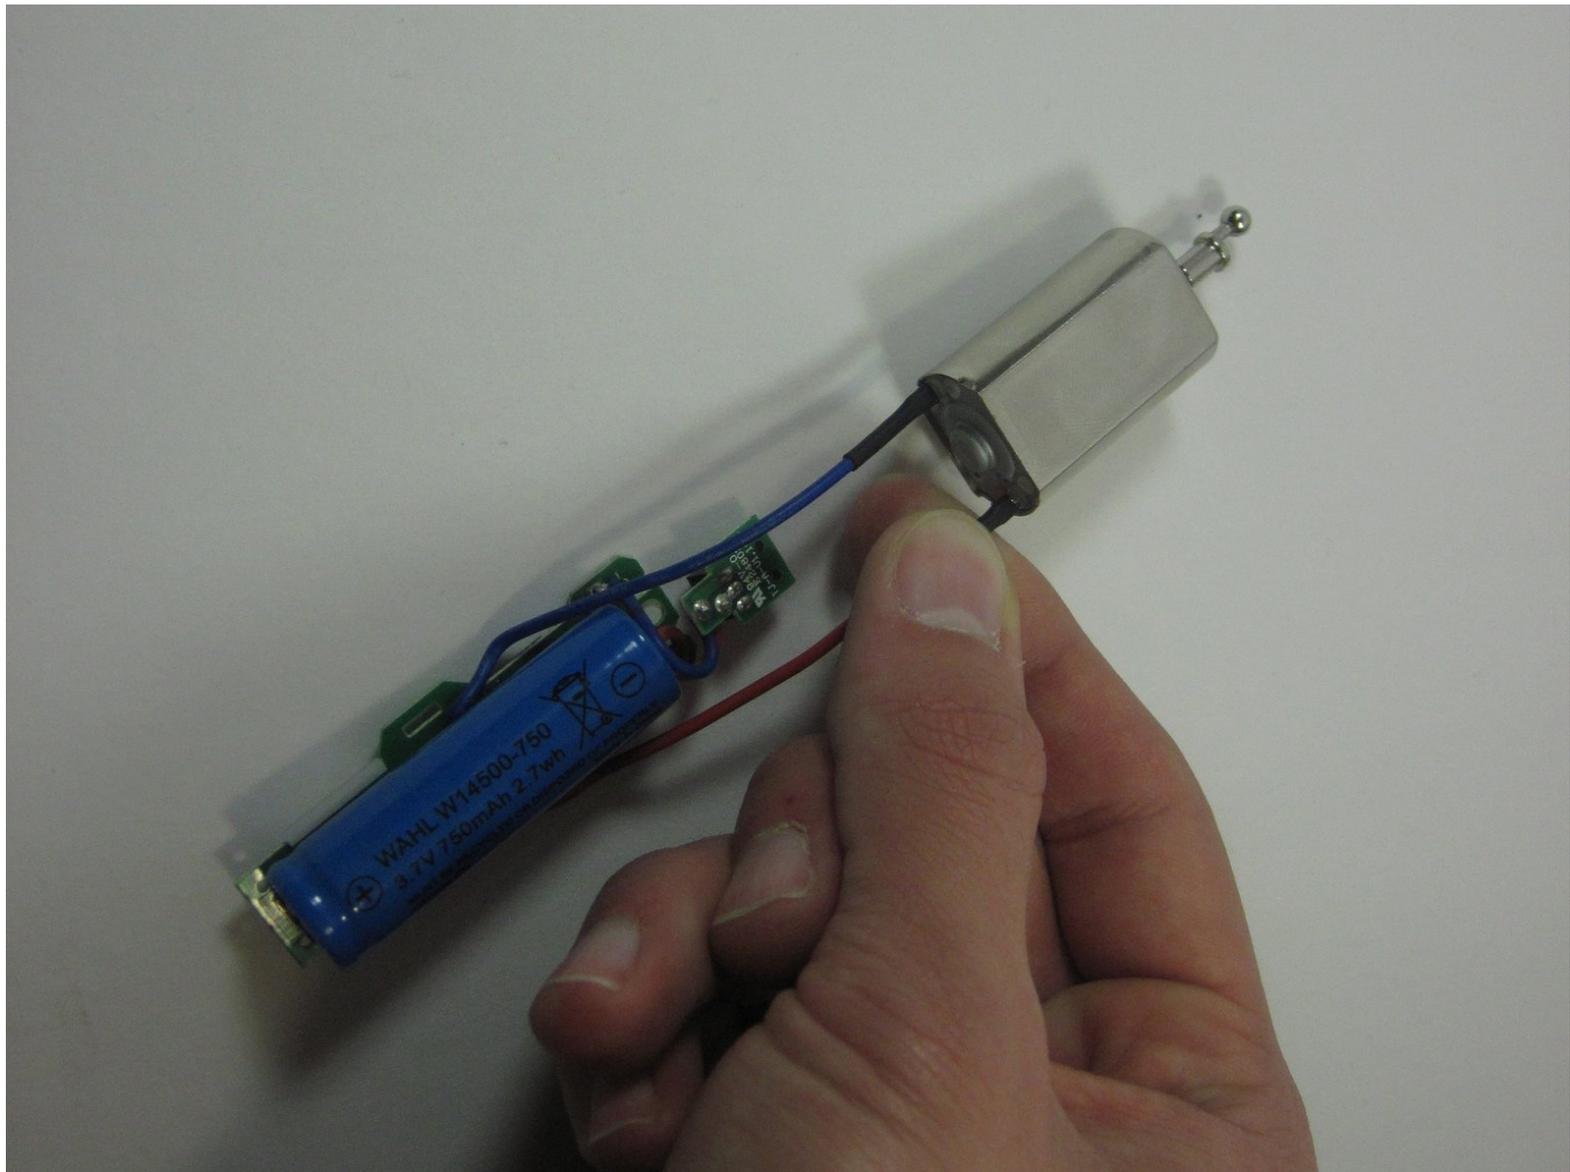

 **TOOLS:**

- [Phillips #00 Screwdriver \(1\)](#)
-

Step 1 — Disassembling of Wahl Lithium Ion Trimmer



- Begin by removing the rubber grip along the handle.

Step 2



- Remove the screws from the top to take the metal piece and plastic part off.

Step 3




- Pry open the plastic cover into two separate pieces. The plastic is very durable so don't worry about breaking it upon prying it open.

Step 4




- Here is the final result. This gives access to the switch button, chip set, battery and motor.

Step 5 — Lithium Ion Battery Replacement

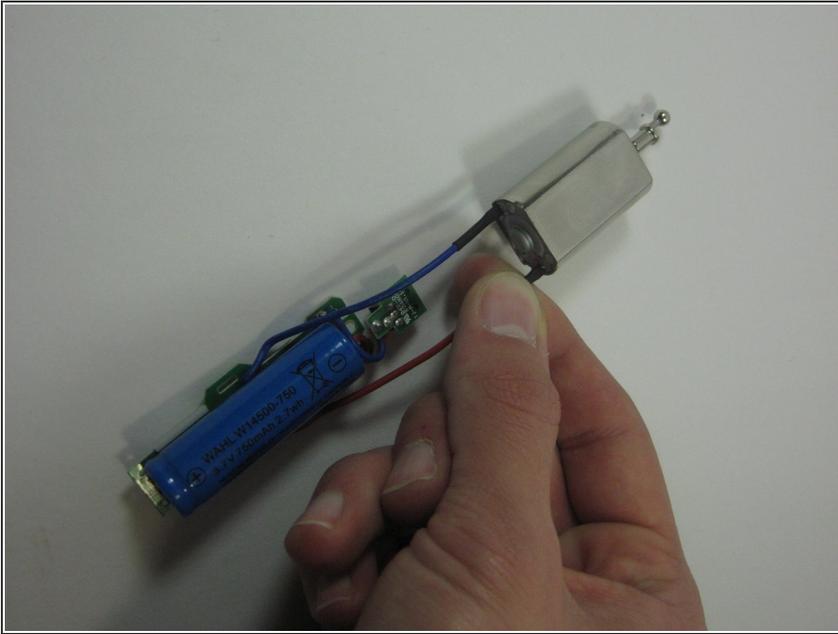


- Remove the chip set, motor and battery from the plastic body. This photo shows the motor and wires connecting it to the battery.

Step 6

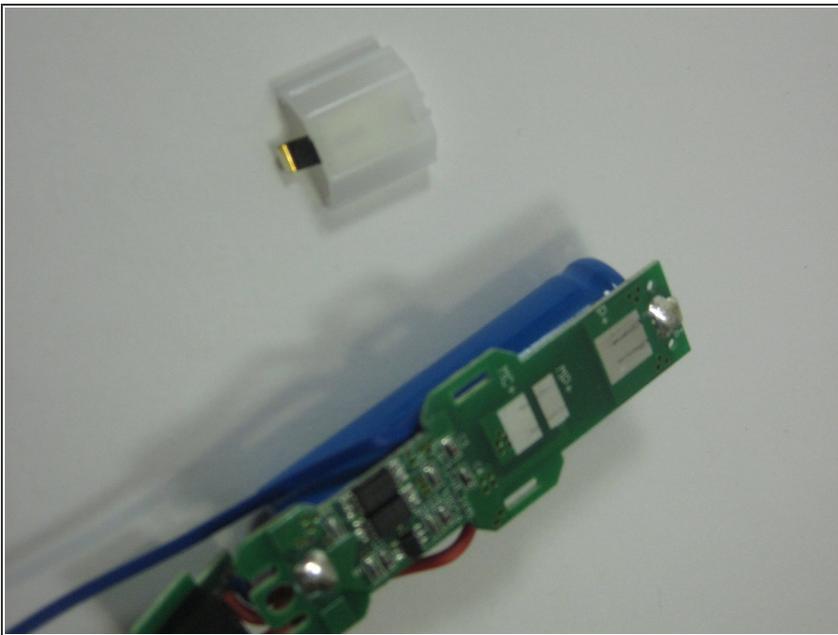

- Remove the white plastic cover over the chip set allowing the battery to be taken off.

Step 7

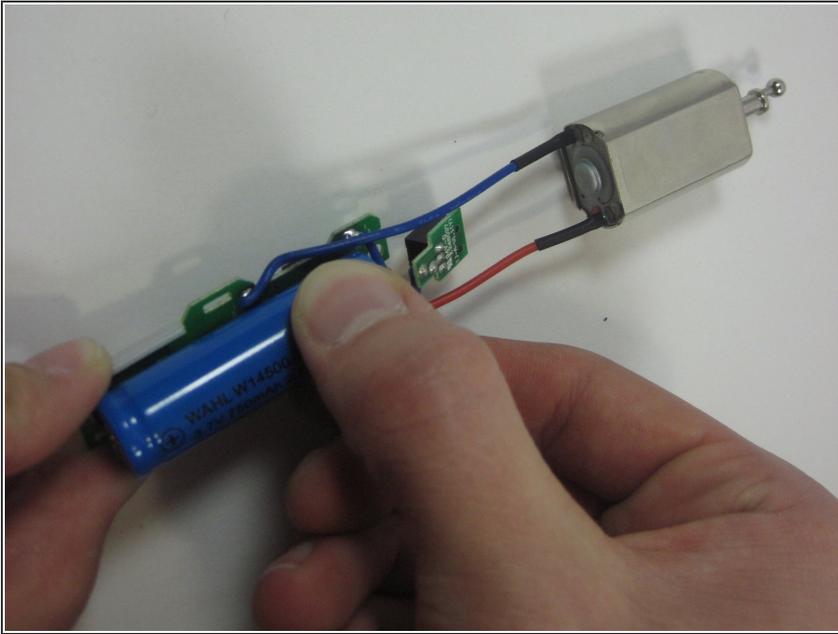

- Remove the Lithium Ion Battery and replace it with the new one that you purchased.

To reassemble your device, follow these instructions in reverse order.