



# Ninja Mega Kitchen System BL770 Power Cord Replacement

How to replace the Ninja Mega Kitchen System BL770 power cord.

Written By: Tommee Walker



---

## INTRODUCTION

If your blender seems to have no power, the power cord may be damaged. This guide will show you how to disassemble and show you two possible problems and how to solve them. For soldering help, follow the [How to Solder and Desolder Connections](#) guide.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Soldering Iron](#) (1)
  - [T10 Torx Screwdriver](#) (1)
-

## Step 1 — Circuit Base




- Remove the five screws (13mm long, 6mm head) attaching the Base Cover using a Phillips screwdriver (Ph2).
- Remove the two screws (13 mm long, 6mm head) attaching the Base Cover using a T10 screwdriver.

## Step 2




- Carefully remove the second layer from the base. You will not need a screwdriver for this step.

### Step 3

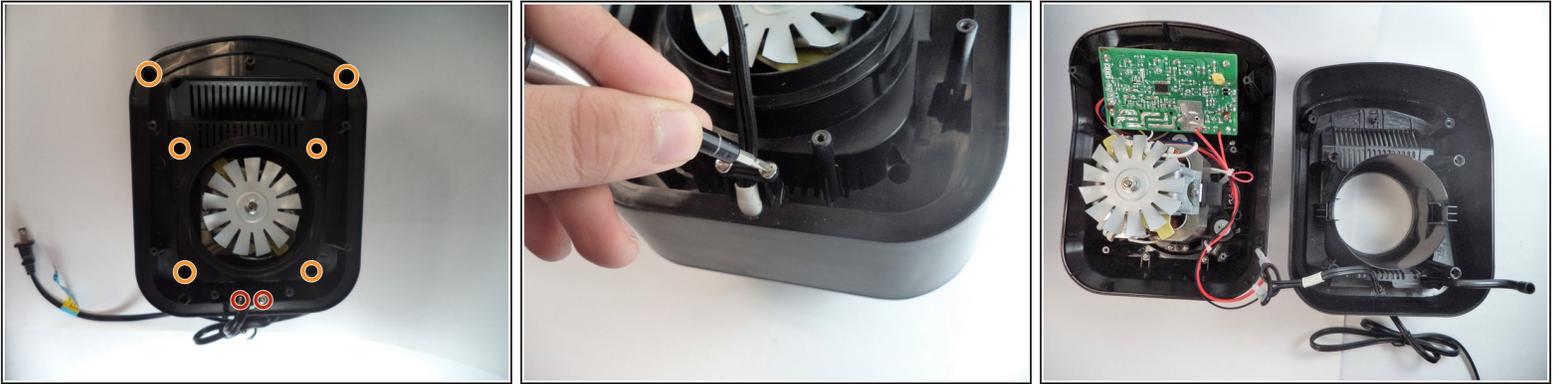

- Remove the 2 screws (13mm, 6mm head) connected to the plastic piece holding down the power cord.
- Then remove the additional 4 screws (13mm, 6mm head) and 2 screws (11mm, 5mm head) securing the base.
- Carefully lift the base up from the rest of the blender.

### Step 4

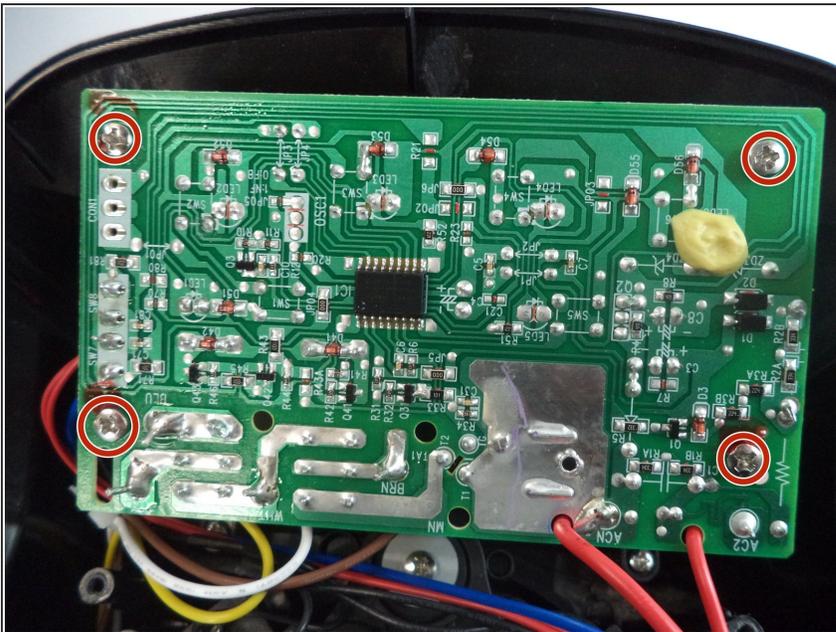

- Remove 4 screws (11mm, 4mm head) connecting the circuit board to the base.



To reassemble your device, follow these instructions in reverse order.