




# Oregon Scientific Meep! 4.0 Speakers Replacement

Follow this guide to replace the speakers of your Oregon Scientific Meep! 4.0.

Written By: Jess Forte

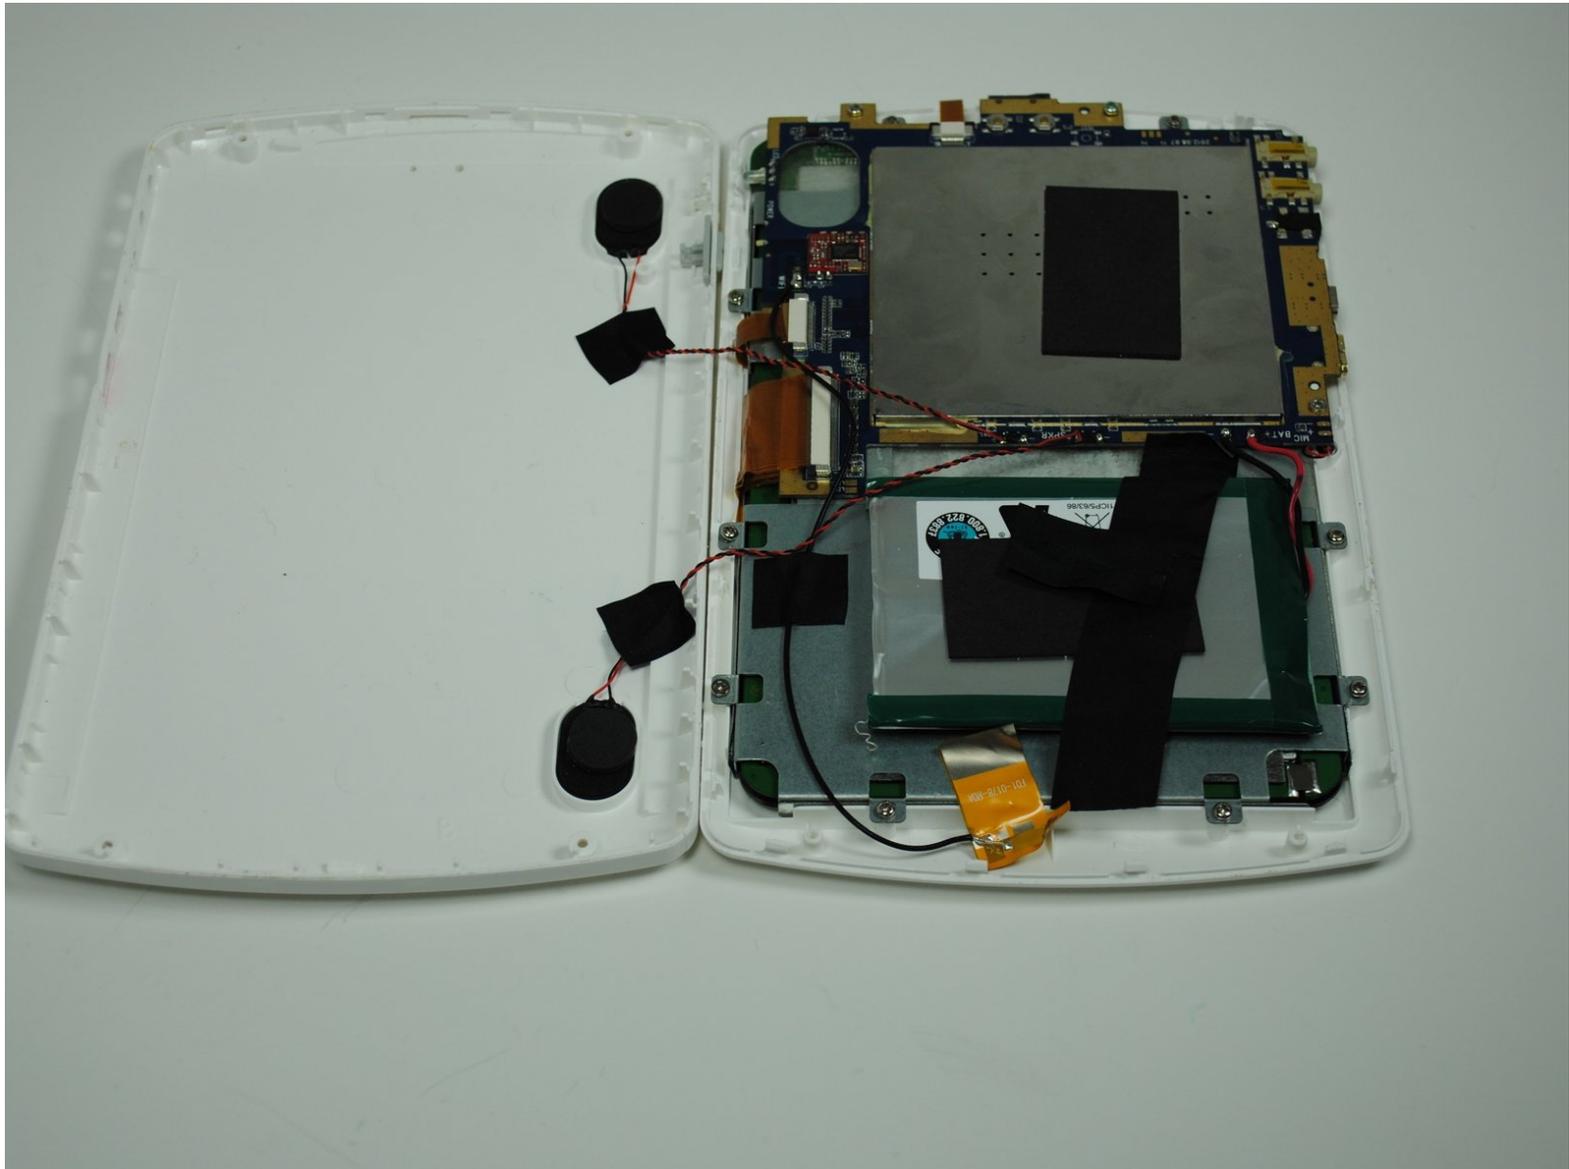

---

## INTRODUCTION


By following the steps below, you will be able to remove and replace the speakers of your Oregon Scientific Meep! 4.0.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
-

## Step 1 — Oregon Scientific Meep! 4.0 Disassembly

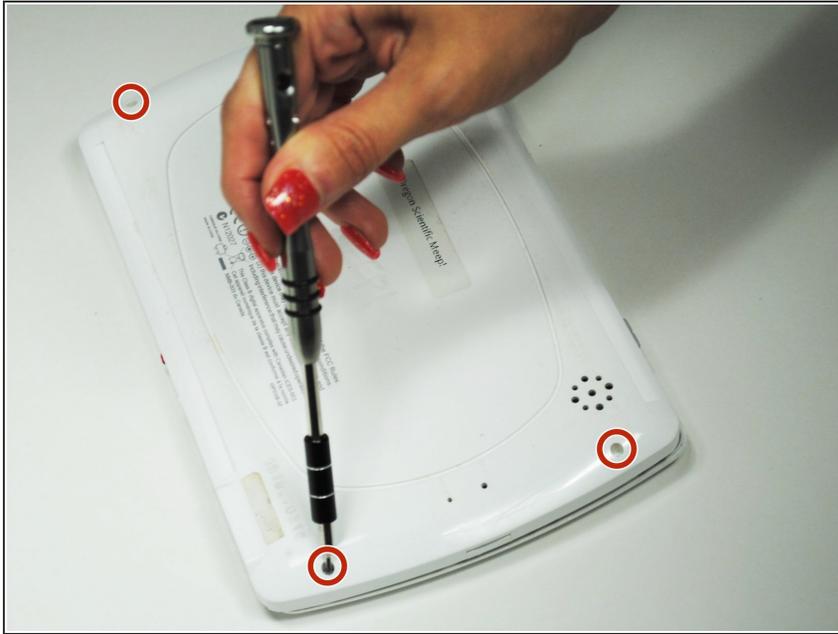



- Use a screwdriver to remove the four 7.0 mm Philips #00 screws from the back of the device.

## Step 2





- Use a plastic opening tool to detach the clips on the inside of the device.

### Step 3 — Speakers

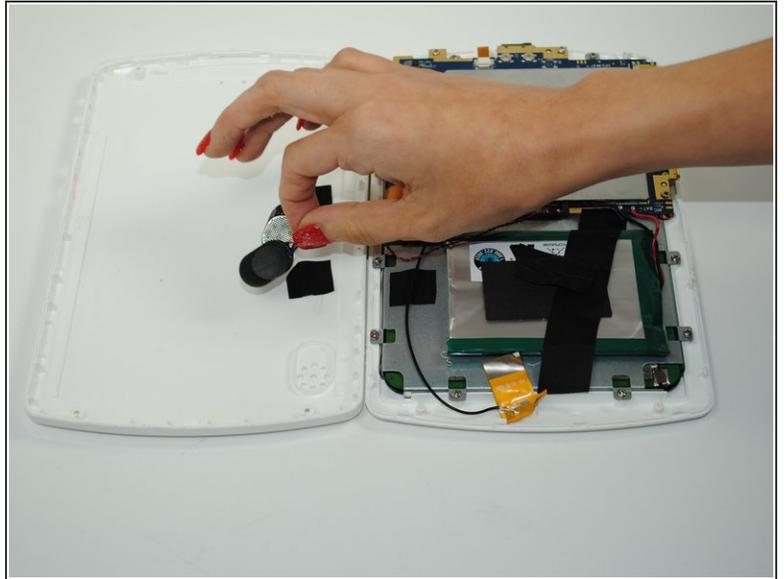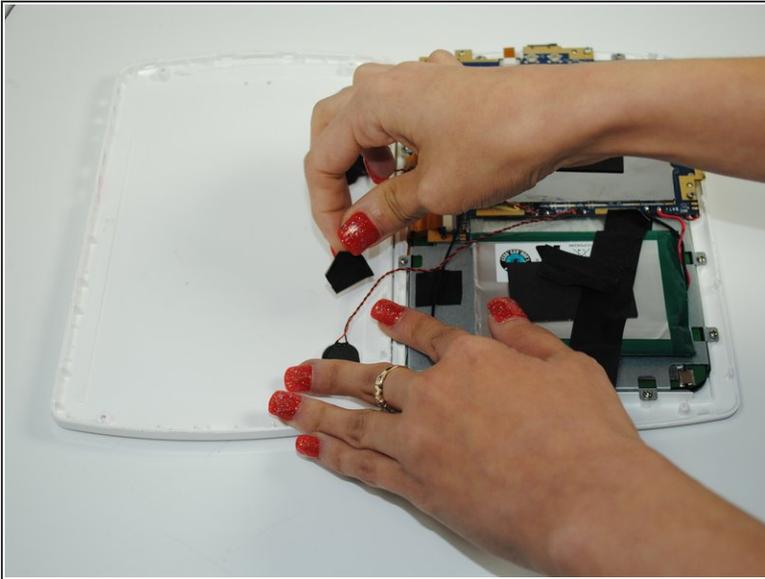

- Remove the electric tape holding the wires of the speakers in place and gently pull the speakers out of their slots in the device.

### Step 4

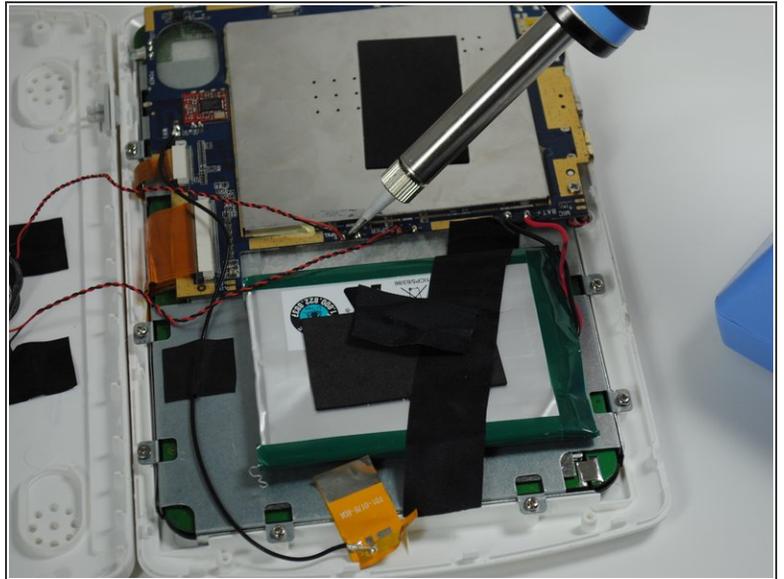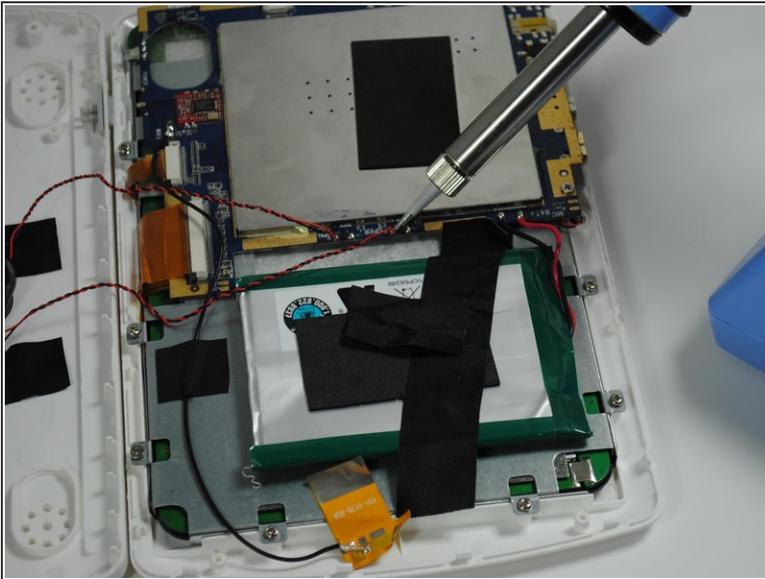

- Use a soldering station to separate the wires from the speakers.

To reassemble your device, follow these instructions in reverse order.