




Acer Aspire V5-571-6889 Motherboard Replacement

Follow this guide if you want to replace the mother board in an Acer Aspire V5-571-6889.

Written By: Samuel Miguel

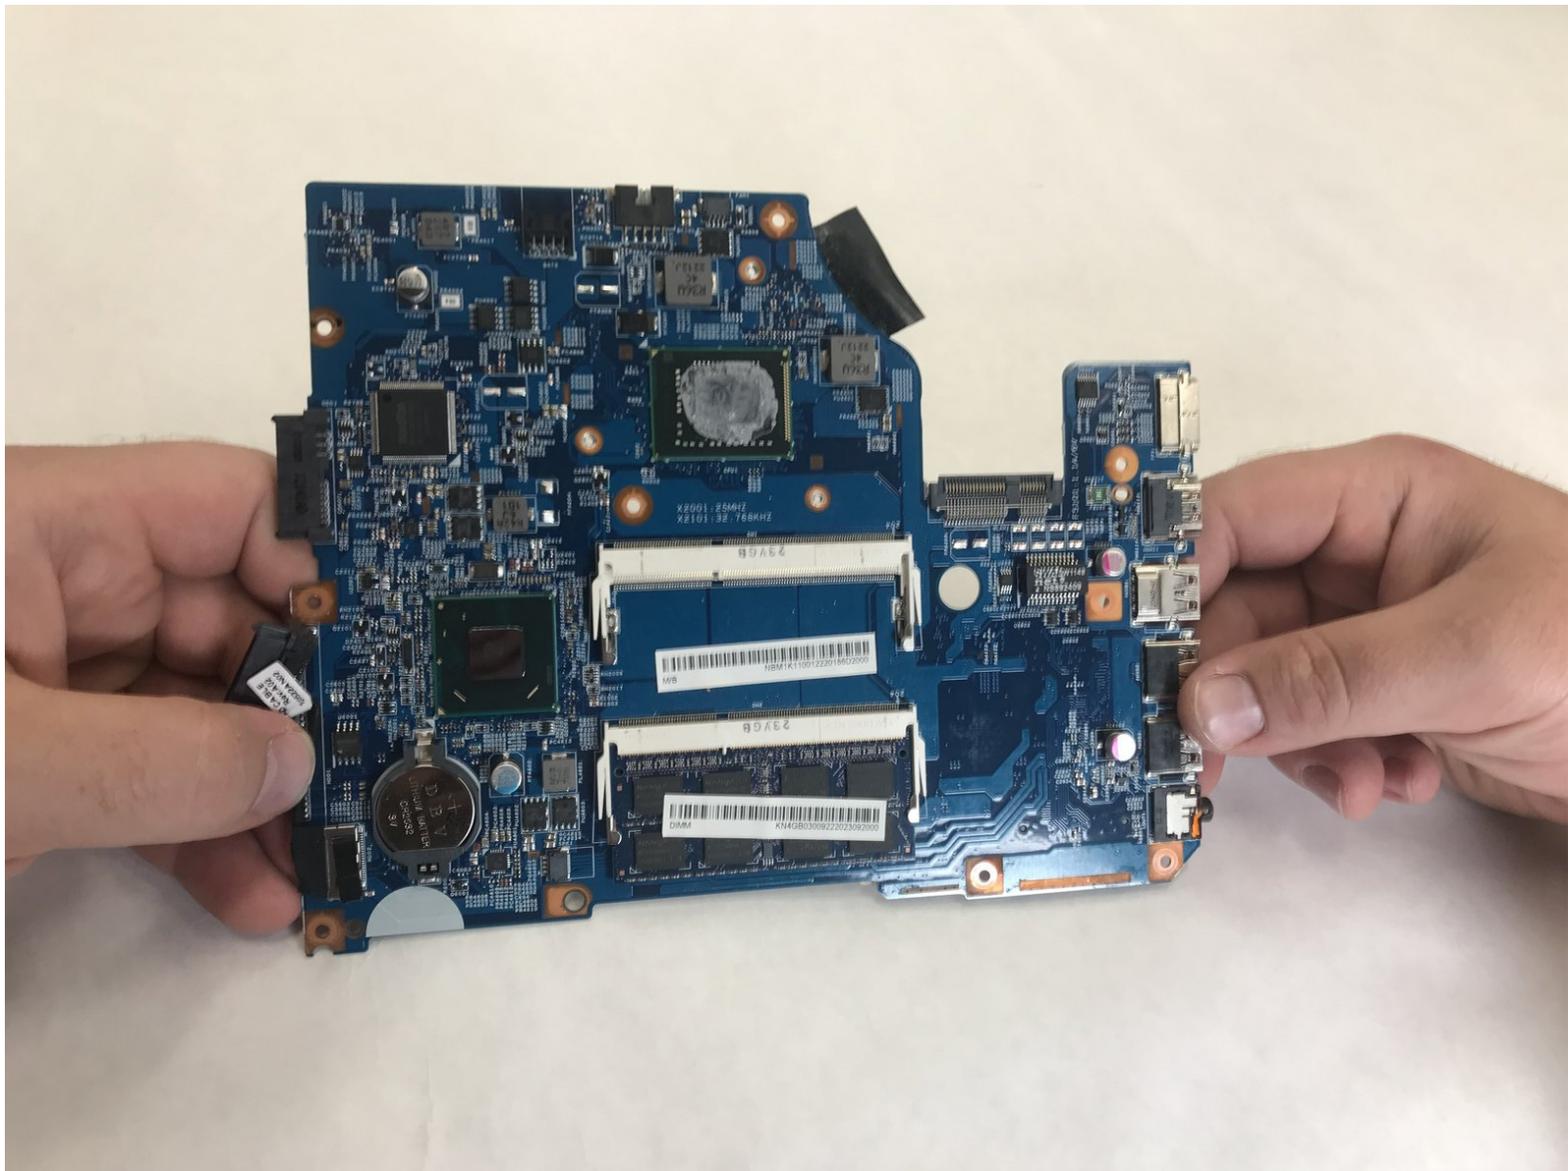

INTRODUCTION

This guide shows the necessary steps to replace the Acer Aspire V5-571-6889 Motherboard. Make sure to turn off the computer before starting. The room needs to have enough light. Make sure to clear the table. Please perform these steps out of reach of children.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Prying and Opening Tool Assortment](#) (1)
- [Tweezers](#) (1)

PARTS:


- [Acer Aspire V5-571 1TB 5400RPM 2.5" 9.5mm height Laptop hard drive](#) (1)
- [Acer Aspire V5-571-6889 Motherboard](#) (1)

Step 1 — Hard Drive




- Flip laptop over so that the back is facing upward.
- Push switch to the right.
- Pull battery away from the laptop.

Step 2

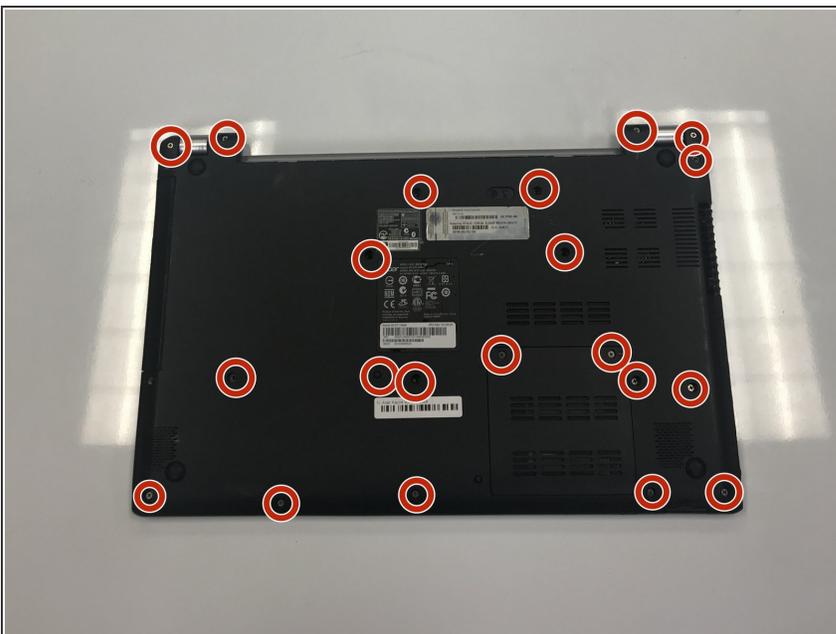

- Use a #0 Phillips head screw driver to remove all of the screws.

Step 3

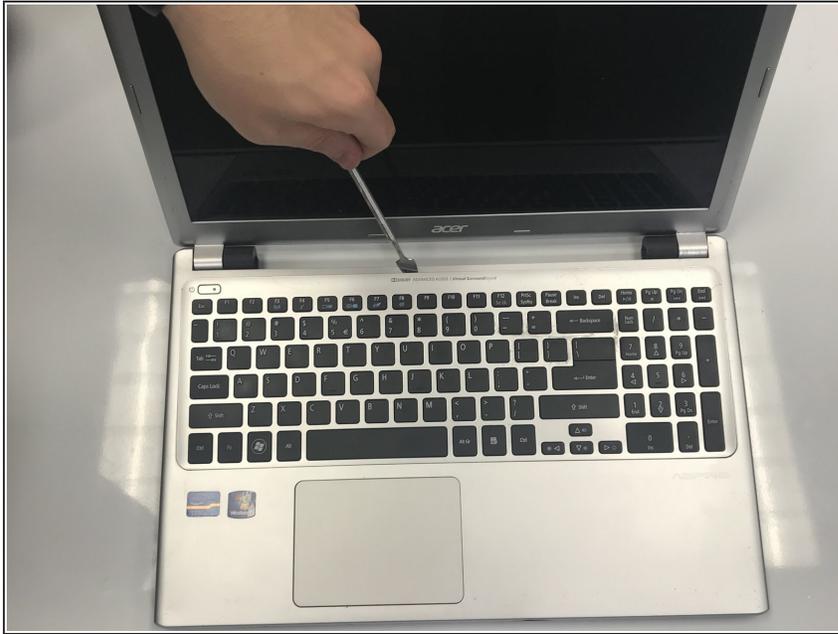

- Flip laptop back over.
 - Open the laptop.
 - Wedge a prying tool between the keyboard and laptop body seam to remove keyboard.
- i** Be careful not to bend the keyboard too much or break the tabs that connect the keyboard to the laptop.

Step 4




- Gently lift keyboard.
- Disconnect keyboard from the laptop.

Step 5




- Use a prying tool to remove the upper cover.

Step 6

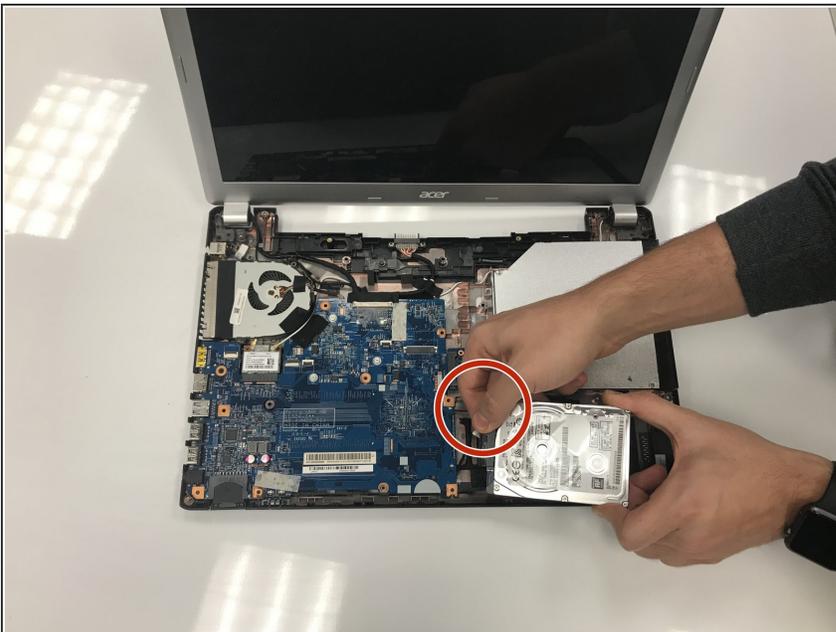

- Locate the hard drive.
- Lift the hard drive.
- Disconnect hard drive.

Step 7 — Motherboard

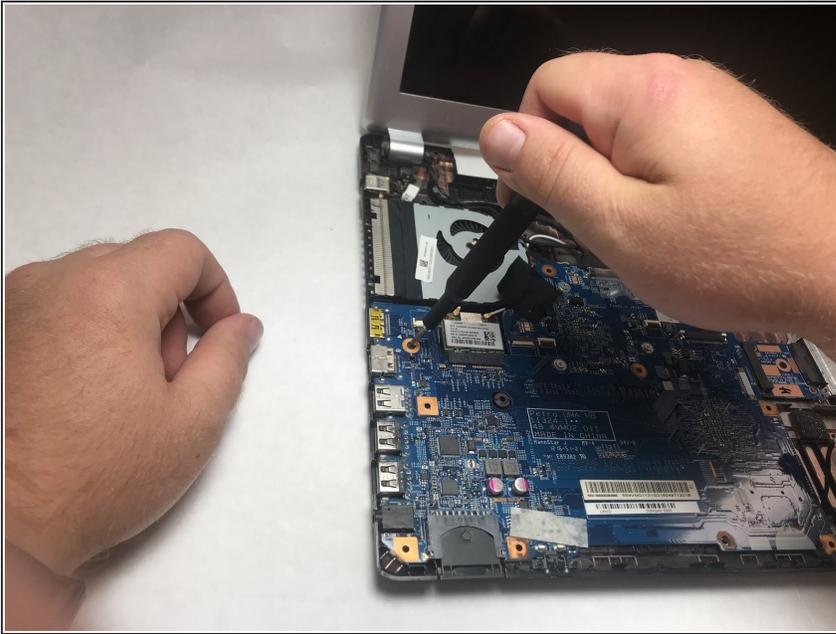


- Use #0 Phillips screw driver to remove the 2.5 x 5 mm with screw attached to the Motherboard.

Step 8




- Use Tweezers to remove the antenna cables attached to the Wi-Fi card.

Step 9

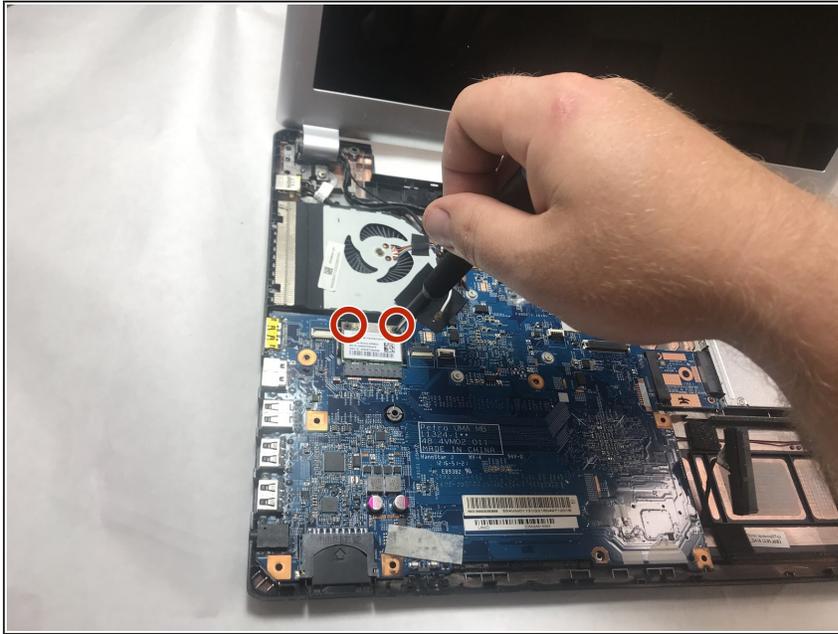


- Use #0 Phillips screw driver to remove the two 2.5 x 5 mm Phillips #0 screws connecting the Wi-Fi card to the Motherboard.

Step 10

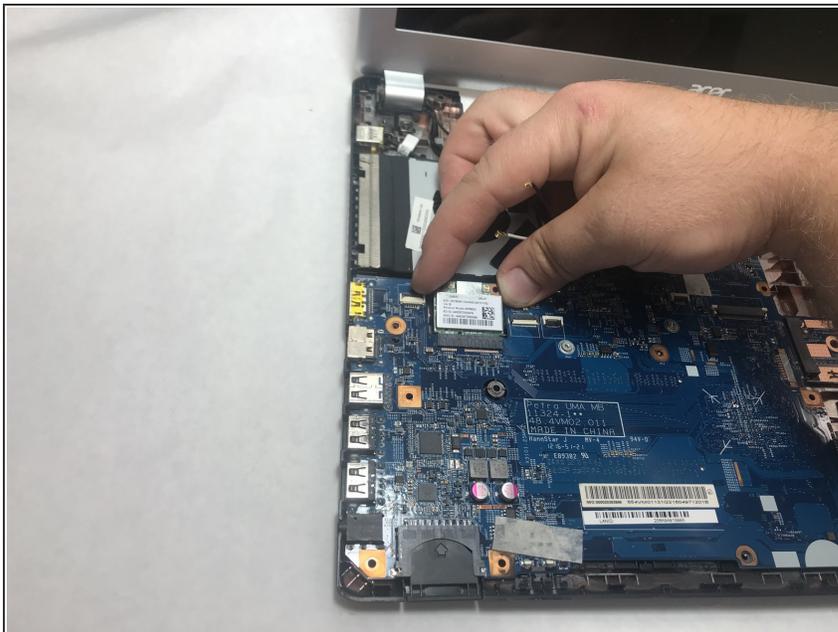


- Lift and pull out the Wi-Fi card.

Step 11

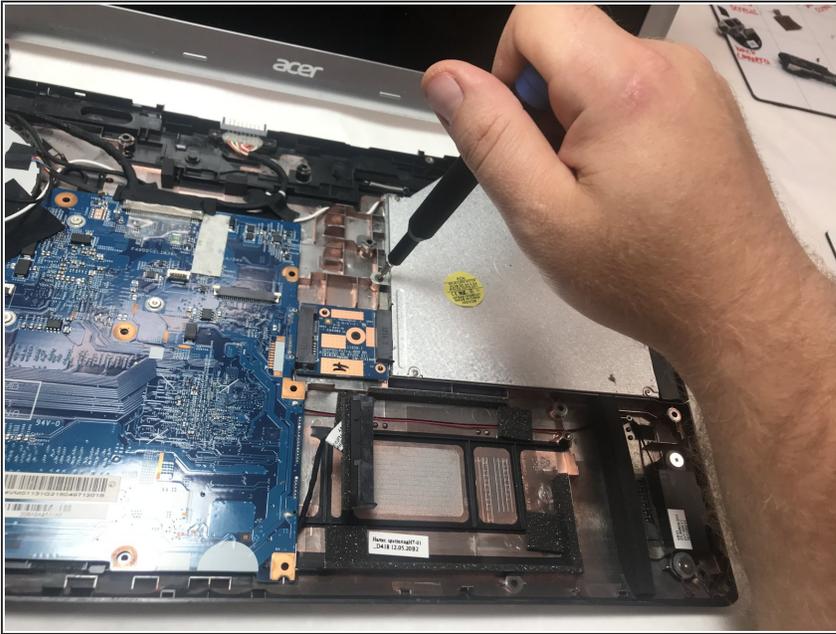


- Use #0 Phillips screw driver to remove the 2.5 x 5 mm Phillips #0 screw on the CD-ROM Drive.

Step 12

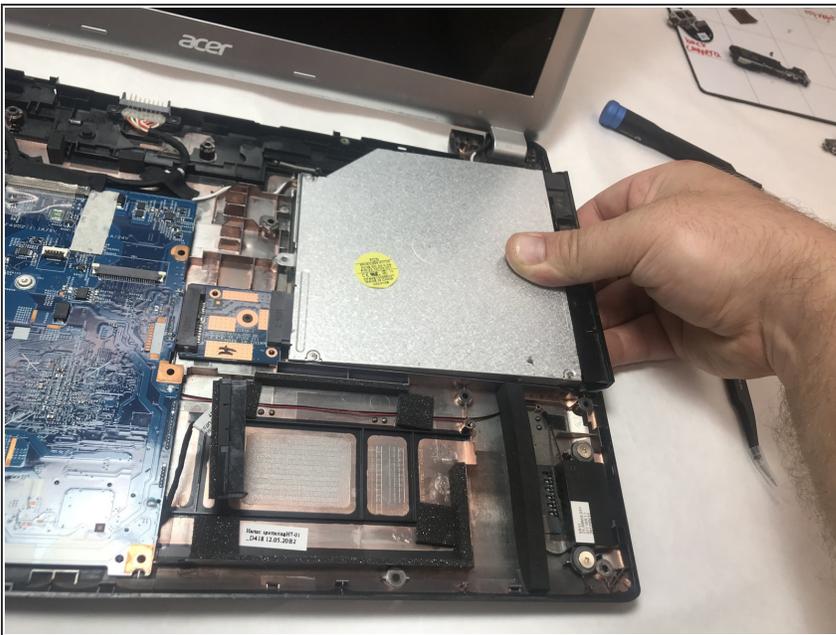


- Lift and pull out the CD-ROM Drive.

Step 13

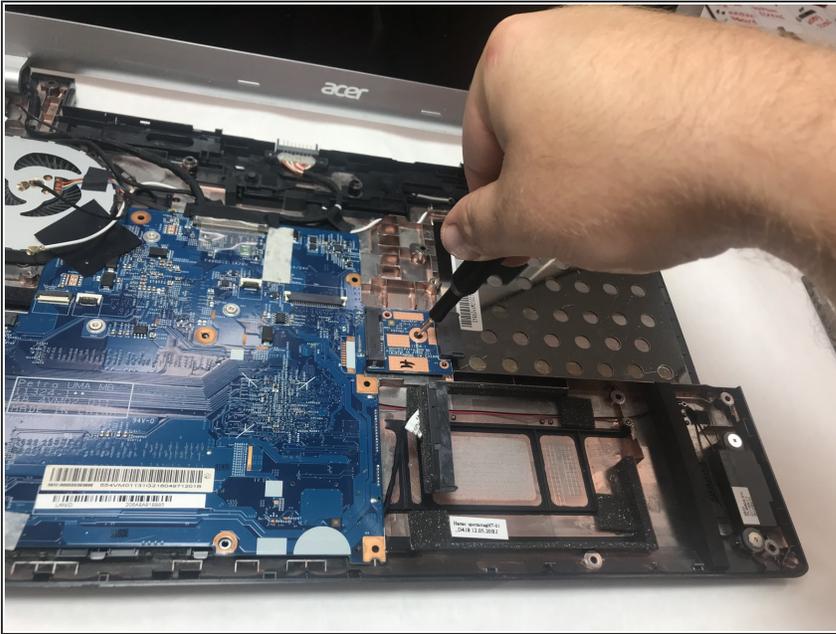



- Use #0 Phillips screw driver to remove the 2 x 3 mm Phillips #0 screw holding down CD-ROM connector.

Step 14

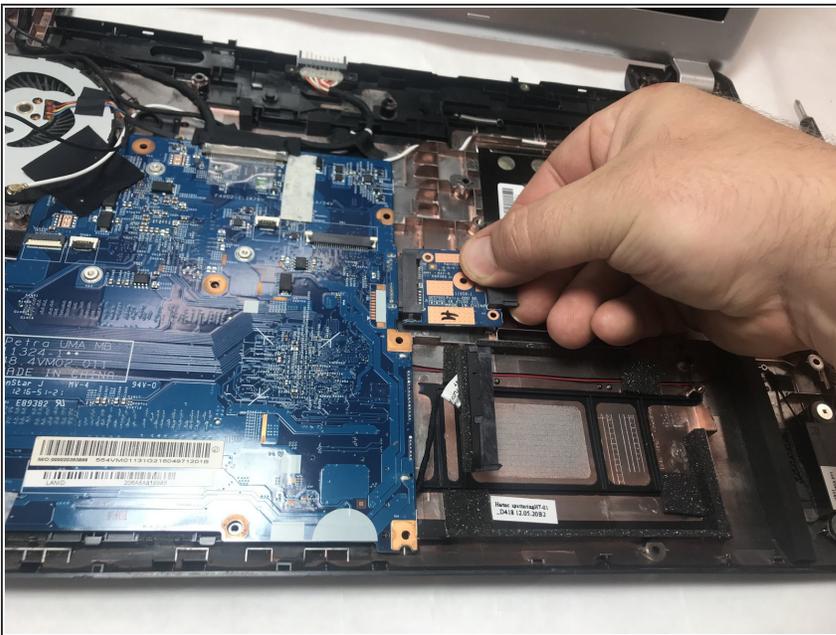


- Pull out the CD-ROM Drive connector.

Step 15

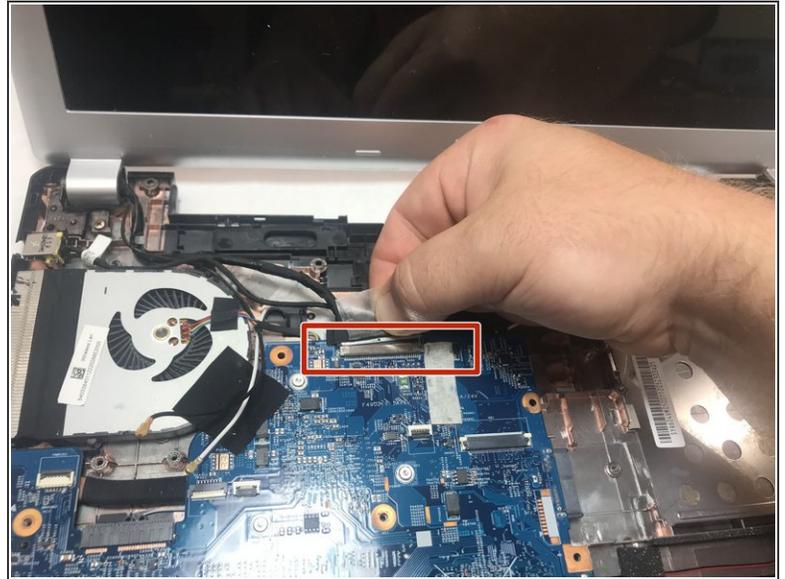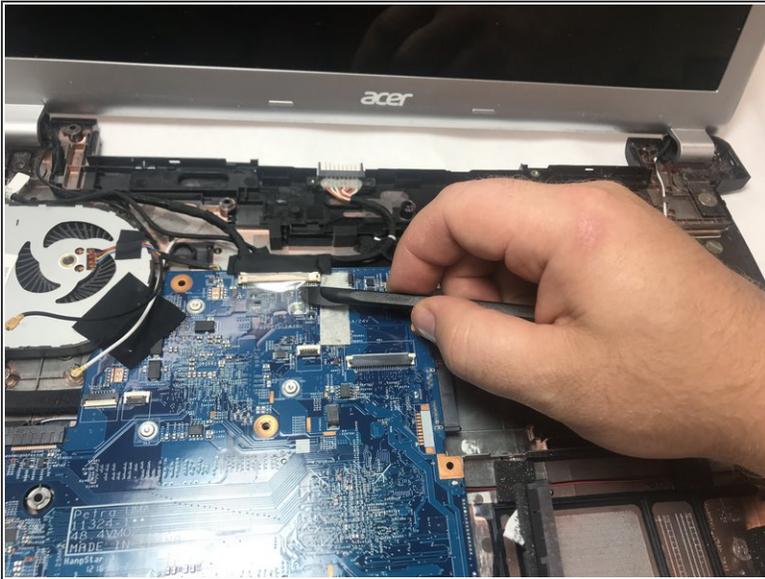

- Use Tweezers to remove the tape covering the display cable connector.
- Gently disconnect the display cable connector.

Step 16

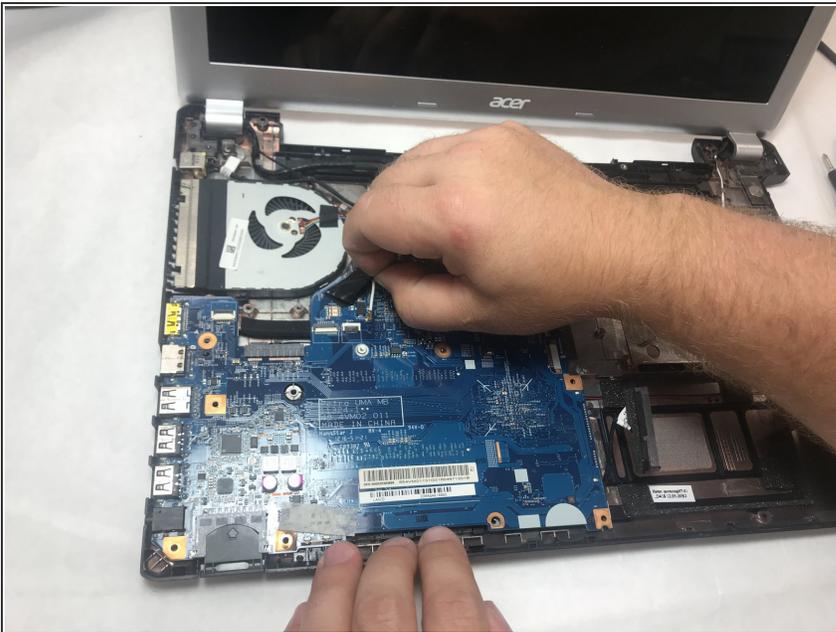


- Gently peel back the black cloth tape holding the wires in place.

Step 17




- Gently lift Motherboard.
- ⚠ Do not remove yet. There are some connections that need to be disconnected.

Step 18

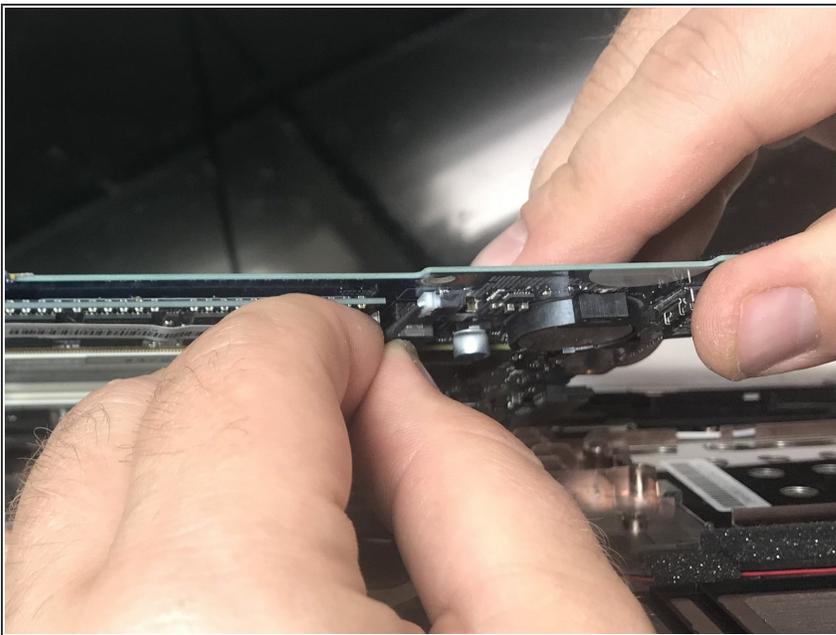

- Gently remove the connector underneath the Motherboard.

Step 19

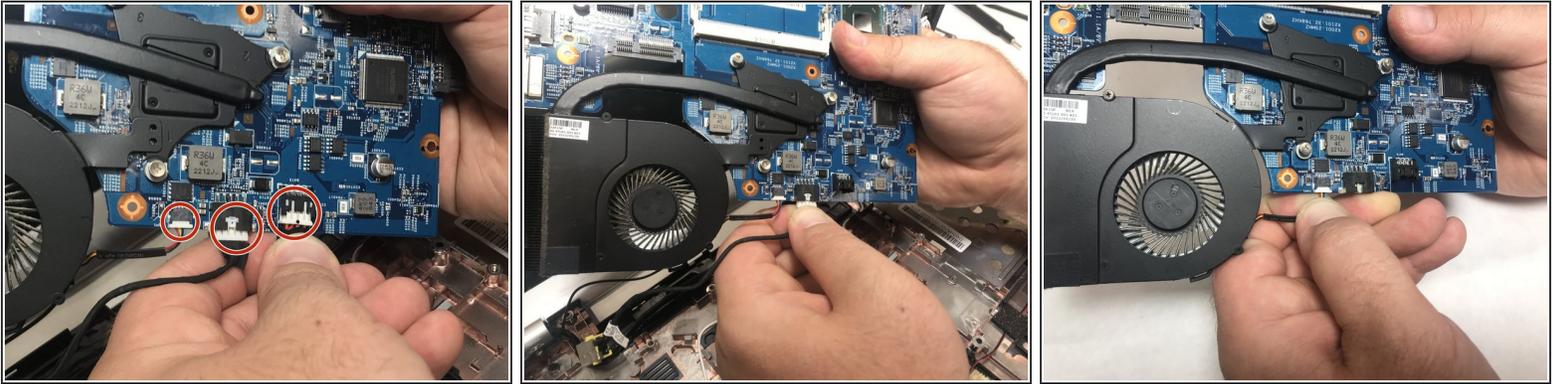


- Gently disconnect the three connectors attached to the Motherboard.

Step 20



- Use #0 Philips screw driver to unscrew the three 2.5 mm x 4 mm screws connecting the CPU fan to the Motherboard.

Step 21

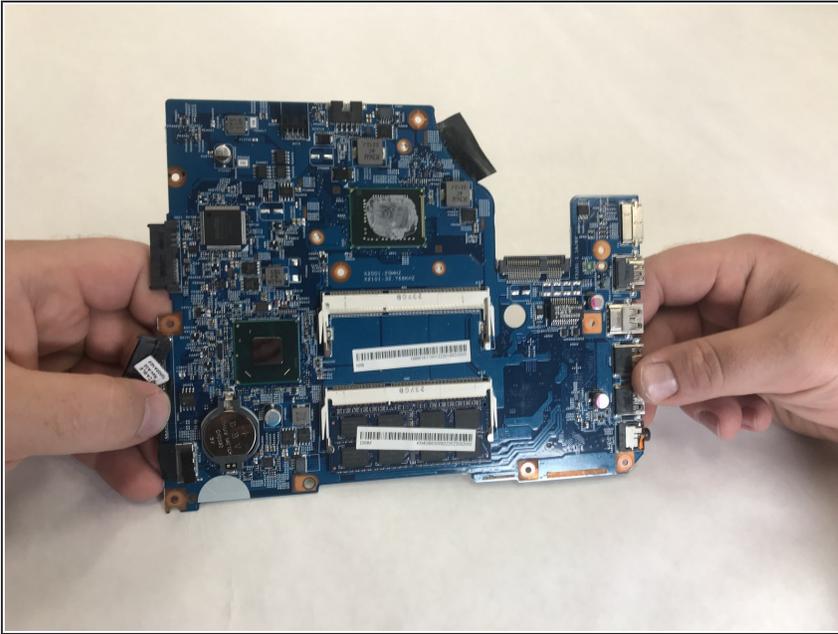

- The motherboard is ready to be replaced.
- Attach the CPU fan to the new motherboard during reassembling.

To reassemble your device, follow these instructions in reverse order.